

Beyond X™

Susol Compact ACB

Compact Air Circuit Breakers 1600A



LS ELECTRIC


Compact ACB 1600A

Contents

Features 5
Switchgear 6
Circuit breaker ratings 9
Connection 16
Accessories 18
External configuration 20
Ordering 22
Trip relay 26
Accessories 48
Control circuit diagram 74
Dimensions 76
Technical information 88

Change low voltage switchgears!

Another evolution of size,
cost and performance for
low voltage power circuit breakers!

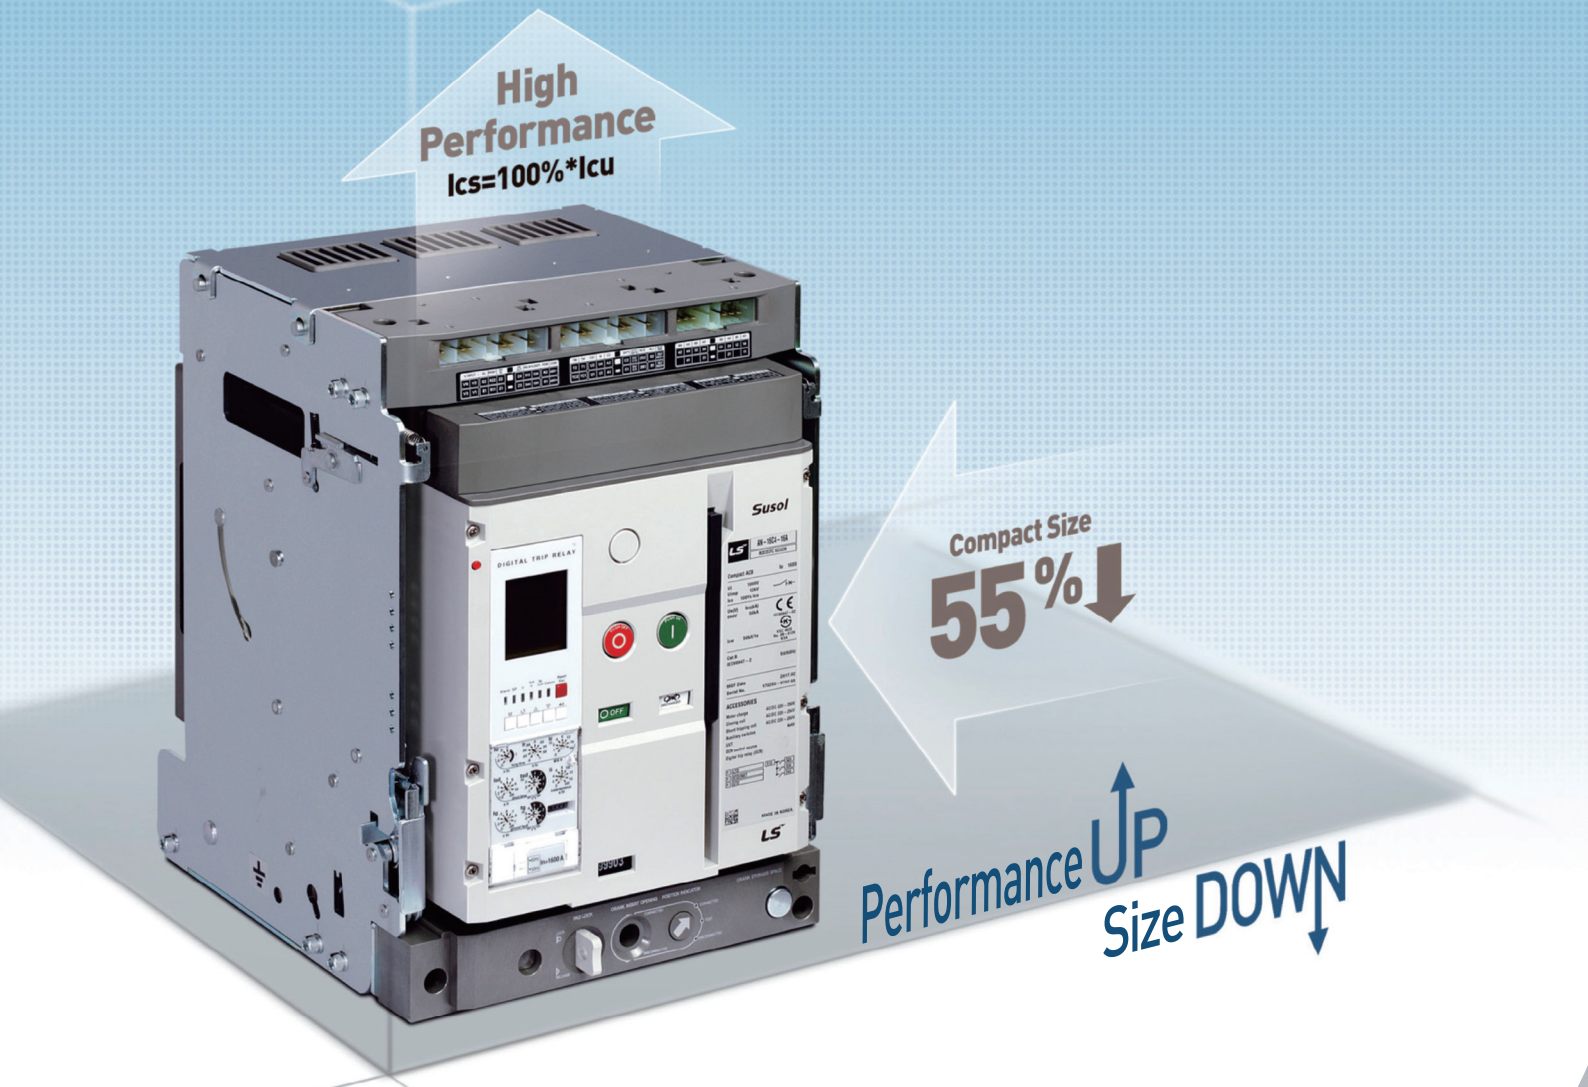

Susol Super Solution
Compact ACB 1600A

- Cat.A (Current limiting type) 150kA/415V
- Cat.B (General type) 50kA/690V, Icw = 50kA/1sec (30kA/3sec)
  40kA/800V, Icw = 40kA/1sec


LS ELECTRIC

Compact ACB 1600A



Susol

Selectivity Category

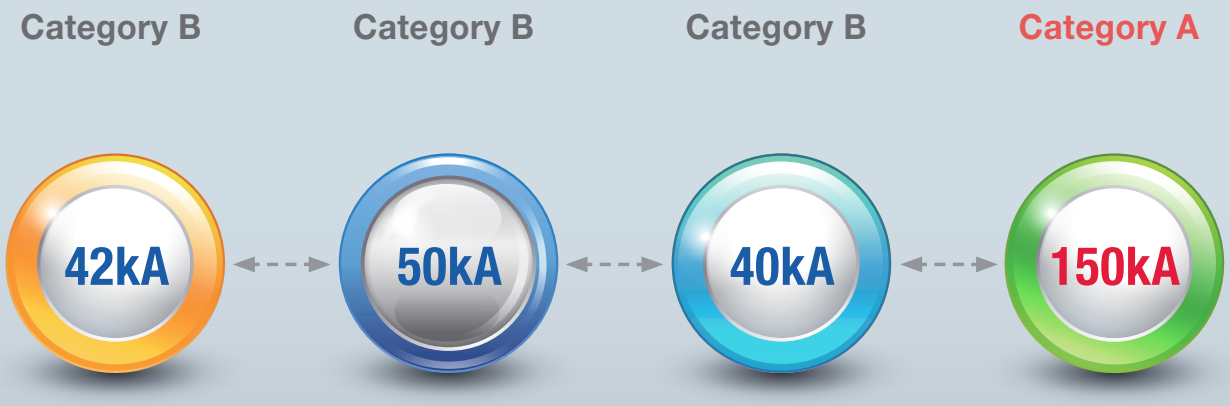


AN type	AH type	AW type	AR type
AN-08: 800AF	AH-08: 800AF	AW-08: 800AF	AR-08: 800AF
AN-16: 1600AF	AH-16: 1600AF	AW-16: 1600AF	AR-10: 1000AF
Ics = 100% * Icu = 42kA/690Vac	Ics = 100% * Icu = 50kA/690Vac	Ics=100% * Icu = 40kA/800Vac	Ics = 100% * Icu = 150kA/415Vac

Features

- Significantly reduced size compared to existing products ...55%
- Category A breaker (AR type):
  - Rated current 400A~1000A, breaking capacity 150kA/415Vac, Ics = 100% * Icu■
- Category B breaker (AH, AN type):
  - Rated current 400A~1600A, breaking capacity 50kA/690Vac, Ics=100%*Icu
  - Rated short-time current(Icw): 50kA/1s (Cat.B)
- Category B breaker (AW type):■
  - Rated current 400A~1600A, breaking capacity 40kA/800Vac, Ics=100%*Icu
  - Rated short-time current(Icw): 40kA/1s (Cat.B)
- Operation durability without maintenance: 12500 operations (Cat.B), 5000 operations (Cat.A)■
- Rating Plug application: Easy to change rated current without CT replacement■
- Various control power sources■
- Various accessories■
- Application Standards and Certification: IEC 60947-2 (DEKRA CB certification), GB 14048.2 (CCC certification)

Compact ACB switchgear

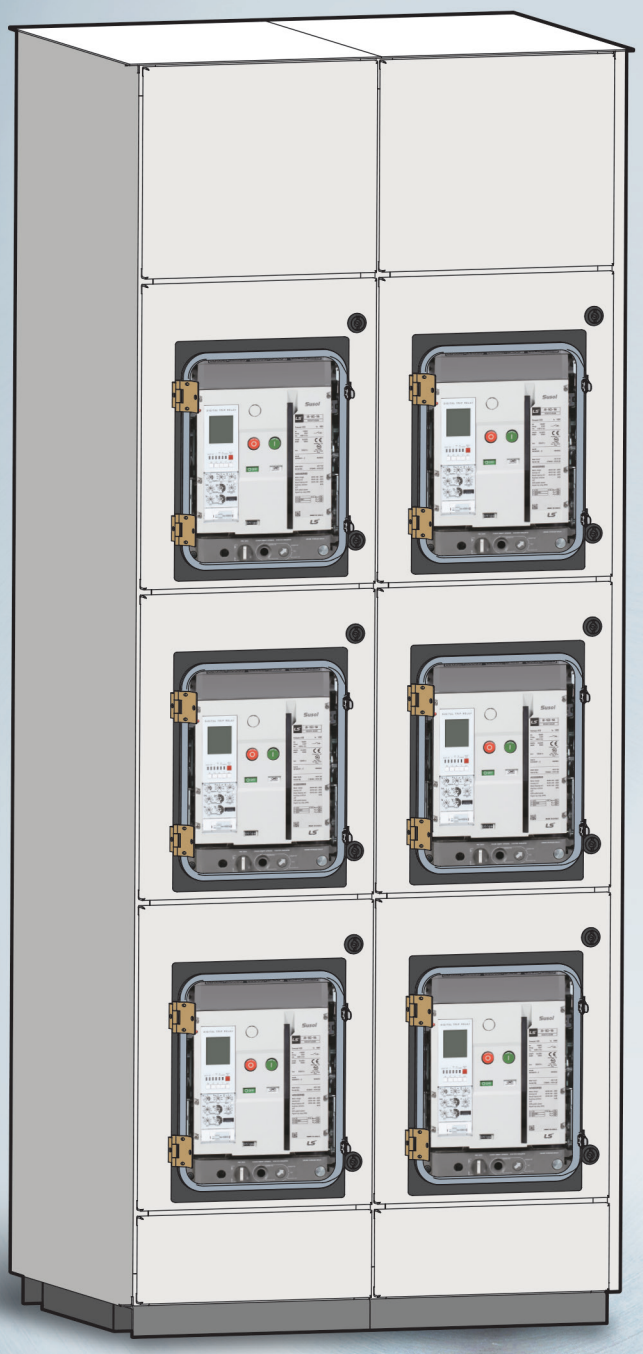

Reduction of size and weight of switchgears

- Easy transportation and handling■
- Reduced raw material usage■
- Reduced installation space

Compact size

55%

Thanks to the reduced size by 55% it is easy to handle the breaker as well as reducing the space and raw materials in the switchgear fabrication.


Compact type

Unit (mm)

E-frame ACB




C-frame(Compact) ACB

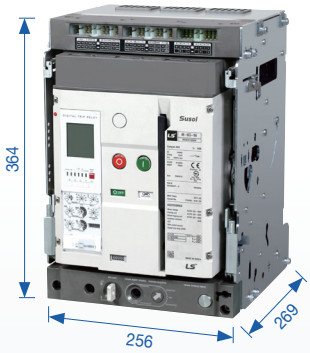

3-high



4-high

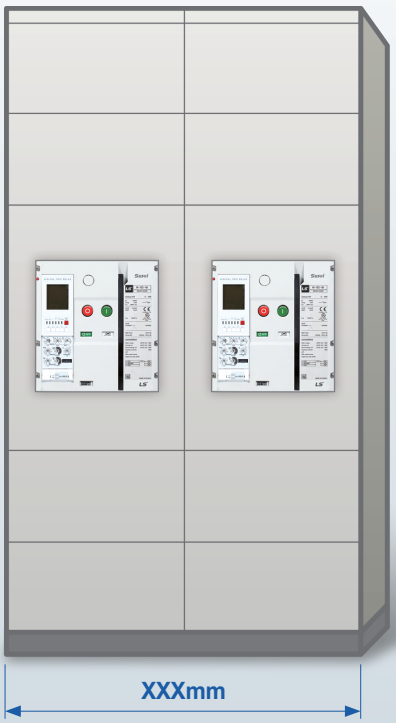

Compact ACB



AN – **16** **C** **3** **10** **J**

Category B	
AN	42kA/690V
AH	50kA/690V

AF	
08	800AF
16	1600AF

Phase array	
C	(N)RST
V	RST(N)

No. of pole	
3	3P
4	4P

Rated current	
00	Without OCR & CT
04	400A
⋮	⋮
16	1600A

Installation & Connection	
withdrawable type	
A	Automatic connection
J	Manual Connection
Fixed type	
H	Horizontal type
V	Vertical type
M	Upper-Horizontal / Lower-Vertical type
N	Upper-Vertical / Lower-Horizontal type
P	Plane type
Z	Plane spread type
R	Spread type
T	Plane vertical type
X	Cable Lug type

Category A	
AR	150kA/415V

AF	
08	800AF
10	1000AF

Rated current	
00	Without OCR & CT
04	400A
⋮	⋮
10	1000A

Circuit breaker ratings



Common characteristics									
Number of poles	(P)			3P/4P					
Frequency	(Hz)			50/60Hz					
Rated operational voltage	(V, Ue)			690V [1]					
Rated insulation voltage	(V, Ui)			1000V					
Rated impulse withstand voltage	(kV, Uimp)			12kV					
Circuit breaker as per IEC60947-2									
Type				AN/AH/AR-C					
Description				AN-08C	AN-16C	AH-08C	AH-16C	AR-08C	AR-10C
Ampere Frame	(AF)			800	1600	800	1600	800	1000
Rated current (In Max.) at 40℃	(A)			400	-	400	-	400	-
	(A)			630	-	630	-	630	-
	(A)			800	800	800	800	800	800
	(A)			-	1000	-	1000	-	1000
	(A)			-	1250	-	1250	-	-
	(A)			-	1600	-	1600	-	-
Rated current of neutral pole	(A)			100%					
Rated breaking capacity (Icu)	(kA)	IEC60947-2	AC 690V/600V/550V	42		50		-	
			AC 500V/480V/460V	42		50		130 [2]	
			AC 415V/380V/220V	50		60		150	
Rated service breaking capacity (Ics)	(kA,%×Icu)			100%					
Rated making capacity (Icm)	(kA)	IEC60947-2	AC 690V/600V/550V	88.2		105		-	
			AC 500V/480V/460V	88.2		105		286 [3]	
			AC 415V/380V/220V	105		132		330	
Rated Short-time capacity (Icw)	(kA)		1sec/3sec	42/25		50/30		10 [4]	
Operating time (t)	(ms)		Total breaking time	Less than 25ms under Icw/Less than 75ms over Icw				9ms under	
			Closing time	80ms under					
Common mechanical and electrical life cycle									
Life cycle	(time)		Mechanical	12,500				5,000	
			Electrical	6,000				3,000	
Common dimension and weight									
Weight	(kg)	Draw-out type (3P/4P)		22/26					
		Fixed type (3P/4P)		16/19.5					
Dimension	(mm)	Draw-out type	3P	W: 256 D: 274.5 [5] H: 364.3					
			4P	W: 326 D: 274.5 [5] H: 364.3					
		Fixed type	3P	W: 272.4 D: 198.5 [5] H: 322					
			4P	W: 342.4 D: 198.5 [5] H: 322					

1) 690V at AN, AH type and 500V at AR type. 2) 130kA/460V, 100kA/500V
3) 220kA at 480/500V, 286kA at 440/460V 4) 0.5sec
5) Exclude terminal length

Compact DSU



DH – **16** **C** **3** **00** **J**

DH
Switch-disconnector

AF	
08	800AF
10	1000AF
13	1250AF
16	1600AF

Phase array	
C	(N) RST
V	RST (N)

No. of pole	
3	3P
4	4P

Rated current	
00	Without OCR & CT

Installation & Connection	
withdrawable type	
A	Automatic connection
J	Manual Connection
Fixed type	
H	Horizontal type
V	Vertical type
M	Upper-Horizontal / Lower-Vertical type
N	Upper-Vertical / Lower-Horizontal type
P	Plane type
Z	Plane spread type
R	Spread type
T	Plane vertical type
X	Cable Lug type

Switch-disconnectors ratings



Common characteristics						
Number of poles	(P)		3P/4P			
Frequency	(Hz)		50/60Hz			
Rated operational voltage	(V, Ue)		690V			
Rated insulation voltage	(V, Ui)		1000V			
Rated impulse withstand voltage	(kV, Uimp)		12kV			
Switch-disconnectors as per IEC60947-3						
Type			DH-C			
Description			DH-08C	DH-10C	DH-13C	DH-16C
Ampere Frame	(AF)		800	1000	1250	1600
Rated operational current at 40℃	(A, Ie)		800	1000	1250	1600
Rated current of neutral pole	(%)		100	100	100	100
Rated making capacity (Icm)	(kA)		105			
Rated Short-time capacity (Icw)	(kA)	1sec	50			
Operating time (t)	(ms)	Total opening time	Less than 25ms under Icw/Less than 75ms over Icw			
		Closing time	80ms under			
Common Mechanical and Electrical Life Cycle						
Life cycle	(time)	Mechanical	12,500			
		Electrical	5,000			
Common Demension and Weight						
Weight (3P/4P)	(kg)	Draw-out type (3P/4P)	22/26			
		Fixed type (3P/4P)	16/19.5			
Dimension (3P/4P)	(mm)	Draw-out type	H : 364.3 D : 274.5	W (3P/4P)	256/326	
		Fixed type	H : 322 D : 198.5	W (3P/4P)	272.4/342.4	

Compact ACB up to 800V



AW — **16** **C** **3** **10** **J**

Category B	
AW	40kA/800V

AF	
08	800AF
16	1600AF

Phase array	
C	(N) RST
V	RST (N)

No. of pole	
3	3P
4	4P

Rated current	
00	Without OCR & CT
04	400A
⋮	⋮
16	1600A

Installation & Connection	
withdrawable type	
A	Automatic connection
J	Manual Connection
Fixed type	
H	Horizontal type
V	Vertical type
M	Upper-Horizontal / Lower-Vertical type
N	Upper-Vertical / Lower-Horizontal type
P	Plane type
Z	Plane spread type
R	Spread type
T	Plane vertical type
X	Cable Lug type

Circuit breaker ratings






Characteristics					
Number of poles			(P)	3 / 4	
Rated operational voltage (Ue)			(Vac)	~ 800	
Rated insulation voltage (Ui)			(V)	1000	
Rated impulse withstand voltage (Uimp)			(kV)	12kV	
Version				Fixed / Withdrawable	
Suitability for isolation					
Degree of pollution	IEC60661-1			3	
CB certification according to IEC 60947-2					
Type				AW-C	
Description				AW-08C	AW-16C
Ampere Frame			(AF)	800	1600
Rated current (In max)			(A)	400 630 800	800 1000 1250 1600
Rated ultimate breaking capacity (Icu)	800V		(kA)	40	
Rated serivce breaking capacity (Ics)			(% Icu)	100	
Rated short-timewithstand current (Icw)	1s		(kA)	40	
	3s		(kA)	40	
Rated making capacity (Icm)			(%)	84	
Selectivity category (according to IEC 60947-2)				B	
Operation time (ms)	Total Breaking time	< Icw		max. 75	
		≥ Icw		max. 25	
	Closing time			max. 80	
Mechanical and Electrical Life cycle					
Endurance (times) (Without maintenance)	Mechanical			12,500	
	Electrical			500	
Dimension and Weight					
Weight	Draw-out (3P/4P)		(kg)	22/26	
	Fixed (3P/4P)		(kg)	16/19.5	
External Dimensions (H×W×D)	Draw-out	3P	(mm)	W: 256 D: 274.5 [1] H: 364.3	
		4P	(mm)	W: 326 D: 274.5 [1] H: 364.3	
	Fixed	3P	(mm)	W: 272.4 D: 198.5 [1] H: 322	
		4P	(mm)	W: 342.4 D: 198.5 [1] H: 322	

1) Exclude terminal length
* AW-08/16C are applicable for IT system

Trip Relay





Rating Plug

Rating Plug for selection of rated current and frequency

Rating Plug enables the changing rated current(In) without CT replacement

- Rating Plug for 800AF: 400, 600, 630, 800A (4 types)
- Rating Plug for 1600AF: 800, 1000, 1200, 1250, 1600A (5 types)

Frequency selection switch: set to 50Hz or 60Hz

Trip relay series

Trip relays are classified according to their usages and functions to maximize customers' satisfaction.



N Type (Normal)

- Current protection
- L/S/I/G/Thermal
- Self power
- RTC timer mounted
- Fault information (LED)

A Type (Ammeter)

- Current Meter + Current protection + DO control + Communication
- L/S/I/G
- Thermal
- ZSI (Protective coordination)
- Remote reset
- Modbus/RS-485
- Profibus-DP
- Self power
- AC/DC 100~250V
- DC 24~60V
- RTC timer mounted
- Recording (10EA)

P Type (Power Meter)

- A type + Power Meter + Voltage / Frequency / Unbalance protection
- L/S/I/G
- Thermal (linear hot start)
- UV/OV/OF/UF/rP/Vun/Iun
- Measurement: V/A/W/Wh/F/PF
- ZSI (Protective coordination)
- Remote Reset
- Modbus/RS-485
- Profibus-DP
- AC/DC 100~250V
- DC 24~60V
- RTC timer mounted
- Event recording (256EA)
- Fault recording (256EA)

S Type (Supreme Meter)

- P type + Harmonics analysis (63 th) + Fault wave recording

Connection



Various installation methods

Rear Connection



Vertical type, V



Horizontal type, H




Spreader type, R



Mixed type, M



Mixed type, N

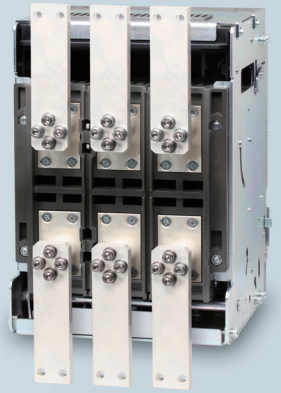

Flat type, P


Front Connection



Spread type, Z



Vertical type, T

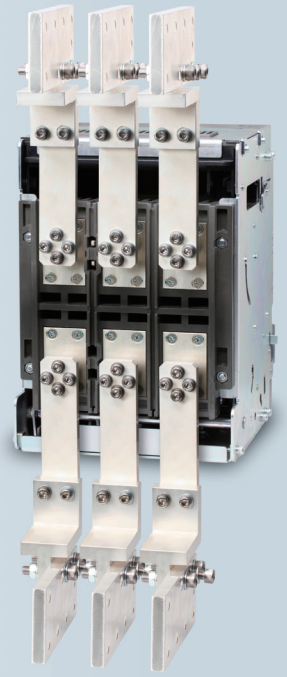

Cable lug type, X

- The Front connection type is suitable for the narrow-depth panels.
- The connection can be modified between vertical type and horizontal type by rotating the terminals through 90 degrees.

Accessories

Main body


Miss Insertion Preventing Device (MIP)


Auxiliary Switch (FX)


Ready to Close switch (RCS)


Shunt Coil (SHT)


Closing Coil (CC)


Under Voltage Trip Device (UVT)


Manual Reset Button (MRB)


Key Lock (K1)


Trip Relay (OCR)



Rating plug




Counter (C)



ON/OFF Button Padlock (B)


Motor (M)


Door frame (DF)

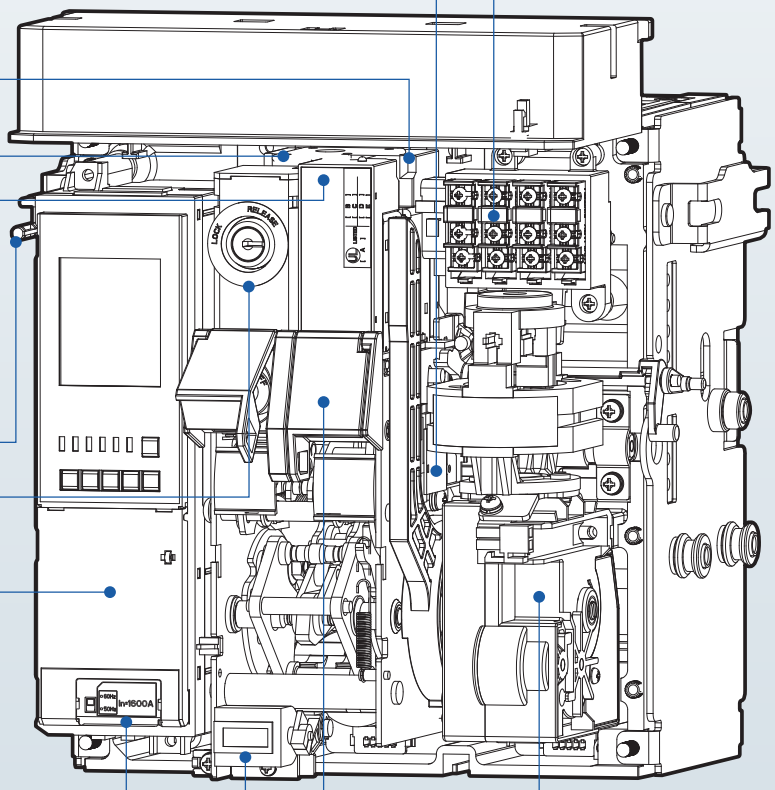

Cradle

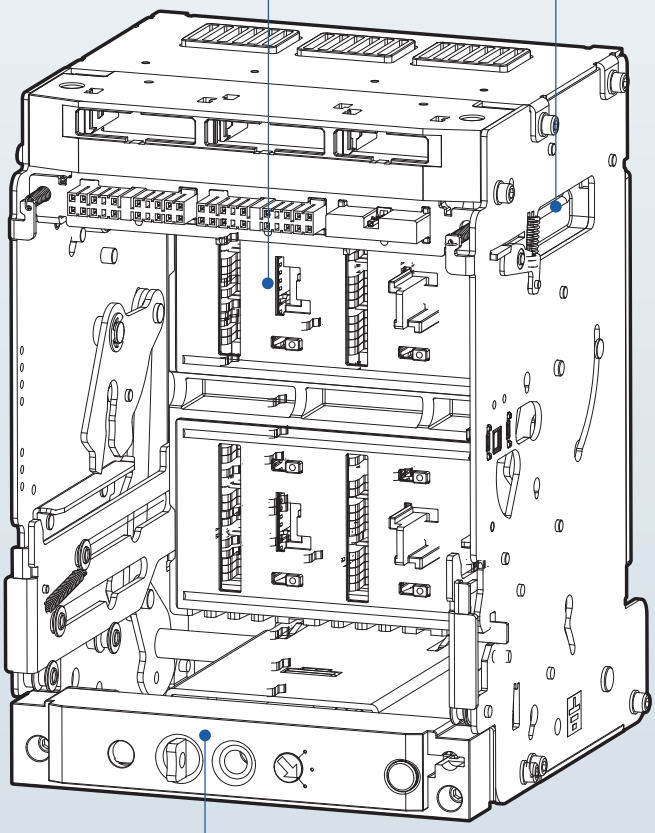

Miss Insertion Preventing Device (MIP)



Condensor Trip Device (CTD)




Safety Shutter (ST)



Lifting Hook (LH)



Interphase Barrier (IB)



UVT Time Delay Controller (UDC)



Remote I/O Unit (RCO)



Cell SW (CEL)



Door Interlock (DI)



Mechanical Interlock (MI)



Mechanical Operated Cell SW (MOC)



Racking Interlock & Position Lock (RI)



Door Frame (DF)



Dust Cover (DC)



OCR Tester (OT)



External configuration

Draw-out (Main body)



Marking




- Ui: Rated insulation voltage
- Uimp: Impulse withstand voltage
- Ue: Rated operational voltage (AC base)
- Icu: Ultimate breaking capacity
- Ics: Service breaking capacity
- Icw: Short time withstand capacity
- Icm: Rated making capacity
- MFG. Date: Manufacturing date

- Motor charge
- Closing coil
- Shunt tripping coil

Control power and terminal No.

- Auxiliary switches: Contact specification and terminal No.
- Under voltage trip: UVT terminal No.
- OCR control source: Trip relay control power
- Alarm switch: Alarm and terminal No.
- Digital trip relay: Switching diagram
- Z.S.I: Input/Output terminal No.
- Reset: LED/LCD reset
- Communication: Communication and terminal No.
- Voltage module: Phase voltage and symbol
- Earth/Leakage: Ground fault / Earth leakage input terminal No.

Draw-out (Cradle)

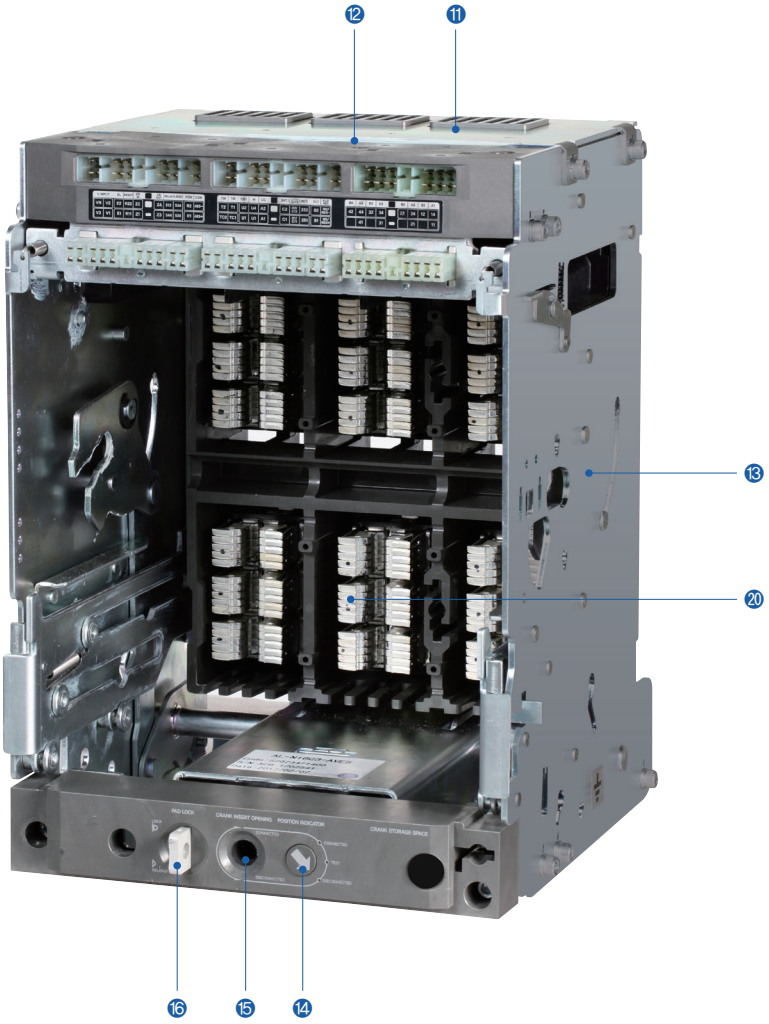

Terms

1. Trip relay
2. Counter
3. OFF button
4. ON button
5. Series name
6. Charge handle
7. Name plate
8. Charge/Discharge indicator
9. ON/OFF indicator
10. Company logo
11. Arc cover (Zero Arc Space)
12. Safety control cover
13. Cradle
14. Position indicator
15. Handle inserting hole
16. Pad lock button
17. Arc chute
18. Front cover
19. Rating Plug
20. Cradle finger

Ordering

Main body



Air circuit breaker
AN/AH/AW
AR
DH Switch-disconnector

Ampere frame (CT Spec.)	
08	800AF
16	1600AF
08	800AF
10	1000AF
08	800AF
10	1000AF
13	1250AF
16	1600AF

Frame sizes & phase array	
C	Standard (N) RST
V	Reverse phase RST (N)
C	Standard (N) RST
V	Reverse phase RST (N)

Number of poles	
3	3P (C)
4	4P (C, V)
3	3P (C)
4	4P (C, V)

Rated current	
00	None
04	400A
06	630A
08	800A
10	1000A
13	1250A
16	1600A
00	None
04	400A
06	630A
08	800A
10	1000A
00	None

Installation & Connection	
withdrawable type	
A	Automatic connection
J	Manual connetion
Fixed type	
H	Horizontal type
V	Vertical type
M	Upper-Horizontal / Lower-Vertical type
N	Upper-Vertical / Lower-Horizontal type
P*	Flat type
Z**	Flat spread type
R***	Spread type
T**	Flat vertical type
X**	Cable lug type

* Ampare frame of AR must be selected up to 1000AF.
* A rated current of AR must be selected up to 1000A.
* Installation method is common to all models
** When using Z, T and X type, please purchase adapter kit separately after ordering P type product (Refer to fixed adapter kit table)
*** When using R type, purchase purchase adapter kit separately after ordering H type product (Refer to fixed adapter kit table)

■ Fixed type Adaptor Kit

Number	Part Name	Product Name	How to install	Pole
62363471509	Terminal Kit Ass'y	SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD_FIXED,AN,AH,AR-C3	Z	3
62363471510		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD_FIXED,AN.AH,AR-C4	Z	4
62363471511		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD/VER_FIXED,AN,AH,AR-C3	T	3
62363471512		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD/VER_FIXED,AN,AH,AR-C4	T	4
62363471513		SUB ASS'Y,ADAPTER KIT ASS'Y_LUG_FIXED,AN,AH,AR-C3	X	3
62363471514		SUB ASS'Y,ADAPTER KIT ASS'Y_LUG_FIXED,AN,AH,AR-C4	X	4
62363471515		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD,AN,AH-C3	R	3
62363471516		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD,AN.AH-C4	R	4

★ Ordering a P type for Fixed type requires a separate order for Arc Screen (for AH/AR/AW type)

■ Arc Screen Order Code for Fixed P type

Number	Part Name	Product Name
72313471504	Arc Screen (Fixed P type only) 3P	TOTAL ASS'Y,ARC SCREEN,3P P TYPE,AN,AH,AR-C
72313471506	Arc Screen (Fixed P type only) 4P	TOTAL ASS'Y,ARC SCREEN,4P P TYPE,AN,AH,AR-C

M1

Motor rated voltage	
MA	Without Motor
M1	AC/DC 100V~130V
M2	AC/DC 200V~250V
M3	DC 125V
M4	DC 24V~30V
M5	DC 48V~60V
M6	AC 380V~415V
M7	AC 440V~480V
M8	AC 48V

D1

Closing coil rated voltage	
D0	Without Closing coil
D1	AC/DC 100V~130V
D2	AC/DC 200V~250V
D3	DC 125V
D4	DC 24V~30V
D5	DC 48V~60V
D6	AC 380V~480V
D7	AC 48V

D1

Shunt coil rated voltage	
D0	Without Shunt coil
D1	AC/DC 100V~130V
D2	AC/DC 200V~250V
D3	DC 125V
D4	DC 24V~30V
D5	DC 48V~60V
D6	AC 380V~480V
D7	AC 48V

FX

Aux.contact & charging types	
FX	Standard OFF-Charge 4C
FC	Standard ON-Charge 4C
LC	Standard ON-Charge 3C TCS
PX	Standard 4C with “OFF” charging type _ low-level contacts
PC	Standard 4C with “ON” charging type _ low-level contacts

* TCS (Trip Circuit Supervision)
* Auxiliary switch for micro load (Order No. 83011176209)

NG0

Trip relay
Refer to 21page

U1

UVT coil rated voltage	
U0	Without UVT coil
U1	AC/DC 100V~130V
U2	AC/DC 200V~250V
U3	DC 125V
U4	DC 24V~30V
U5	DC 48V~60V
U6	AC 380V~480V
U7	AC 48V

* UVT Delay module is available over AC / DC 48V

AL

Accessories		
Code	Description	Option description
AL	AL1 + MRB	
A1	AL1 + MRB + RES(AC110~130V) *AC Only	
A2	AL1 + AL2 + MRB	
A3	AL1 + MRB + RES(DC 110~125V) *DC Only	
A4	AL1 + MRB + RES(AC 200~250V) *AC Only	
A5	AL1 + MRB + Auto Reset	
A6	AL1 + AL2 + MRB + Auto Reset	
A7	AL1 + MRB + RES(DC 110~125V) + Auto Reset *DC Only	
A8	AL1 + MRB + RES(AC 200~250V) + Auto Reset *AC Only	
A9	AL1 + MRB + RES(AC 110~130V) + Auto Reset *AC Only	
C	C	Counter
B	B	On/Off Button lock
M	MI	Mechanical interlock
D	DI or MOC	Door Interlock or MOC (Mechanism operated cell switch)
K	K1	Key Lock
K2	K2	Key Interlock Set
R	RCS	Ready to Close switch
H1	SHT2 Note 2)	AC/DC 100~130V, Double Shunt coil
H2		AC/DC 200~250V, Double Shunt coil
H3		DC 125V, Double Shunt coil
H4		DC 24~30V, Double Shunt coil
H5		DC 48~60V, Double Shunt coil
H6		AC 380~480V, Double Shunt coil
H7		AC 48V, Double Shunt coil

Note 1) * If mixed option is more than 5, it is separated by mixed option code.
2) UVT & SHT2 can be not applicable together.

E01	A4 (AL1 + MRB + RES(AC200~250V))+C(Counter)+B(ON/OFF Button Lock) +K(Key Lock)+R(Ready to close switch)+M(Mechanicl Interlock)
E02	AL (AL1 + MRB)+K(Key Lock(OFF Lock))+R(Ready to close switch)+D(Door Interlock or MOC)+H1(AC/DC 100V ~ 130V, Double Shunt Coil)
E03	C(Counter)+B(ON/OFF Button Lock)+K2(Key Interlock Set)+R(Ready to close switch)
E04	A4(AL1 + MRB + RES(AC200~250V))+B(ON/OFF Button Lock)+K(Key Lock(OFF Lock))+M(Mechanical Interlock)
E05	A1(AL1+MRB+RES110~130V)+B(ON/OFF Button Lock)+K(Key Lock(OFF Lock))+R(Ready to close switch)+M(Mechanical Interlock)
E06	A2(AL1+AL2+MRB)+C(Counter)+K(Key Lock(OFF Lock))+R(Ready to close switch)

Ordering

Cradle

AL – H16C 3 – A H E S

Air circuit breaker	
LS ACB Cradle	
AL	Bottom operating cradle

Type & Ampare frame	
H16C	400~1600A

Number of poles	
3	3P
4	4P

Secondary connection type	
A	Auto connection

Installation & Connection	
H	Horizontal type
V	Vertical type
M	Upper-Horizontal/ Lower-Vertical type
N	Upper-Vertical/ Lower-Horizontal type
P**	Flat type
Z**	Flat spread type
R***	Spread type
T**	Flat vertical type
X**	Cable lug type

Arc cover	
S	with arc cover


Shtter	
E	without shutter
F	with shutter

Note1) All of the AW/AH/AN/AR type ACB bodies use 'AL-H16C' cradle in common.
** When using P, Z, T and X type, please purchase adapter kit separately after ordering P type product (Refer to fixed adapter kit table)
*** When using R type, purchase purchase adapter kit separately after ordering H type product (Refer to fixed adapter kit table)


2. Draw-out type Adaptor Kit (Cradle)

Number	Part Name	Product Name	How to install	Pole
62363471501	Terminal Kit Ass'y	SUB ASS'Y,ADAPTER KIT ASS'Y_FRONT,AN,AH-C3	P	3
62363471502		SUB ASS'Y,ADAPTER KIT ASS'Y_FRONT,AN,AH-C4	P	4
62363471503		SUB ASS'Y,ADAPTER KIT ASS'Y_FRONT_SPREAD,AN,AH-C3	Z	3
62363471504		SUB ASS'Y,ADAPTER KIT ASS'Y_FRONT_SPREAD,AN.AH-C4	Z	4
62363471505		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD/VER,AN,AH-C3	T	3
62363471506		SUB ASS'Y,ADAPTER KIT ASS'Y_SPREAD/VER,AN,AH-C4	T	4
62363471507		SUB ASS'Y,ADAPTER KIT ASS'Y_LUG,AN,AH-C3	X	3
62363471508		SUB ASS'Y,ADAPTER KIT ASS'Y_LUG,AN,AH-C4	X	4

Various installation methods

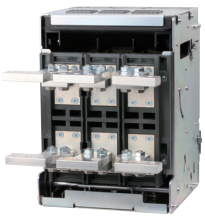Type	H	V	M	N	P
Form					
Type	**Z**	**R**	**T**	**X**	
Form					

Trip relay

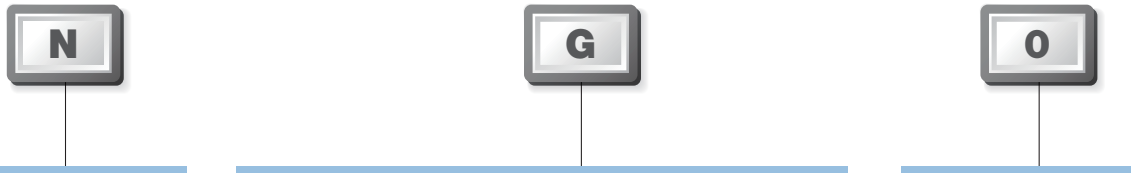

Trip relay type		Communication & protection		Control voltage & frequency	
0	Without trip relay	G	Ground fault (Residual earth fault protection), No communication	0	Self-Power, 60Hz
N	Normal		* L,S,I,G configuration as standard (with LED indicators)	5	Self-Power, 50Hz
A	Ammeter	G	Ground fault (Residual earth fault protection), No communication	0	Self-Power, 60Hz
		Z	Gruond fault (Extermal CT, Earth leakage below 30A)	1	AC/DC 110V~250V, 60Hz
		E	Ground fault (Extermal CT, Earth leakage over 30A)	2	DC 24V~60V, 60Hz
		C	Comm. + Ground fault (Residual earth fault protection)	5	Self-Power, 50Hz
		K	Comm. + Ground fault (Extermal CT, Earth leakage below 30A)	6	AC/DC 110V~250V, 50Hz
		X	Comm. + Ground fault (Extermal CT, Earth leakage over 30A)	7	DC 24V~60V, 50Hz
			* Comm. And output contacts DO NOT work under self-power condition. (AC0, AK0, AX0, AC5, AK5, AX5) * Communication and output contacts for L,S,I,G do not work except OCR LED without control power supply. - AG0, AG5, AZ0, AZ5, AE0, AE5 * Z, K: External CT - LS ZCT applied (fault current 0.5~30A, 1600AF) * E, X: External CT - Private ZCT applied (faullt current >30A)		
P	Power meter	C	Comm. + Ground fault (Residual earth fault protection)	1	AC/DC 110V~250V, 60Hz
		K	Comm. + Ground fault (Extermal CT, Earth leakage below 30A)	2	DC 24V~60V, 60Hz
		X	Comm. + Ground fault (Extermal CT, Earth leakage over 30A)	6	AC/DC 110V~250V, 50Hz
			* Communication functions are normal. (Function unavailable without control power supply) * Applicable to generator protection purpose * Voltage module of P type or more is basic. * K: External CT - LS ZCT applied (fault current 0.5~30A, 1600AF) * X: External CT - Private ZCT applied (faullt current >30A)	7	DC 24V~60V, 50Hz
S	Supreme meter	C	Comm. + Ground fault (Residual earth fault protection)	1	AC/DC 110V~250V, 60Hz
		K	Comm. + Ground fault (Extermal CT, Earth leakage below 30A)	2	DC 24V~60V, 60Hz
		X	Comm. + Earth leakage (Extermal CT, Earth leakage over 30A)	6	AC/DC 110V~250V, 50Hz
			* Communication functions are normal. (Function unavailable without control power supply) * Applicable to generator protection purpose * Voltage module of P type or more is basic. * K: External CT - LS ZCT applied (fault current 0.5~30A, 1600AF) * X: External CT - Private ZCT applied (faullt current >30A)	7	DC 24V~60V, 50Hz

Trip relay (OCR)

The trip relay of Compact ACB provides the additional protection functions for voltage, frequency, unbalance, and others in addition to main protection functions for over current, short-circuit, ground fault. It supports the advanced measurement functions for voltage, current, power, electric energy, harmonics, communication function, and others. Analog trip function interlocked with mechanism enhanced a durability of devices as well as the breaking capacity of ACB.
Zone selective interlocking function makes the protective coordination more simple and thermal memory can be applied to various loads.



Rating Plug for selection

Rating Plug enables the changing rated current(In) without CT replacement

- **800AF**
  In: 400-600-630-800A (4 types)
- **1600AF**
  In: 800-1000-1200-1250-1600A (5 types)

Frequency selection switch: set to 50Hz or 60Hz

Trip relay types

Classification	N type	A type	P type	S type
Externals				
Current protection	• L/S/I/G/Thermal	• L/S/I/G/Thermal • ZSI (Protective coordination)	• L/S/I/G • ZSI (Protective coordination) • Thermal (Linear Hot Start)	• L/S/I/G • ZSI (Protective coordination) • Thermal (Linear Hot Start)
Other protection	-	• Earth leakage (Option)	• Earth leakage (Option) • Over/Under voltage • Over/Under frequency • Unbalance (Voltage/Current • Reverse power	• Earth leakage (Option) • Over/Under voltage • Over/Under frequency • Unbalance (Voltage/Current • Reverse power
Measurement function	-	• Current (R/S/T/N)	• 3 Phase Voltage/Current RMS/Vector • Power (P, Q, S), PF (3-Phase) • Energy (Positive/Negative) • Frequency, Demand	• 3 Phase Voltage/Current RMS/Vector • Power (P, Q, S), PF (3-Phase) • Energy (Positive/Negative) • Frequency, Demand • Voltage/Current harmonics (1st~63th) • 3 Phase Waveforms • THD, TDD, K–Factor
Fine adjustment	-	-	• Fine adjustment for long/short time delay/instantaneous/ ground	• Fine adjustment for long/short time delay/instantaneous/ ground
Digital Output		• 3DO (Fixed) • L, S/I, G Alarm	• 3DO (Programmable) • Trip, Alarm, General	• 3DO (Programmable) • Trip, Alarm, General
IDMTL setting	-	-	• Compliance with IEC60255-3: SIT, VIT, EIT, DT	• Compliance with IEC60255-3: SIT, VIT, EIT, DT
Communication	-	• Modbus/RS–485 • Profibus–DP	• Modbus/RS–485 • Profibus–DP	• Modbus/RS–485 • Profibus–DP
Power supply	• Self Power –Power source worksover 20% of load current.	• Self Power –Power source worksover 20% of load current. –External power source are required for comm. • AC/DC 100~250V • DC 24~60V	• AC/DC 100~250V • DC 24~60V • Basic protection function (L/S/I/G) is still under normal operation without control power.	• AC/DC 100~250V • DC 24~60V • Basic protection function (L/S/I/G) is still under normal operation without control power.
RTC Timer	• Available	• Available	• Available	• Available
LED for trip info.	• Long time delay • Short time delay/Instantaneous • Ground fault	• Long time delay • Short time delay/Instantaneous • Ground fault	• Long time delay • Short time delay/Instantaneous • Ground fault	• Long time delay • Short time delay/Instantaneous • Ground fault
Fault recording	-	• 10 records (Fault/Current/Date and Time)	• 256 records	• 256 records • Last fault wave form recording (3 Phase)
Event recording	-	-	• 256 records (Content, Status, Date)	• 256 records (Content, Status, Date)
Operating button	• Reset button	• Reset, Menu Up/Down, Left/Right, Enter	• Reset, Menu Up/Down, Left/Right, Enter	• Reset, Menu Up/Down, Left/Right, Enter

Each OCR type has Battery in itself.

1. Battery lifespan
   1) When turned off: 14~28years
   2) When using 1 LED consecutively or turned off: 7~14days


2. The recognizable range of OCR current
   1) 1Ø: When more 20% than rated current(In) (ratio to In regardless of Iu and Ir)
   2) 3Ø: When more 12% than rated current(In)

Trip relay


N type: 「Normal」type

■ Optimized protection function
■ OCR, OCGR function according IEC60947-2
■ Overload protection
– Long-time delay
– Thermal
■ Short-circuit protection
– Short-time delay/Instantaneous
– I²t On/Off optional (for short-time delay)
■ Ground fault protection
– I²t On/Off optional
■ Self Power

■ Rating Plug for selection of rated current and frequency
• Rating Plug type
– 800AF: 400, 600, 630, 800A (4 types)
– 1600AF: 800, 1000, 1200, 1250, 1600A (5 types)
• Frequency selection switch: set to 50Hz or 60Hz

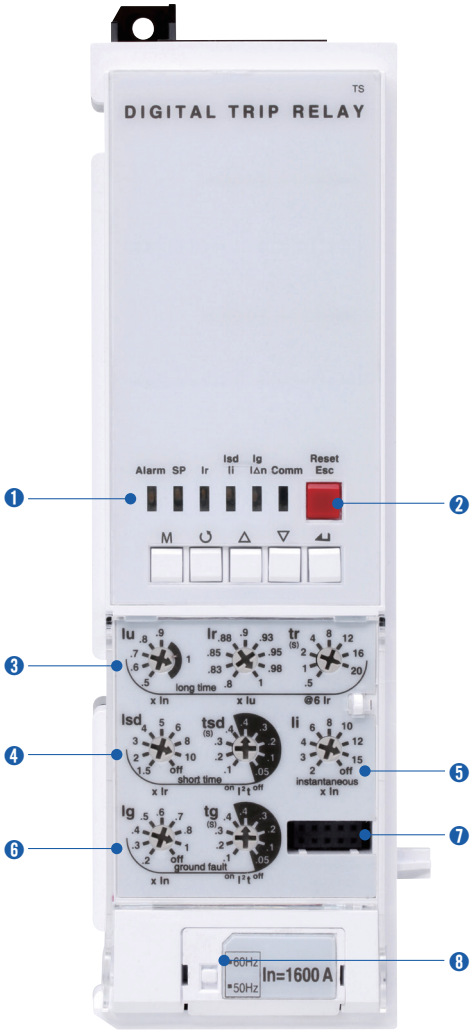


❶ LED: Indication of trip info. and overload state

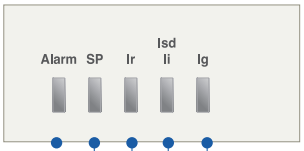


Ig: LED indicating ground-fault
Isd/Ii: LED indicating short-time or instantaneous tripping
Ir: LED indicating long-time delay
SP: Self-protection and battery test LED
Alarm: LED indicating an overload
(Turn on above 90%, Blink above 105%)

❷ Reset Key: Fault reset or battery check
❸ Iu, Ir: Long-time current setting, tr: Long-time tripping delay setting
❹ Isd: Short-time current setting, tsd: Short-time tripping delay setting
❺ Ii: Instantaneous current setting
❻ Ig: Ground fault current setting, tg: Ground fault tripping delay setting
❼ Test terminal: OCR test terminal (Connected with OCR tester)
❽ Rating Plug: Rated current (In) and frequency selection

Protection

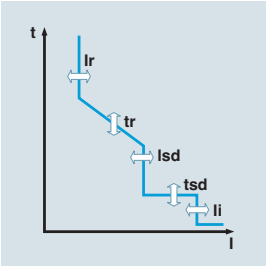

Long time											
Current setting (A)	Iu = In×...		0.5	0.6	0.7	0.8	0.9	1.0			
	Ir = Iu×...		0.8	0.83	0.85	0.88	0.9	0.93	0.95	0.98	1.0
Time delay (s)	tr@(1.5×Ir)		12.5	25	50	100	200	300	400	500	
Accuracy: ±15% or	tr@(6.0×Ir)		0.5	1	2	4	8	12	16	20	
below 100ms	tr@(7.2×Ir)		0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	
Short time											
Current setting (A)	Isd = Ir×...	Cat. B	1.5	2	3	4	5	6	8	10	Off
Accuracy : ±10%		Cat. A	1.5	2	3	4	5	6	8	(Not set)	Off
Time delay (s)	tsd	I²t Off	0.05	0.1	0.2	0.3	0.4				
@ 10×Ir		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				
Instantaneous											
Current setting (A)	Ii = In×...		2	3	4	6	8	10	12	15	Off
Tripping time			below 50ms								
Ground fault											
Pick-up (A) Accuracy: ±10%(Ig>0.4In) ±20%(Ig≤0.4In)	Ig = In×...		0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
Time delay (s)	tg	I²t Off	0.05	0.1	0.2	0.3	0.4				
@10×Ir		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				

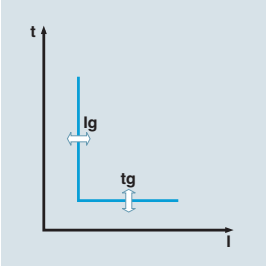

Trip relay

A type: 「Ammeter」 type

■ Overload protection
- – Long-time delay
- – Thermal

■ Short-circuit protection
- – Short-time delay/Instantaneous
- – I²t On/Off optional (for short-time delay)

■ Ground fault protection
- – I²t On/Off optional

■ Realization of protective coordination by ZSI (Zone Selective Interlocking)

■ High-performance and high-speed MCU built-in
- – Accurate measurement with tolerance of 1.0%


■ Fault recording
- – Records Max. up to 10 fault information about fault type, fault phase, fault data, occurrence time of fault

■ SBO (Select Before Operation)
- – High reliability for control and setting change method

■ 3 DO (Digital Output)

■ Communication
- – Modbus/RS485
- – Profibus–DP


■ Rating Plug for selection of rated current(In) and frequency
- • Rating Plug type
  - – 800AF: 400, 600, 630, 800A (4 types)
  - – 1600AF: 800, 1000, 1200, 1250, 1600A (5 types)
- • Frequency selection switch: set to 50Hz or 60Hz

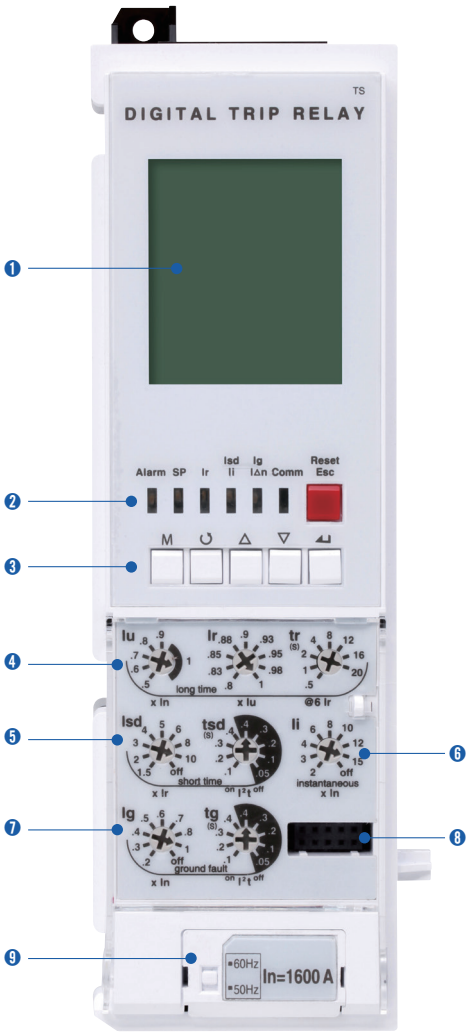

* When communication is flashing phone icon on the LCD.


❶ LCD: Indication of measurement and information

❷ LED: Indication of trip info. and overload state

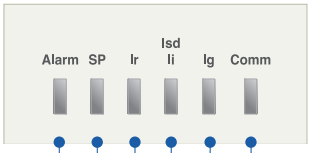

- Comm: LED indicating comm. state (Blink when running) *
- Ig: LED indicating ground-fault
- Isd/Ii: LED indicating short-time or instantaneous tripping
- Ir: LED indicating long-time delay
- SP: Self-protection and battery test LED
- Alarm: LED indicating an overload (Turn on above 90%, Blink above 105%)

❸ Key: Move to menu or reset

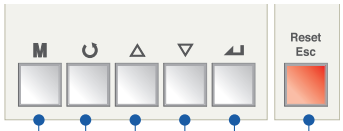

- Reset/ESC: Fault reset or ESC from menu
- Enter: Enter into secondary menu or setting input
- Up/Down: Move the cursor up/down on screen or increase/decrease a setting value
- Right/Left: Move the cursor or setting right/left on screen (Rotation)
- Menu: Menu display ↔ Measurement display

❹ Ir: Long-time current setting, tr: Long-time tripping delay setting

❺ Isd: Short-time current setting, tsd: Short-time tripping delay setting


❻ Ii: Instantaneous current setting

❼ Ig: Ground fault current setting, tg: Ground fault tripping delay setting


❽ Test terminal: OCR test terminal (Connected with OCR tester)

❾ Rating Plug: Rated current (In) and frequency selection

Protection

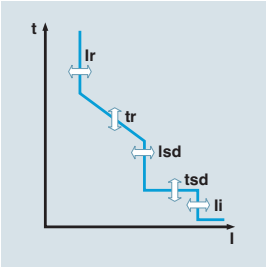

Long time											
Current setting (A)	Iu = In×...		0.5	0.6	0.7	0.8	0.9	1.0			
	Ir = Iu×...		0.8	0.83	0.85	0.88	0.9	0.93	0.95	0.98	1.0
Time delay (s)	tr@(1.5×Ir)		12.5	25	50	100	200	300	400	500	
Accuracy : ±15% or	tr@(6.0×Ir)		0.5	1	2	4	8	12	16	20	
below 100ms	tr@(7.2×Ir)		0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	
Short time											
Current setting (A)	Isd = Ir×...	Cat. B	1.5	2	3	4	5	6	8	10	Off
Accuracy : ±10%		Cat. A	1.5	2	3	4	5	6	8	(Not set)	Off
Time delay (s)	tsd	I²t Off	0.05	0.1	0.2	0.3	0.4				
@10×Ir		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				
Instantaneous											
Current setting (A)	Ii = In×...		2	3	4	6	8	10	12	15	Off
Tripping time			below 50ms								
Ground fault											
Pick-up (A) Accuracy: ±10%(Ig>0.4In) ±20%(Ig≤0.4In)	Ig = In×...		0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
Time delay (s)	tg	I²t Off	0.05	0.1	0.2	0.3	0.4				
@10×Ir		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				

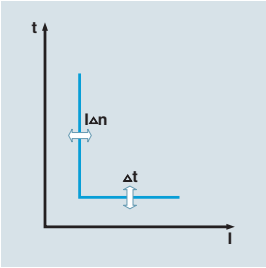


Earth leakage (Option)											
Current setting (A))	I△n		0.5	1	2	3	5	10	20	30	Off
Time delay (ms) Accuracy : ±15%	△t	Alarm Time (ms)	140	230	350	800	950				
		Trip Time (ms)	140	230	350	800					

Note) Unable to select ground fault and earth leakage, simultaneously

P type: 「Power meter」 type


- ■ Overload protection
  - – Long-time delay – Thermal
- ■ Short-circuit protection
  - – Short-time delay/Instantaneous
  - – I²t On/Off optional (for short-time delay)
- ■ Ground fault protection
  - – I²t On/Off optional
- ■ Protection for Over voltage/Under voltage/Over frequency/ Under frequency/Unbalance/Reverse power
- ■ Realization of protective coordination by ZSI (Zone Selective Interlocking)
- ■ The fine-adjustable setting by knob and key
- ■ IDMTL setting (SIT, VIT, EIT, DT curve)
  - – Basic setting : “None”. Thermal curve.
- ■ Measurement and display function
  - – High detailed measurement for 3 phase current/Voltage/ Power/Energy/Phase angle/Frequency/PF/Demand
  - – 128 x 128 Graphic LCD
  - – Indicates current/voltage vector diagram and waveform
- ■ Fault recording
  - – Records Max. up to 256 fault information about fault type, fault phase, fault value, occurrence time of fault
- ■ Event recording
  - – Records events of device related to setting change, operation and state change. (Max. up to 256)
- ■ SBO (Select Before Operation)
  - – High reliability for control and setting change method
- ■ 3 DO (Digital output)
  - – Programmable for alarm, trip and general DO
- ■ Communication
  - – Modbus/RS485 – Profibus–DP
- ■ Rating Plug for selection of rated current(In) and frequency
  - • Rating Plug type
    - – 800AF: 400, 600, 630, 800A (4 types)
    - – 1600AF: 800, 1000, 1200, 1250, 1600A (5 types)
  - • Frequency selection switch: set to 50Hz or 60Hz

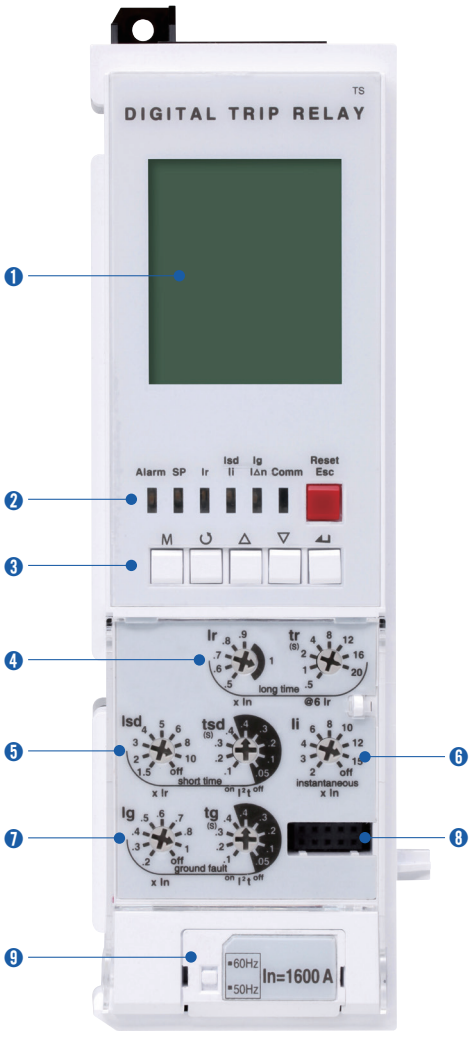

* When communication is flashing phone icon on the LCD.


❶ LCD: Indication of measurement and information

❷ LED: Indication of trip info. and overload state

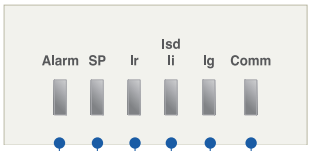

- Comm: LED indicating comm. state (Blink when running) *
- Ig: LED indicating ground-fault
- Isd/Ii: LED indicating short-time or instantaneous tripping
- Ir: LED indicating long-time delay
- SP: Self-protection and battery test LED
- Alarm: LED indicating an overload (Turn on above 90%, Blink above 105%)


❸ Key: Move to menu or reset

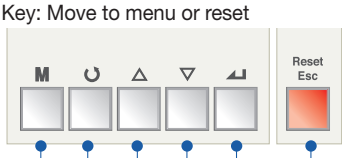


- Reset/ESC: Fault reset or ESC from menu
- Enter: Enter into secondary menu or setting input
- Up/Down: Move the cursor up/down on screen or increase/decrease a setting value
- Right/Left: Move the cursor or setting right/left on screen (Rotation)
- Menu: Menu display ↔ Measurement display

❹ Ir: Long-time current setting, tr: Long-time tripping delay setting
❺ Isd: Short-time current setting, tsd: Short-time tripping delay setting
❻ Ii: Instantaneous current setting
❼ Ig: Ground fault current setting, tg: Ground fault tripping delay setting
❽ Test terminal: OCR test terminal (Connected with OCR tester)
❾ Rating Plug: Rated current (In) and frequency selection

Protection

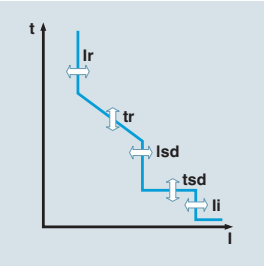

Long time											
Current setting (A)	Ir = Iu×...		0.4	0.5	0.6	0.7	0.8	0.9	1.0		
Time delay (s)	tr@(1.5×Ir)		12.5	25	50	100	200	300	400	500	
Accuracy : ±15% or	tr@(6.0×Ir)		0.5	1	2	4	8	12	16	20	
below 100ms	tr@(7.2×Ir)		0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	
Short time											
Current setting (A) Accuracy : ±10%	Isd = Ir×...	Cat. B	1.5	2	3	4	5	6	8	10	Off
		Cat. A	1.5	2	3	4	5	6	8	(Not set)	Off
Time delay (s) @10×Ir	tsd	I²t Off	0.05	0.1	0.2	0.3	0.4				
		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				
Instantaneous											
Current setting (A)	Ii = In×...		2	3	4	6	8	10	12	15	Off
Tripping time			below 50ms								
Ground fault											
Pick-up (A) Accuracy : ±10%(Ig>0.4In) ±20%(Ig≤0.4In)	Ig = In×...		0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
Time delay (s) @10×Ir	tg	I²t Off	0.05	0.1	0.2	0.3	0.4				
		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				

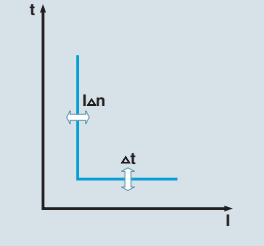

Earth leakage (Option)										
Current setting (A)	I△n		0.5	1	2	3	5	10	20	30	Off
Time delay (ms) Accuracy : ±15%	△t	Alarm Time (ms)	140	230	350	800	950				
		Trip Time (ms)	140	230	350	800					

Note) Earth leakage function is available with ZCT or external CT


Earth leakage (Option)										
Current setting (A)	Ip = Ir×...	0.6	0.65	0.7	0.75	0.8	0.85	0.9	0.95	1
Time delay (ms) Accuracy : ±15%	tp@(1.2×Ip)	1	5	10	15	20	25	30	35	Off

Other protection		Pick-up			Time delay(s)		
		Setting range	Step	Accuracy	Setting range	Step	Accuracy
Under voltage		80V ~ OV_Pick–up	1V	±5%	1.2~40	0.1	±0.1
Over voltage		UV_Pick–up ~ 980V	1V	±5%			
Voltage unbalance		6% ~ 99%	1%	±2.5% or (*±10%)			
Reverse power		10 ~ 500kW	1kW	±10%	0.2~40		
Over power		500~5000 kW	1kW	±10%			
Current unbalance		6% ~ 99%	1%	±2.5% or (*±10%)	1.2~40		
Over frequency	60Hz	UF_Pick–up ~ 65	1Hz	±0.1Hz			
	50Hz	UF_Pick–up ~ 55	1Hz	±0.1Hz			
Under frequency	60Hz	55Hz ~ OF_Pick–up	1Hz	±0.1Hz			
	50Hz	45Hz ~ OF_Pick–up	1Hz	±0.1Hz			

S type: 「Supreme meter」 type

■ Overload protection
– Long-time delay – Thermal
■ Short-circuit protection
– Short-time delay/Instantaneous
– I²t On/Off optional (for short-time delay)
■ Ground fault protection
– I²t On/Off optional
■ Protection for Over voltage/Under voltage/Over frequency/ Under frequency/Unbalance/Reverse power
■ Realization of protective coordination by ZSI (Zone Selective Interlocking)
■ The fine-adjustable setting by knob and key
■ IDMTL setting (SIT, VIT, EIT, DT curve)
– Basic setting : “None”. Thermal curve.
■ Measurement and display function
– High detailed measurement for 3 phase current/Voltage/ Power/Energy/Phase angle/Frequency/PF/Demand
– 128 x 128 Graphic LCD
– Indicates current/voltage vector diagram and waveform


■ Fault recording
– Records Max. up to 256 fault information about fault type, fault phase, fault value, occurrence time of fault
■ Event recording
– Records events of device related to setting change, operation and state change. (Max. up to 256)
■ SBO (Select Before Operation)
– High reliability for control and setting change method
■ 3 DO (Digital output)
– Programmable for alarm, trip and general DO
■ Communication
– Modbus/RS485 – Profibus–DP
■ Rating Plug for selection of rated current(In) and frequency
• Rating Plug type
– 800AF: 400, 600, 630, 800A (4 types)
– 1600AF: 800, 1000, 1200, 1250, 1600A (5 types)
• Frequency selection switch: set to 50Hz or 60Hz

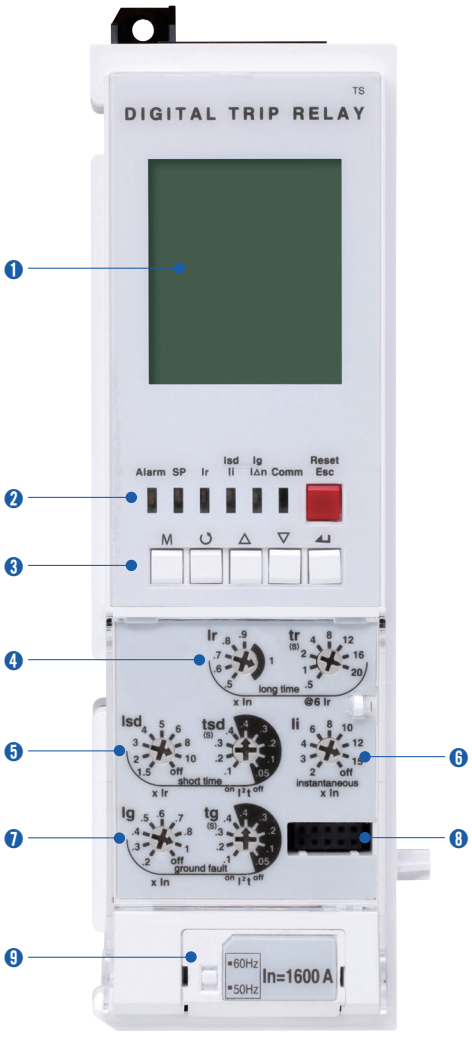

* When communication is flashing phone icon on the LCD.


❶ LCD: Indication of measurement and information

❷ LED: Indication of trip info. and overload state

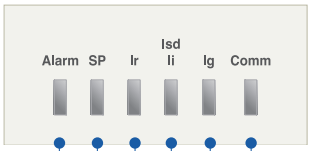

Comm: LED indicating comm. state (Blink when running) *
Ig: LED indicating ground-fault
Isd/Ii: LED indicating short-time or instantaneous tripping
Ir: LED indicating long-time delay
SP: Self-protection and battery test LED
Alarm: LED indicating an overload
(Turn on above 90%, Blink above 105%)


❸ Key: Move to menu or reset

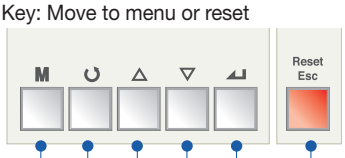


Reset/ESC: Fault reset or ESC from menu
Enter: Enter into secondary menu or setting input
Up/Down: Move the cursor up/down on screen or increase/decrease a setting value
Right/Left: Move the cursor or setting right/left on screen (Rotation)
Menu: Menu display ↔ Measurement display

❹ Ir: Long-time current setting, tr: Long-time tripping delay setting
❺ Isd: Short-time current setting, tsd: Short-time tripping delay setting
❻ Ii: Instantaneous current setting
❼ Ig: Ground fault current setting, tg: Ground fault tripping delay setting
❽ Test terminal: OCR test terminal (Connected with OCR tester)
❾ Rating Plug: Rated current (In) and frequency selection

Protection

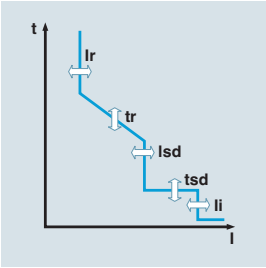

Long time											
Current setting (A)	Iu = Iu×...		0.4	0.5	0.6	0.7	0.8	0.9	1.0		
Time delay (s)	tr@(1.5×Ir)		12.5	25	50	100	200	300	400	500	
Accuracy : ±15% or	tr@(6.0×Ir)		0.5	1	2	4	8	12	16	20	
below 100ms	tr@(7.2×Ir)		0.34	0.69	1.38	2.7	5.5	8.3	11	13.8	
Short time											
Current setting (A)	Isd = Ir×...	Cat. B	1.5	2	3	4	5	6	8	10	Off
Accuracy : ±10%		Cat. A	1.5	2	3	4	5	6	8	(Not set)	Off
Time delay (s)	tsd	I²t Off	0.05	0.1	0.2	0.3	0.4				
@10×Ir		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				
Instantaneous											
Current setting (A)	Ii = In×...		2	3	4	6	8	10	12	15	Off
Tripping time			below 50ms								
Ground fault											
Pick-up (A) Accuracy : ±10%(Ig>0.4In) ±20%(Ig≤0.4In)	Ig = In×...		0.2	0.3	0.4	0.5	0.6	0.7	0.8	1.0	Off
Time delay (s)	tg	I²t Off	0.05	0.1	0.2	0.3	0.4				
@10×Ir		I²t On		0.1	0.2	0.3	0.4				
	(I²t Off)	Min. Trip Time (ms)	20	80	160	260	360				
		Max. Trip Time (ms)	80	140	240	340	440				

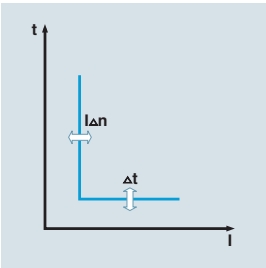

Earth leakage (Option)										
Current setting (A)	I△n		0.5	1	2	3	5	10	20	30	Off
Time delay (ms) Accuracy : ±15%	△t	Alarm Time (ms)	140	230	350	800	950				
		Trip Time (ms)	140	230	350	800					


Note) Earth leakage function is available with ZCT or external CT

Earth leakage (Option)										
Current setting (A)	Ip = Ir×...	0.6	0.65	0.7	0.75	0.8	0.85	0.9	0.95	1
Time delay (ms) Accuracy : ±15%	tp@(1.2×Ip)	1	5	10	15	20	25	30	35	Off

Other protection		Pick-up			Time delay(s)		
		Setting range	Step	Accuracy	Setting range	Step	Accuracy
Under voltage		80V ~ OV_Pick–up	1V	±5%	1.2~40	0.1	±0.1
Over voltage		UV_Pick–up ~ 980V	1V	±5%			
Voltage unbalance		6% ~ 99%	1%	±2.5% or (*±10%)			
Reverse power		10 ~ 500kW	1kW	±10%	0.2~40		
Over power		500~5000 kW	1kW	±10%			
Current unbalance		6% ~ 99%	1%	±2.5% or (*±10%)	1.2~40		
Over frequency	60Hz	UF_Pick–up ~ 65	1Hz	±0.1Hz			
	50Hz	UF_Pick–up ~ 55	1Hz	±0.1Hz			
Under frequency	60Hz	55Hz ~ OF_Pick–up	1Hz	±0.1Hz			
	50Hz	45Hz ~ OF_Pick–up	1Hz	±0.1Hz			

Operation characteristics


Long-time delay (L)

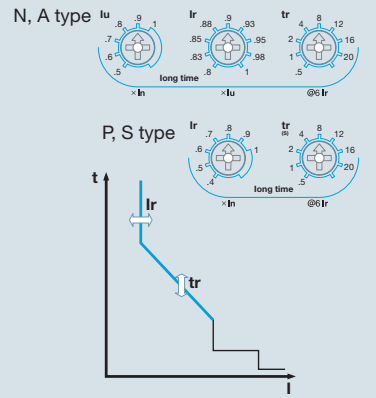

The function for overload protection which has time delayed characteristic in inverse ratio to fault current.

1. Standard current setting knob: Ir
   1) Setting range in P type and S type: (0.4–0.5–0.6–0.7–0.8–0.9–1.0)×In
   2) Setting range in N type and A type: (0.4 ~ 1.0)×In
      – Iu: (0.5–0.6–0.7–0.8–0.9–1.0) ×In
      – Ir: (0.8–0.83–0.85–0.88–0.9–0.93–0.95–0.98–1.0)×Iu
2. Time delay setting knob: tr
   – Standard operating time is based on the time of 6×Ir
   – Setting range: 0.5–1–2–4–8–12–16–20 sec
3. Relay pick-up current
   – When current over (1.15)×Ir flows in, relay is picked up.
4. Relay operates basing on the largest load current among R/S/T/N phase.


Short-time delay (S)

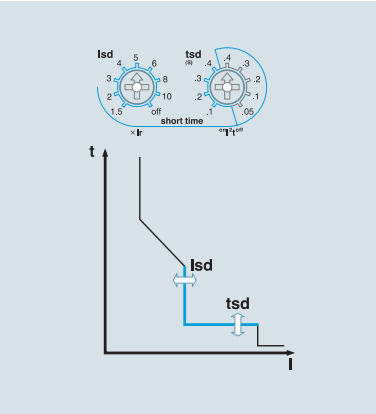

The function for fault current (over current) protection which has definite time characteristic and time delayed in inverse ratio to fault current.

1. Standard current setting knob: Isd
   – Setting range: (Cat B: 1.5–2–3–4–5–6–8–10–Off)
   (Cat A: 1.5–2–3–4–5–6–8–Off)
2. Time delay setting knob: tsd
   – Standard operating time is based on the time of 10×Ir.
   – Inverse time (I^2t On): 0.1–0.2–0.3–0.4 sec
   – Definite time (I^2t Off): 0.05–0.1–0.2–0.3–0.4 sec
3. Relay operates basing on the largest load current among R/S/T/N phase.
4. When ZSI function was set, the protection operation will take place instantaneously with input absence by downstream devices. It is advised to disable its ZSI function on the last downstream device.


Instantaneous (I)

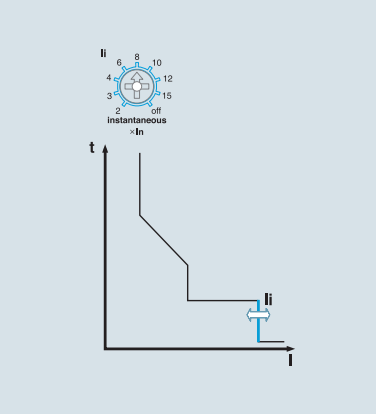

The function for breaking fault current above the setting value within the shortest time to protect the circuit from short-circuit.

1. Standard current setting knob: Ii
   – Setting range: (2–3–4–6–8–10–12–15–Off)×In
2. Relay operates basing on the largest load current among R/S/T/N phase.
3. Total breaking time is below 50ms.


Ground Fault (G)

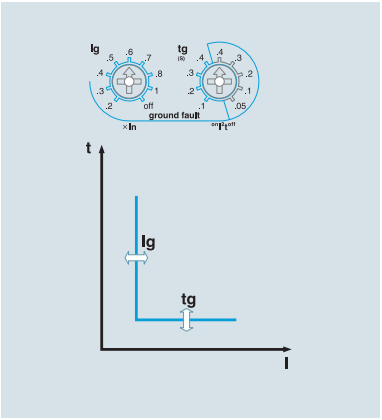

The function for breaking ground fault current above setting value after time-delay to protect the circuit from ground fault.


1. Standard setting current knob: Ig
   – Setting range: (0.2–0.3–0.4–0.5–0.6–0.7–0.8–1.0–Off)×In
2. Time delay setting knob: tg
   – Inverse time (I^2t On): 0.1–0.2–0.3–0.4 sec
   – Definite time (I^2t Off): 0.05–0.1–0.2–0.3–0.4 sec
3. Ground fault current is vector sum of each phase current. Therefore, 3pole products may operate under its phase-unbalance including ground fault situations. (R+S+T+(N) Phase)
4. When ZSI function was set, the protection operation will take place instantaneously with input absence by downstream devices. It is advised to disable its ZSI function on the last downstream device.
5. Ground-fault functions are basically provided with products equipped with a trip relay through its internal CT that is embedded in each phase. (But, it can't be used with earthleakage protection function at the same time)


Earth Leakage (G) - Option

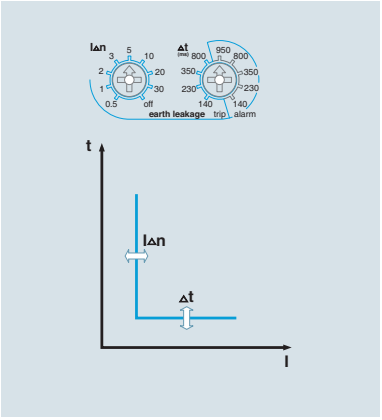

The function for breaking earth leakage current above setting value after time delay to protect the circuit from earth leakage. (A, P, S type)

1. Standard setting current knob: I△n
   – Setting range: 0.5–1–2–3–4–5–10–20–30–Off (A)
2. Time delay setting knob: △t
   – Trip time: 140–230–350–800 ms
   – Alarm time: 140–230–350–800–950 ms
3. This function is enabled and can be used only with standard ZCT provided by LS or private external CT (secondary output 5A) selected by customers.

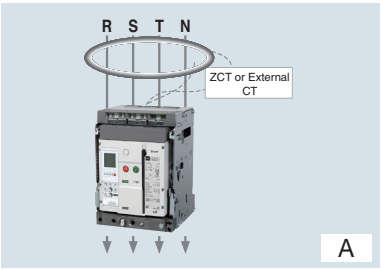

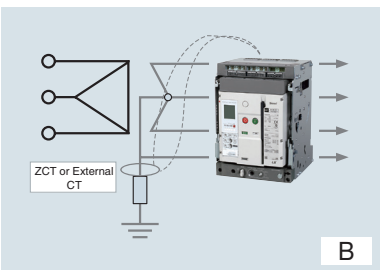

* Use cautions with earth-leakage current settings

- When using a standard ZCT provided by LS, the setting range is from 0.5 to 30A which is based on its primary current. But ACB installed like A type (displayed on the left side) should only be cable-connected and its rated current should be less than 1600A.
- When using other CT selected by customers, the setting range is from 0.5 to 5A based on its secondary current.(Secondary output rating : 5A)
  Hence, under 100:5A CT, if trip relay is set to 0.5A, earth-leakage exceeding 10A will activate its operation (0.5A×20 = 10A)

※ Guideline for the external CT usage

- Earth-leakage protection characteristics using the standard CT which is installed inside of ACB can protect currents from 20 to 100% range on its rated current.
- As rated currents on ACB increases, current that is covered by its standard CT increase as well. This can not protect against small leakage currents.
  ex) 400A ACB Min. Earth-leakage current 400A×20% =80A
  4000A ACB Min. Earth-leakage current 4000A×20% =800A
- Therefore, customers are advised to install an external CT in accordance with its rated currents within its systems. And choose trip relay (E, X type) which is required with external CT usage in order to provide earth-leakage functions.

Measurement function


S type
P type
A type

Class.	Measurement element	Detailed element	Unit	Display range
Current	Line current	Ia, Ib, Ic	A	80A~65,535A
	Normal current	I_1		
	Reverse current	I_2		
Voltage	Line voltage	Vab, Vbc, Vca	V	60~690V
	Phase voltage	Va, Vb, Vc		
	Normal voltage	V_1		
	Reverse voltage	V_2		
Angle	Line-to-line, Line-to-current	∠Vabla, ∠Vablb, ∠Vablc, ∠VabVbc, ∠VabVca	°	0~360°
	Phase-to-phase	∠VaVb, ∠VaVc		
	Phase-to-current	∠Vala, ∠Vblb, ∠Vclc		
Power	Active power		kW	1kW~99999kW
	Reactive power		kVar	1kVar~99999kVar
	Apparent power		kVA	1kVA~99999kVA
Energy	Active energy	WHa(ab), WHb(bc), WHc(ca), WH	kWh, MWh	1kWh~9999.99MWh
	Reactive energy	VARHa(ab), VARHb(bc), VARHc(ca), VARH	kVarh, Mvarh	1kVarh~9999.99MVarh
	Reverse active energy	rWHa(ab), rWHb(bc), rWHc(ca), rWH	kWh, MWh	1kWh~9999.99MWh
Freq.	Frequency (F)	Frequency	Hz	45~65Hz
Power factor	Power factor (PF)	PFa(ab), PFb(bc), PFc(ca), PF		+ : Lead – : Lag
Unbalance	Unbalance rate	Iunalance, Vunbalance	%	0.0~100.0
Demand	Active power demand	Peak demand	kW	1kW~99999kW
	Current demand	Peak demand	A	80A~65535A
Harmonics	Voltage harmonics	1st~63th harmonics of Va(ab),Vb(bc),Vc(ca)	V	60~690V
	Current	1st~63th harmonics of Ia,Ib,Ic	A	80A~65535A
	THD, TDD		%	0.0~100.0
	K–Factor		–	0.0~100.0




Shield cable

P and S type Trip relay, separate voltage module is necessary
to measure other element besides current (Seperate purchase is needed)
- Voltage input range: AC 60~690V

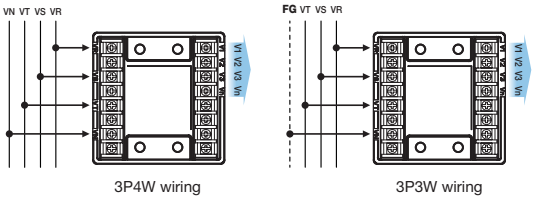


Note) 1. Be sure to use a shielding wire for the secondary wiring of the Shield cable.
2. The maximum length of use is less than 3.5m.

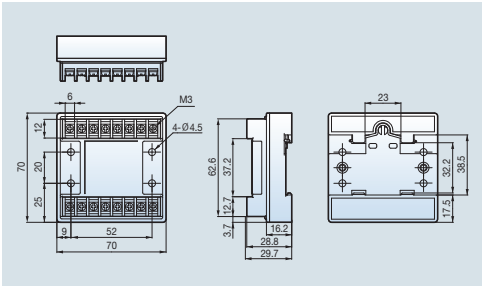

ZSI–Zone Selective Interlocking (A, P, S type)

Zone-selective interlocking drops delay time that eliminates faults for breakers.
It minimizes the shock that all kinds of electric machineries get under fault conditions.

1. In case of that short time-delay or ground fault accident occurs at ZSI built in system, the breaker at accident site sends ZSI signal to halt upstream breaker's operation.
2. To eliminate a breakdown, trip relay of ACB at accident site activates trip operation without time delay.
3. The upstream breaker that received ZSI signal adhere to pre-set short time-delay or ground fault time-delay for protective coordination in the system.
   However upstream breaker that did not receive its signal will trip instantaneously.
4. For ordinary ZSI operation, it should arrange operation time accordingly so that downstream circuit breakers will react before upstream ones under overcurrent/short time delay/ ground fault situations.
5. ZSI connecting line needs to be Max. 3m.

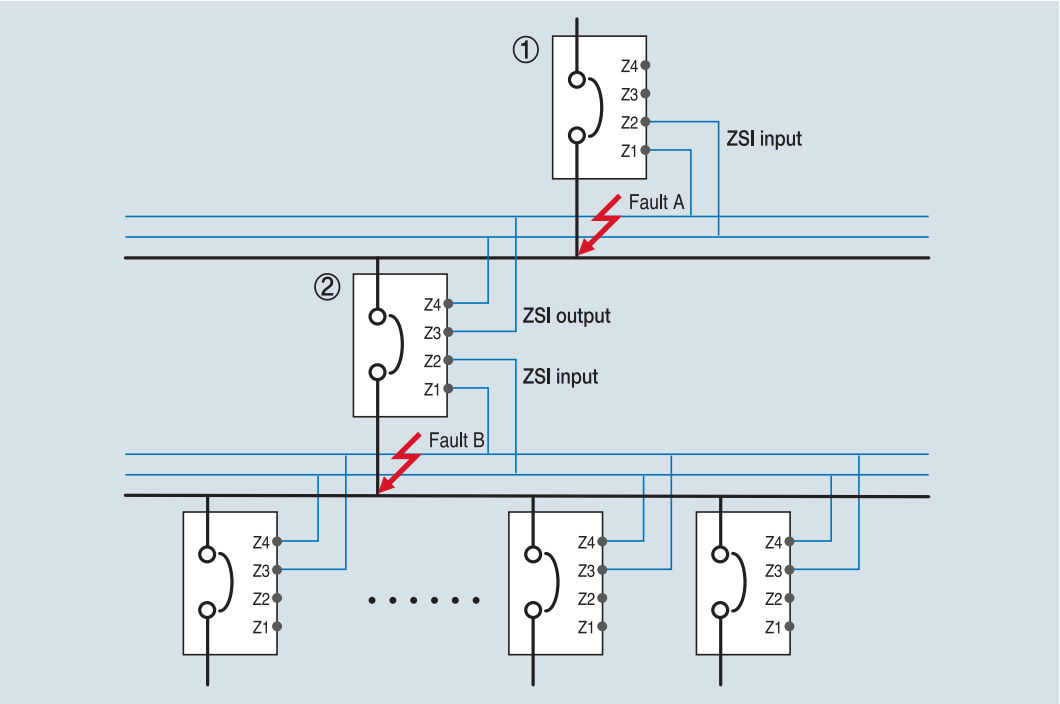

1) Occurrence of fault A
   - Only breaker ① performs instantaneous trip operation.
2) Occurrence of fault B
   - Breaker ② performs instantaneous trip operation,
     breaker ① performs trip operation after prearranged delay time
   - But if breaker ② did not break the fault normally,
     breaker ① performs instantaneous trip operation to protect system.


Remote reset and digital I/O (A, P, S type)

**In case of that ACB operates due to accidents or over current,
Trip relay indicates the information of the accident through the LED and LCD.
Trip relay A, P and S type is possible to perform the remote reset by digital input,
and have 3 DO(Digital output).**

1. Methods to reset Trip relay is to push the Reset button on the frontal side and to use the remote reset.
2. Digital input
   - [R11-R22] input: Remote reset
   - [Z1-Z2] Input: ZSI input
   - [E1-E2] Input: ZCT for earth leakage detection or external CT input

※ All DI are dry contact that has 3.3V of recognition voltage. When inputting close by SSR(Solid State Relay) or open-collector, connect collector (Drain) to R11.

3. Digital output 3a(524, 534, 544-513)
   - Fault output: Long/Short time delay, Instantaneous, Ground fault, UVR, OVR, UFR, OFR, rPower, Vunbal, Iunbal
     (Maintains state as Latch form until user pushes reset.)
   - General DO: when setting L/R as remote, it is available to control close/open remotely by using communication.

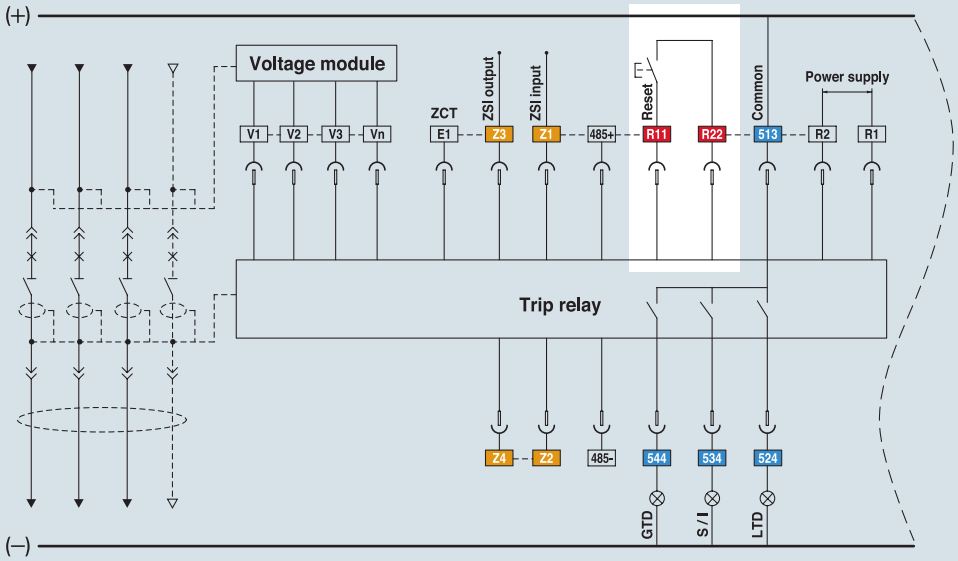


Trip Relay	Digital Output	Long time	Short time	Instantaneous	Ground	Overload Alarm	OVR	UVR	rPower	Vunbal	Iunbal	OFR	UFR	OPR	Note
P,S type	DO1(524)	●	○	○	○	○	○	○	○	○	○	○	○	○	Programmable
	DO2(534)	○	●	●	○	○	○	○	○	○	○	○	○	○	
	DO3(544)	○	○	○	●	○	○	○	○	○	○	○	○	○	
A type	DO1(524)	●	×	×	×	Not available									Fixed
	DO2(534)	×	●	●	×										
	DO3(544)	×	×	×	●										

Communication

Modbus/RS-485

- Operation mode: Differential
- Distance: Max. 1.2km
- Cable: General RS-485 shielded twist 2–Pair cable
- Baud rate: 9600bps, 19200bps, 38400bps
- Transmission method: Half-Duplex
- Termination: 100Ω

※ RS485 Communication precautions
1) Operation mode and maximum communication distance :
Support up to 1.2km in differential mode.
2) Communication line and cable specification:
Use universal AWG22, twisted shield par cable.
3) Please make sure to ground the shield of the communication line.

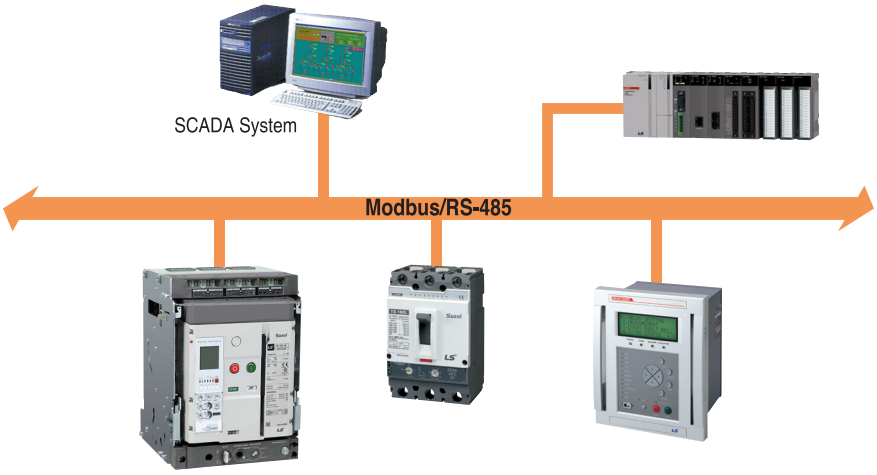


Profibus-DP

- Profibus-DP module is installed separately (Option)
- Operation mode: Differential
- Distance: Max. 1.2km
- Cable: Profibus–DP Shielded twist 2–Pair cable
- Baud rate: 9600bps~12Mbps
- Transmission method: Half-Duplex
- Termination:100Ω
- Standard: EN 50170/DIN 19245




Profibus-DP communication module (Option)

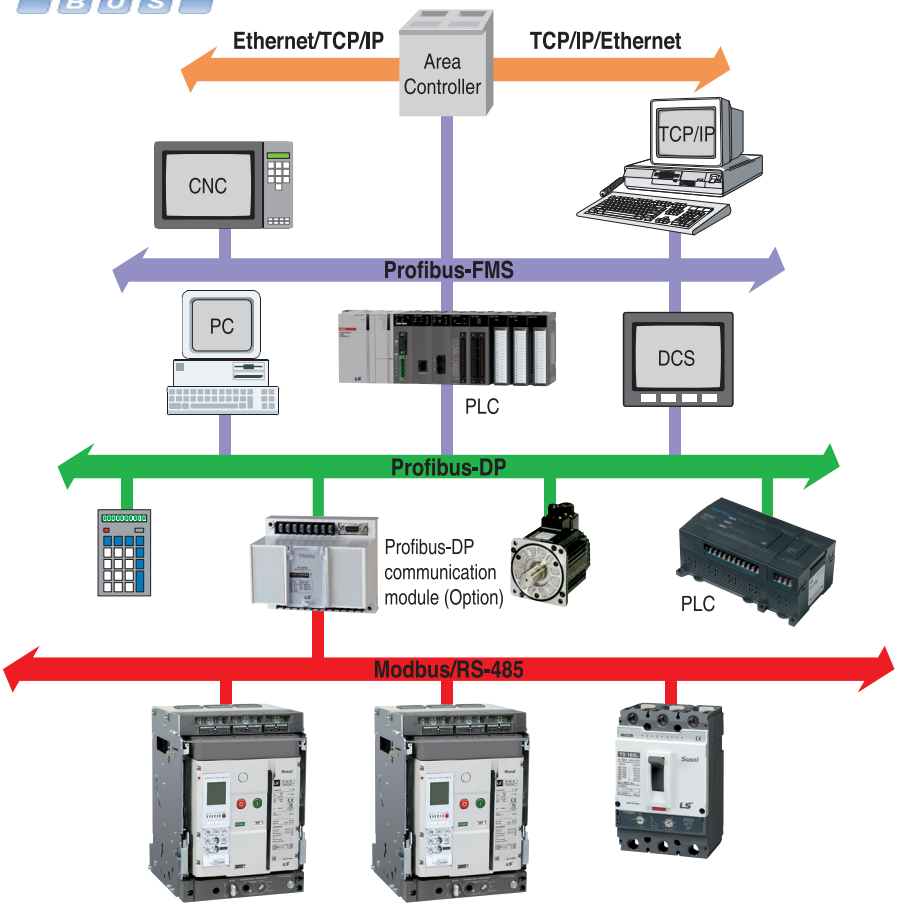


Event & Fault Recording (P, S type)

When there are events such as setting change, Info. change, error of self-diagnose, state change, P and S type record Max. up to 256 information of the events in accordance with time(ms). In addition, they can record Max. up to 256(up to 10 for A type) information of the faults such as fault cause, fault phase, fault value and so on in accordance with time(ms).

Event information display

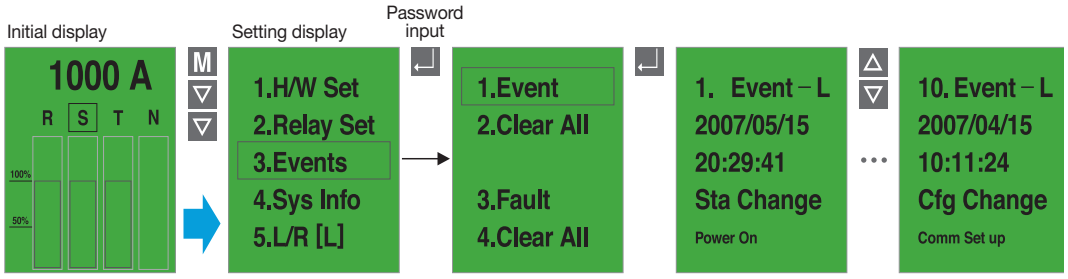

Fault information display

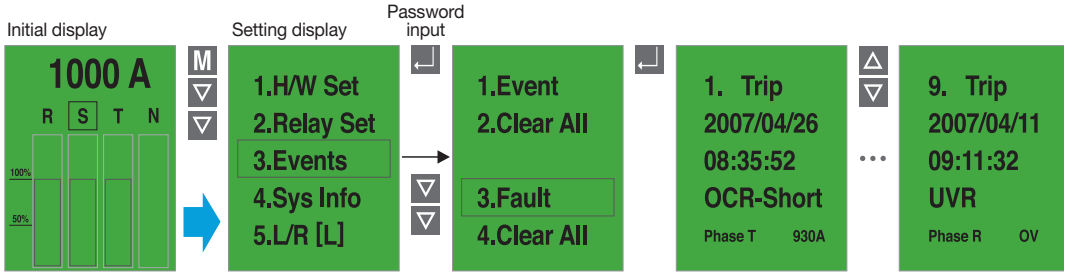


System Information


P and S type can indicate information as followings with the information of the ACB.

- Present time: year/month/date/hour/minute/ms
- Ex–Func: Special function (3P OCGR, 4P OCGR, Ex OCGR)
- Closing numbers of breaker: CB ON numbers
- ON time of breaker: CB ON time
- ACB current ratings
- Frequency information: 60Hz / 50Hz
- Trip relay operating time: OCR ON time
- S/W ver. information

System information display

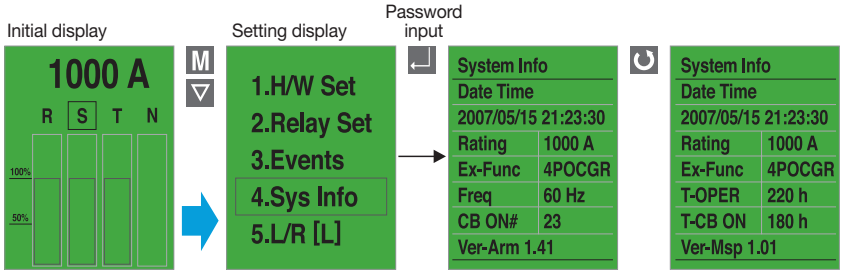


System block diagram

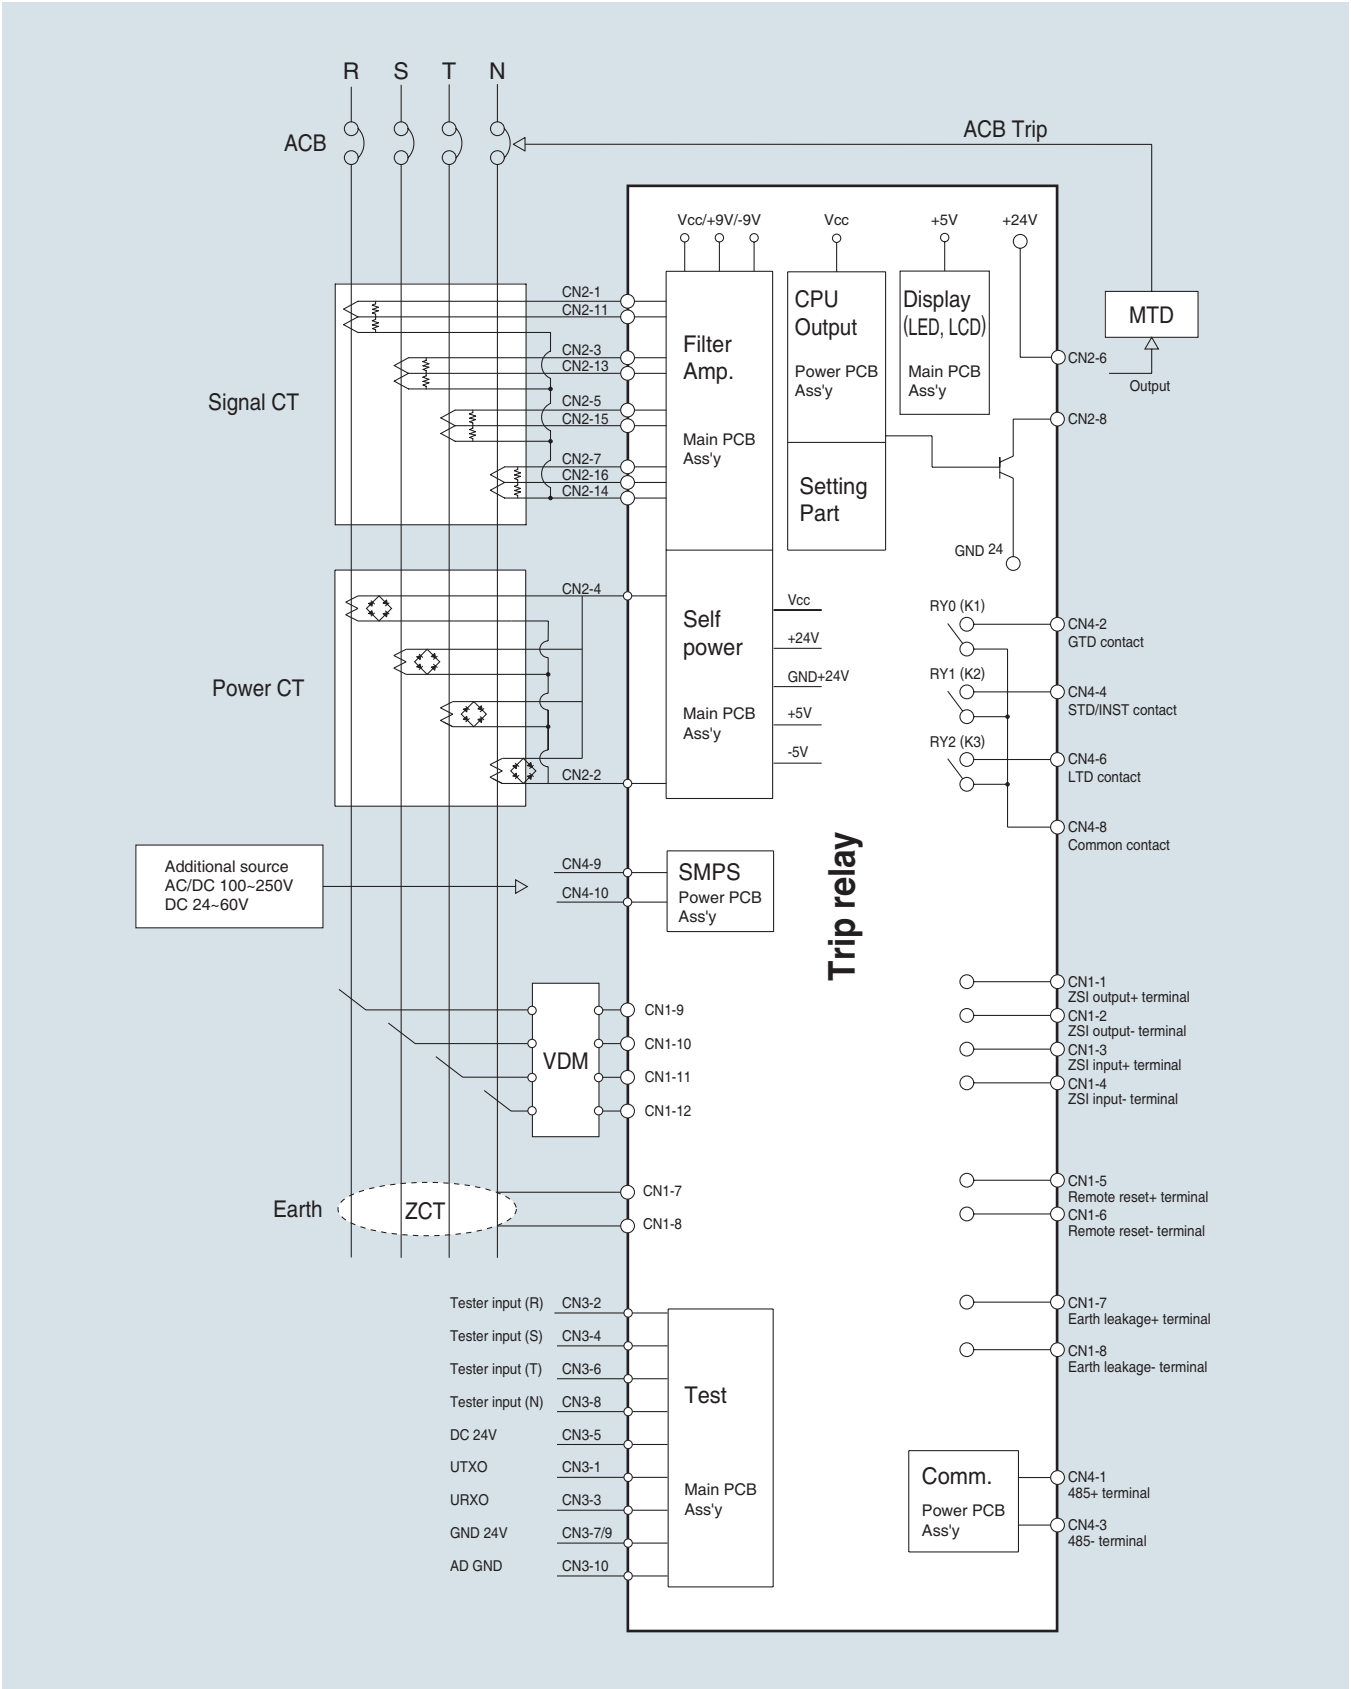


Characteristics curves

Long-time delay (L)

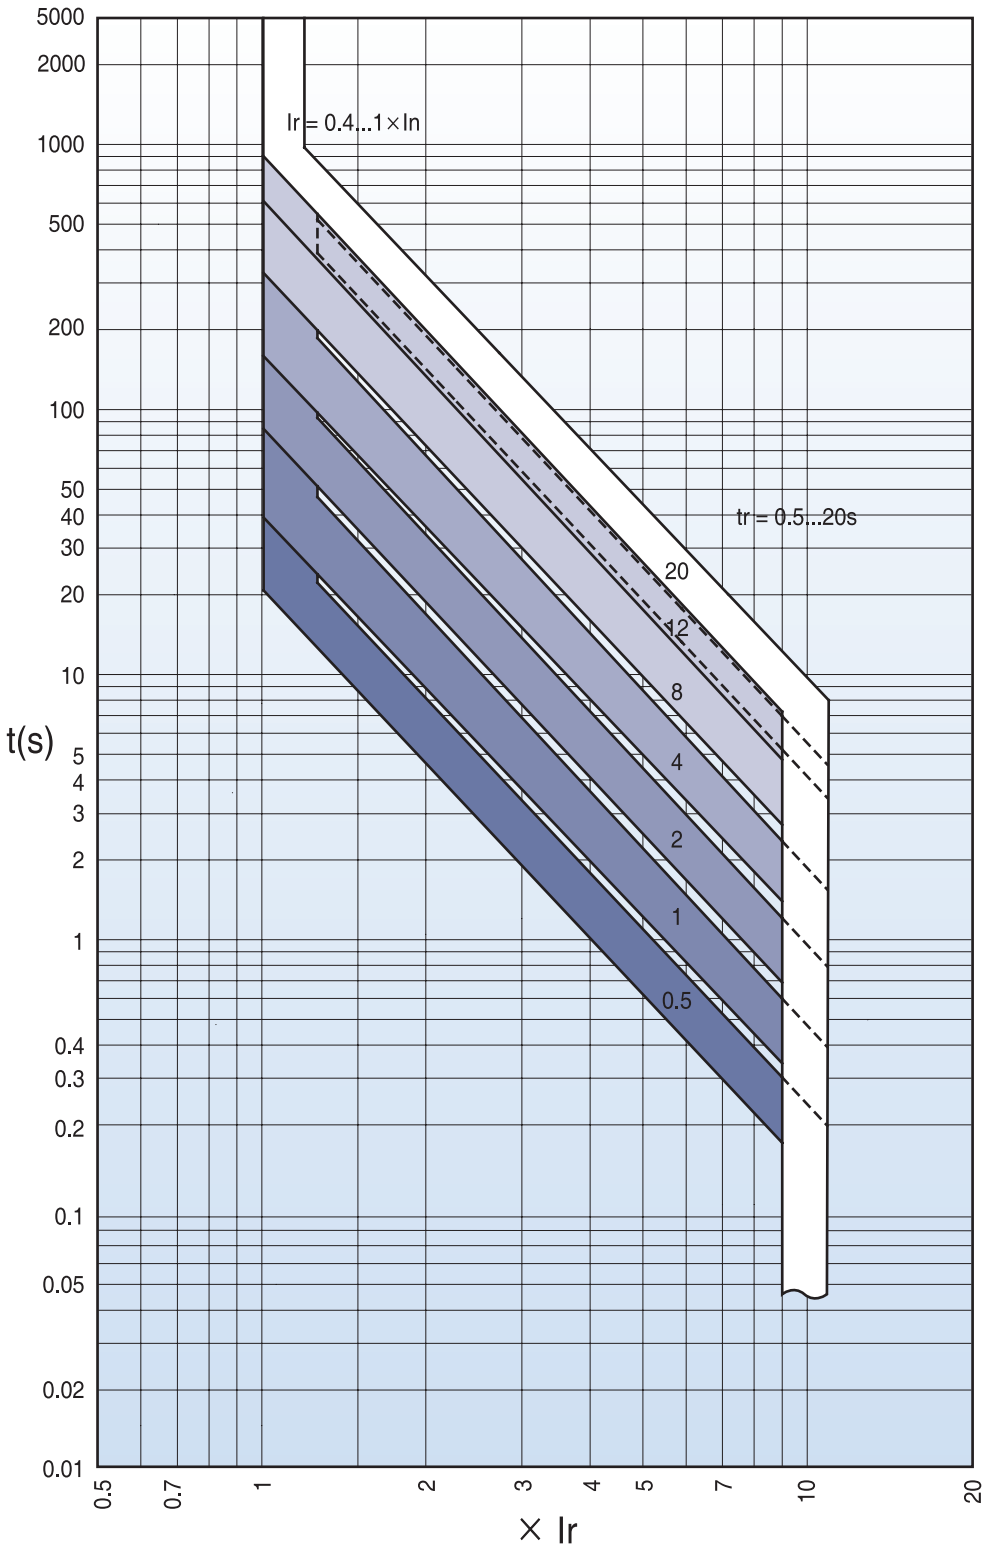


Short-time delay (S)

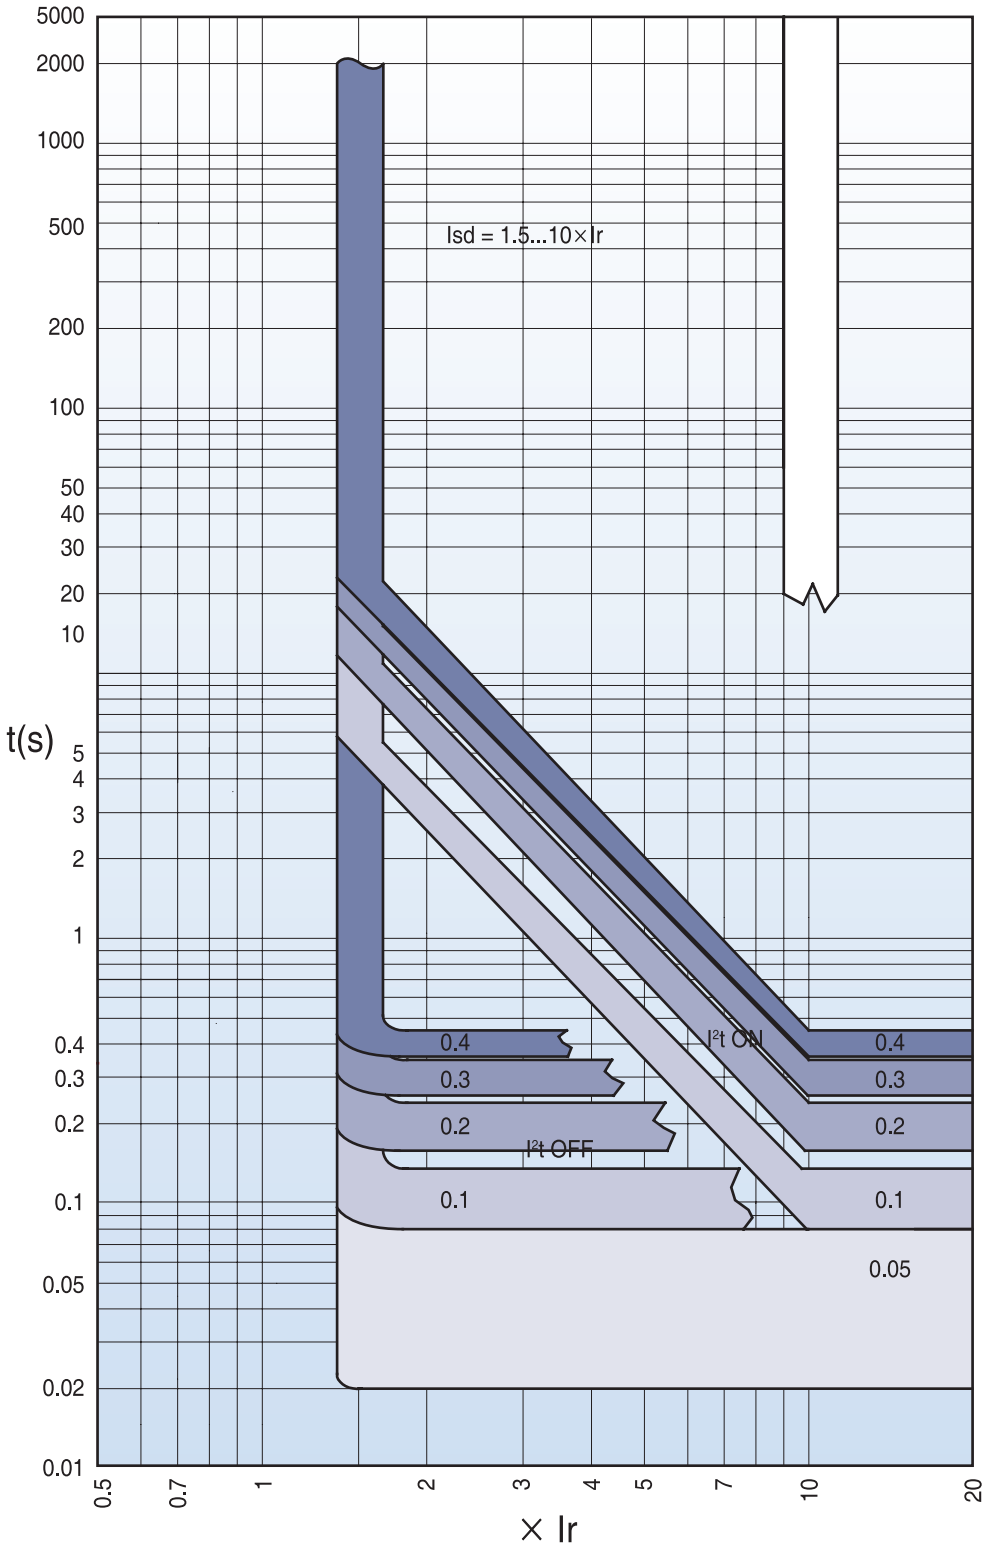


Characteristics curves

Instantaneous (I)
Ground fault (G)

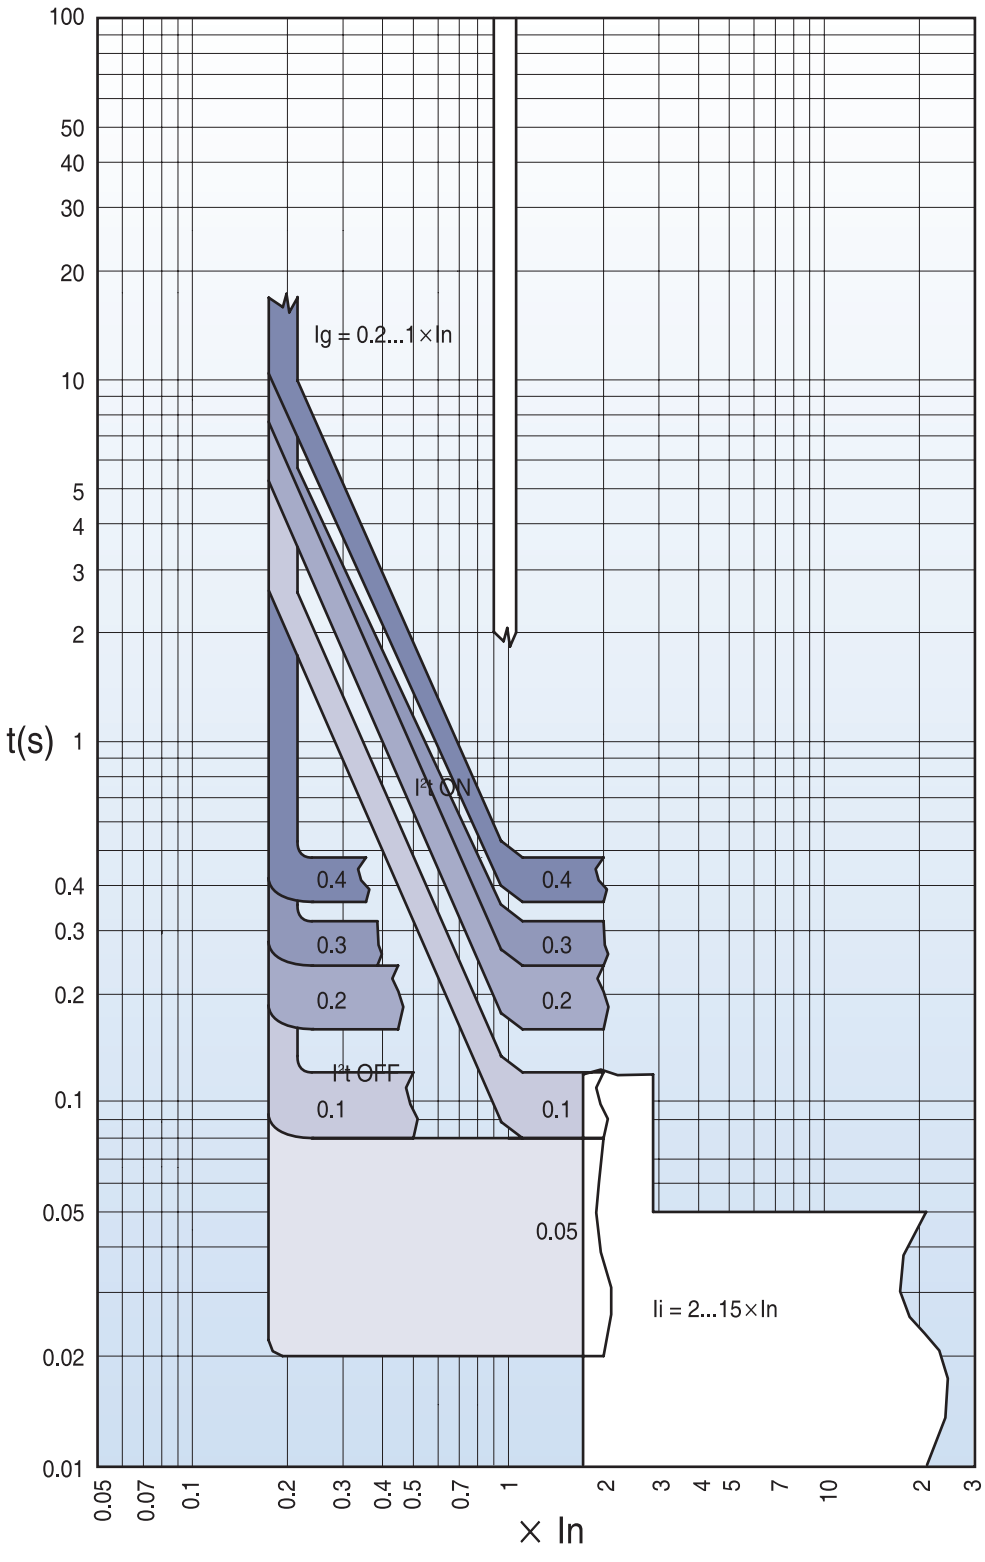

IDMTL

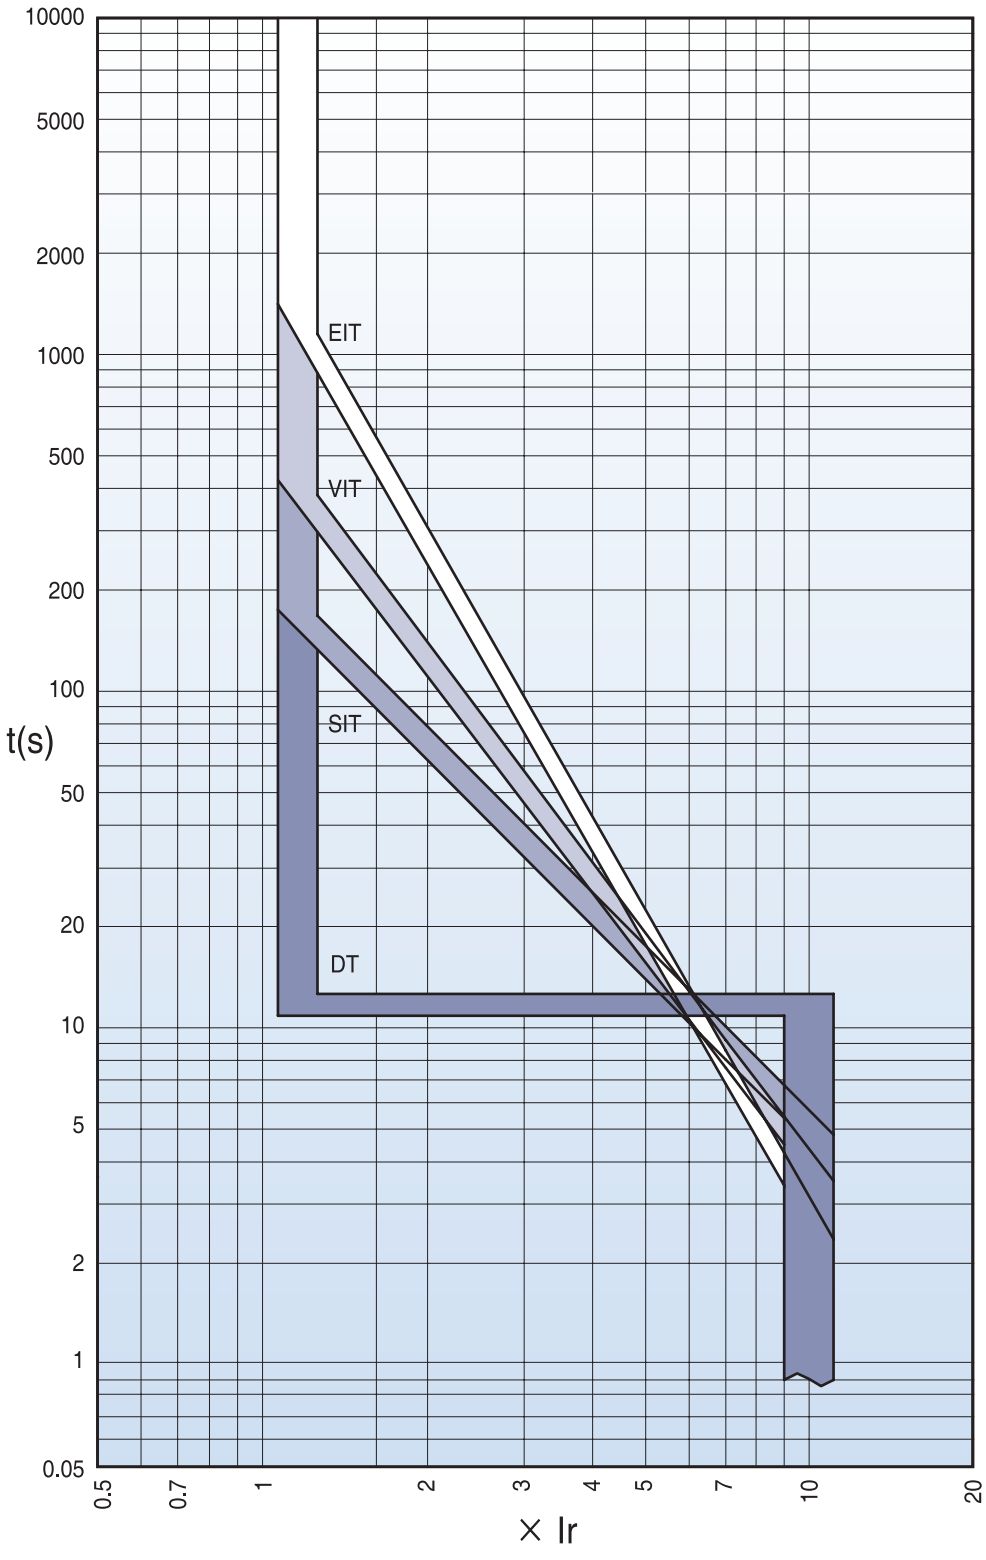
10000
5000
2000
1000
500
200
100
50
20
10
5
2
1
0.05
t(s)
EIT
VIT
SIT
DT
0.5
0.7
1
2
3
4
5
7
10
20
× Ir

Accessories

Main body





Mounting	Accessories		Supply category		Remark Note)	Page
			Standard	Option		
Internal	SHT 1	Shunt Coil	-	○	*	50
	SHT 2	Double Shunt Coil	-	○	*	51
	CC	Closing Coil	-	○	*	52
	M	Motor	-	○	*	53
	CS1	Charge Switch	-	○	*	
	UVT	Under Voltage Trip Device	-	○	*	54
	AL	Trip Alarm Contact	-	○	*	55
	MRB	Manual Reset Button	-	○	*	56
	RES	Remote Reset Switch	-	○	*	57
	RCS	Ready to Close Switch	-	○	*	58
	C	Counter	-	○	*	58
	FX	Auxiliary Switch	●	-	*	60
	MI	Mechanical Interlock	-	○	*	65
External	K1	Key Lock	-	○	*	59
	K2	Key Interlock Set	-	○	*	59
	B	ON/OFF Button Lock	-	○	*	60
	LH	Lifting Hook	-	○	-	61
	CTD	Condenser Trip Device	-	○	-	61
	DC	Dust Cover	-	○	-	64
	IT	i-Tester	-	○	-	62
	A	Automatic Connector	●	-	*	
	DF	Door Frame	-	○	-	66

* Seperate purchasing is not allowed. Each item should be purchased with the main body.

Cradle







Mounting	Accessories		Supply category		Remark Note)	Page
			Standard	Option		
Trip relay	N	N type	-	○	*	28
	A	A type	-	○	*	30
	P	P type	-	○	*	32
	S	S type	-	○	*	34
	VM	Voltage Module	-	○	**	38
	ZCT	ZCT for the earth leakage	-	○		
Cradle	ST	Safety Shutter	-	○	*	66
	DF	Door Frame	-	○		66
	MIP	Miss Insertion Prevent Device	-	○		71
	MOC	Mechanical Operated Cell Switch	-	○		65
	CEL	Cell Switch	-	○		68
	DI	Door Interlock	-	○		69
	ZAS	Zero Arc Space (Arc Cover)	●	-	*	69
	SC	Safety Control Cover	●	-	*	
	RI	Racking Interlock	-	○		70
	PL	Pad Lock/Position Lock	●	-	*	70
	IB	Interphase Barrier	●	-	-	67
	UDC	UVT time delay controller	-	○		72
	ADP	Compatible Adapter	-	○	-	
Other	RPH	Reverse Phase ACB	-	○	-	
	VAD	Various Connection Type	-	○	-	
	RCO	Remote I/O	-	○	-	73
	PC	Profibus-DP comm. module	-	○	-	


* Seperate purchasing is not allowed. Each item should be purchased with the main body.
** Voltage module should be purchased with P/S type trip relay.

Shunt Coil [SHT1]

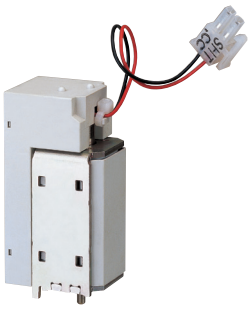

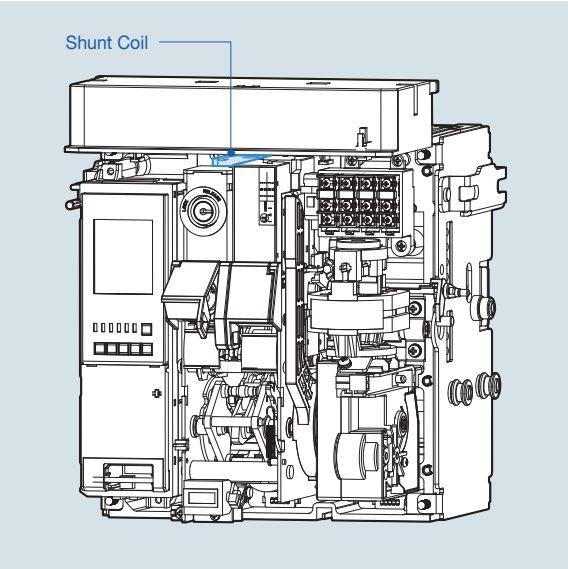

- SHT1 is a control device which trips a circuit breaker from remote place, when applying voltage continuously or instantaneously over 200ms to coil terminals (C1, C2).
- When UVT coil is installed, its location is changed.

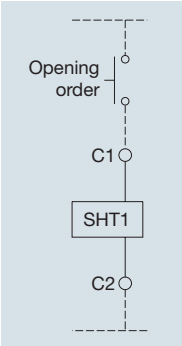

Wiring Diagram

1. Rated voltage and characteristics of trip coil

Rated voltage (Vn)		Operating voltage range (V)	Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)		Inrush	Steady-state	
24~30	–	0.7~1.1 Vn	200	5	Less than 40ms under
48~60	48	0.7~1.1 Vn			
100~130	100~130	0.7~1.1 Vn			
200~250	200~250	0.7~1.1 Vn			
–	380~480	0.7~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage (Vn).


2. Specification of the wire


- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.

The maximum wire length


		Rated voltage (Vn)			
		DC 24~30V		DC/AC 48V	
Wire type		#14 AWG (2.08mm²)	#16 AWG (1.31mm²)	#14 AWG (2.08mm²)	#16 AWG (1.31mm²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Double Shunt Coil [SHT2]

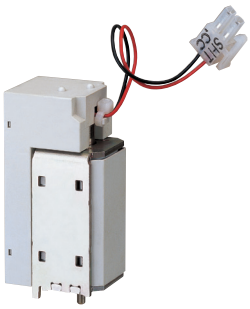

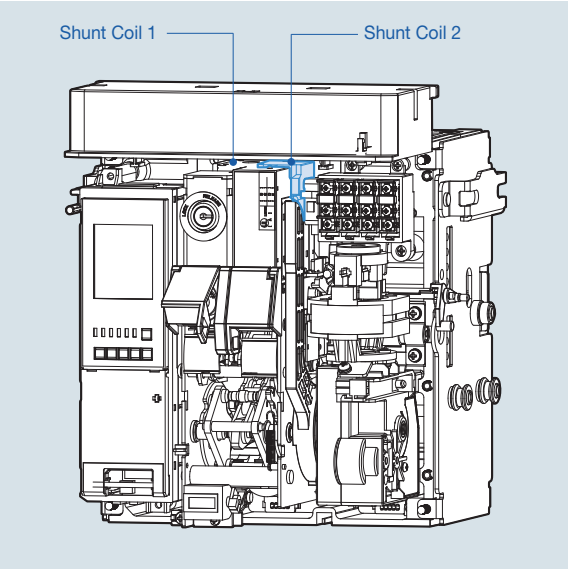

- SHT2 is a control device which trips a circuit breaker doubly from the outside. When SHT1 doesn't operate normally, it can trip a circuit breaker safely.
- Shunt coil 1: Install it at existing location.
- Shunt coil 2: Install it on the right side of the Shunt coil 1
- It is not available with UVT coil when installing double shunt coil.

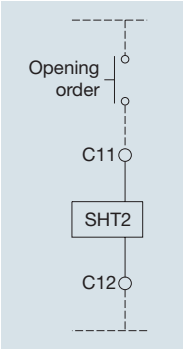

Wiring Diagram

1. Rated voltage and characteristics of trip coil

Rated voltage (Vn)		Operating voltage range (V)	Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)		Inrush	Steady-state	
24~30	–	0.7~1.1 Vn	200	5	Less than 40ms
48~60	48	0.7~1.1 Vn			
100~130	100~130	0.7~1.1 Vn			
200~250	200~250	0.7~1.1 Vn			
–	380~480	0.7~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage (Vn).


2. Specification of the wire


- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.

The maximum wire length


		Rated voltage (Vn)			
		DC 24~30V		DC/AC 48V	
Wire type		#14 AWG (2.08mm²)	#16 AWG (1.31mm²)	#14 AWG (2.08mm²)	#16 AWG (1.31mm²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Closing Coil [CC]

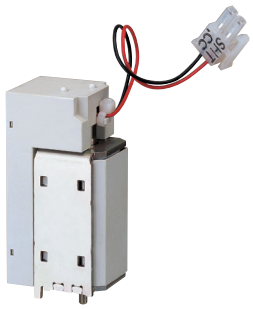

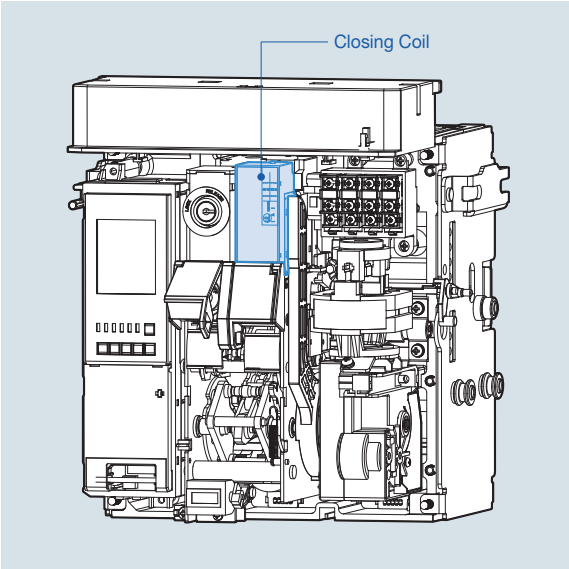

- It is a control device which closes a circuit breaker, when the voltage is applied continuously or instantaneously over 200ms to the coil terminals (A1, A2).

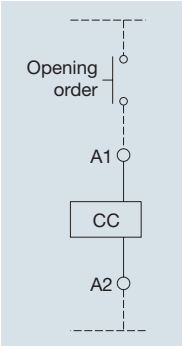

Wiring Diagram

1. Rated voltage and characteristics of closing coil

Rated voltage (Vn)		Operating voltage range (V)	Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)		Inrush	Steady-state	
24~30	–	0.85~1.1 Vn	200	5	Less than 80ms under
48~60	48	0.85~1.1 Vn			
100~130	100~130	0.85~1.1 Vn			
200~250	200~250	0.85~1.1 Vn			
–	380~480	0.85~1.1 Vn			

Note) Operating voltage range is the min. rated voltage standard for each rated voltage (Vn).


2. Specification of the wire


- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.

The maximum wire length

		Rated voltage (Vn)			
		DC 24~30V		DC/AC 48V	
Wire type		#14 AWG (2.08mm²)	#16 AWG (1.31mm²)	#14 AWG (2.08mm²)	#16 AWG (1.31mm²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Motor [M]

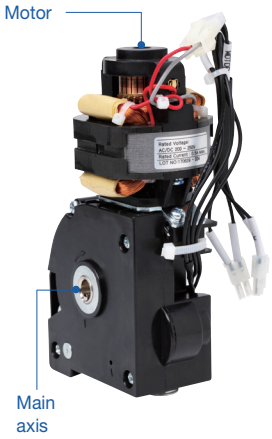

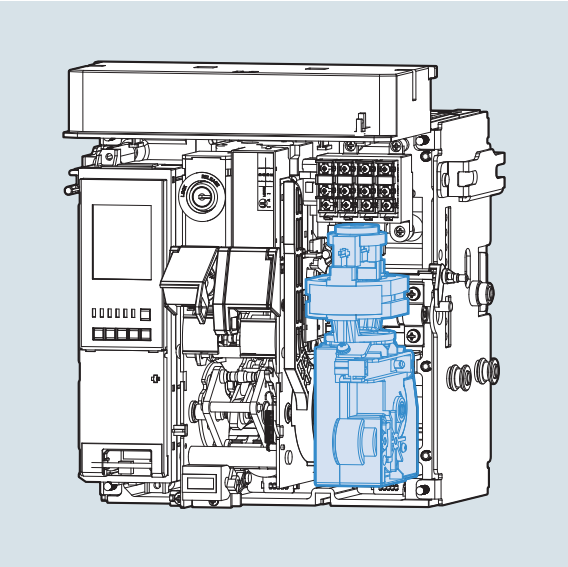


- Charge the closing spring of a circuit breaker by the external power source. Without the external power source, charge manually.
- Operating voltage range (IEC 60947) 85%~110%Vn


Input voltage (V)	DC 24~30V	AC/DC 48~60V	AC/DC 100~130V	AC/DC 200~250V	AC 380V	AC 440~480V
Load current (max.)	5A	3A	1A	0.5A	0.3A	0.3A
Starting current (Max.)	5 times of load current					
Load rpm (Motor)	15000~19000 rpm					
Charge time	Less than 3sec.					
Dielectric strength	2kV/min					
Using temperature range	-20°~ 60°					
Using humidity range	Max. RH 80% (No dew condensation)					
Endurance	15,000 cycle (Load connection, 2 times/min)					
Charge switch	10A at 250VAC					

Charge Switch [CS1]

- It is a built-in contact which sends the signal to the outside, when motor charging is completed. (1a)
- It has a “1a” contact built-in for complete charging.
- 10A at 250VAC

Under Voltage Trip Device [UVT]

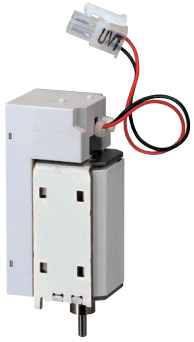

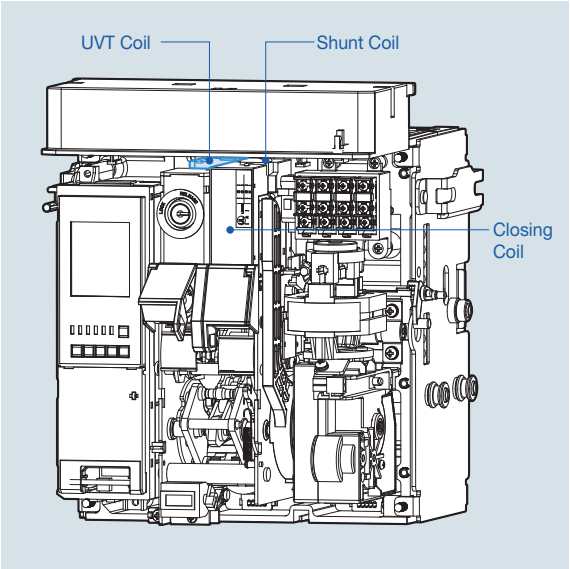

- If the voltage of the main or the control power is under voltage, UVT which is installed inside of the breaker breaks the circuit automatically.
  Please connect with UVT time-delay device in order to present the time-delay function because UVT is technically instantaneous type.
- The closing of a circuit breaker is impossible mechanically or electrically if control power not supplied to UVT.
  To close the circuit breaker, 65~85% of rated voltage should be applied to both terminals of UVT coil (D1, D2).
- When using UVT coil, the double trip coil can not be used, and the location of trip coil is changed.

1. Rated voltage and characteristics of UVT coil

Rated voltage (Vn)		Operating voltage range (V)		Power consumption (VA or W)		Trip time (ms)
DC (V)	AC (V)	Pick up	Drop out	Inrush	Steady-state	
24~30	–	0.65~0.85 Vn	0.4~0.6 Vn	200	5	Less than 50ms
48~60	48					
100~130	100~130					
200~250	200~250					
–	380~480					

Note) Operating voltage range is the min. rated voltage standard for each rated voltage (Vn).

2. Specification of the wire

- Refer to the below table regarding the length and specification of wire when using trip coil with DC 24~30V or DC / AC 48~60V of rated voltage.

The maximum wire length

		Rated voltage (Vn)			
		DC 24~30V		DC/AC 48V	
Wire type		#14 AWG (2.08mm²)	#16 AWG (1.31mm²)	#14 AWG (2.08mm²)	#16 AWG (1.31mm²)
Operating voltage	100%	95.7m	61m	457.8m	287.7m
	85%	62.5m	38.4m	291.7m	183.2m

Note) In case of using UVT coil, the location of Shunt coil is changed.

Trip Alarm Contact [AL]



- When a circuit breaker is tripped by OCR which operates against the fault current (Over Current Relay), Trip Alarm switch provides the information regarding the trip of circuit breaker by sending the electrical signal from the mechanical indicator on front cover of main circuit breaker or internal auxiliary switch. (Installed at the inside of circuit breaker)

- When a circuit breaker tripped by fault current, a mechanical trip indicator (MRB, Manual Reset Button) pops out from the front cover and the switch (AL) which sends control signal electrically is conducted to output the information occurred from fault circuit breaker.

- MRB and AL can be operated only when tripping by OCR, but doesn't be operated by OFF button and OFF operation of trip coil.

- For the manual reset type circuit breaker, to reset the circuit breaker after a circuit breaker trip, push the manual reset button(MRB) manually or operate the remote reset button(RES). Push the reset button on the OCR to reset the LED lamp and fault cause display relay contact (terminal 513~544) on the OCR.
  - Option AL, A1, A2, A3, A4 applicable

- For the auto reset type circuit breaker, it can be reset when the interlock is automatically released after a circuit breaker trip, and if the terminals R11, R22(dry contact) is set to Common, then the LED lamp and fault cause display relay contact(terminal 513~544) on the OCR are remotely reset.
  - Option A5, A6, A7, A8, A9 applicable

- One(AL1, 1b) or two(AL1, AL2, 1b) electrical trip alarm(AL) switches are provided as an option according to the order specifications.

- The AL2 and RES cannot be simultaneously used, so select only one option.

1. Electrical characteristics of trip alarm contact

Rated voltage (V)	Non-inductive load (A)		Inductive load (A)		Inrush current
	Resistive load	lamp load	Inductive load	Motor load	
8V DC	11	3	6	3	Max. 24A
30V DC	10	3	6	3	
125V DC	0.6	0.1	0.6	0.1	
250V DC	0.3	0.05	0.3	0.05	
250V AC	11	1.5	6	2	

Manual Reset Button [MRB]




- It is a function which resets a circuit breaker manually when a circuit breaker is tripped by OCR.
- When a circuit breaker tripped by fault current, a mechanical trip indicator (MRB, Manual Reset Button) pops out from the front cover and the switch (AL) which sends control signal electrically is conducted to output the information occurred from fault circuit breaker.
- MRB can be operated only by OCR but not by OFF operation of circuit breaker. To re-close a circuit breaker after a trip, press MRB to reset it for closing.



Note) The manual reset button is protruded in the event of trip.

Remote Reset Switch [RES]

- Following tripping, this function resets the "fault trip" alarm contacts (AL) and the mechanical indicator (MRB) and enables circuit breaker closing.
  Push button switch: AC 125V 10A, AC 250V 6A, DC 110V 2.2A, DC 220V 1.1A Resistive load
- In case of auto reset type circuit breaker
  Following tripping, a reset of Manual Reset Button (MRB) or Remote Reset Switch (RES) is no longer required to enable circuit breaker closing.
  The mechanical indicator (MRB) and electrical indicator (AL) remain in fault position until the reset button is pressed.
- AL2 and RES are alternative.

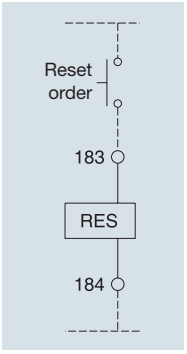


Wiring Diagram

1. Rated voltage and rated current of RES


Rated voltage	Operating current (Max.)	Operating time	Wire spec.
AC 110~130V	3.7A	Less 40ms	#16 AWG (1.31mm²)
DC 110~125V	2.4A		
AC 200~250V	2.2A		

2. Appearance

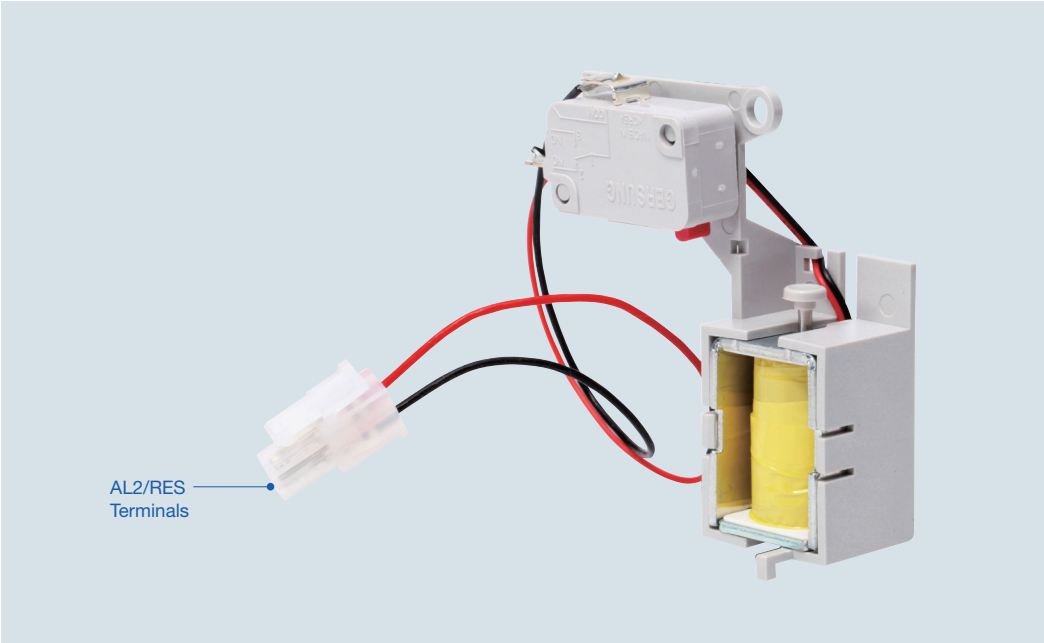

Ready to Close Switch [RCS]



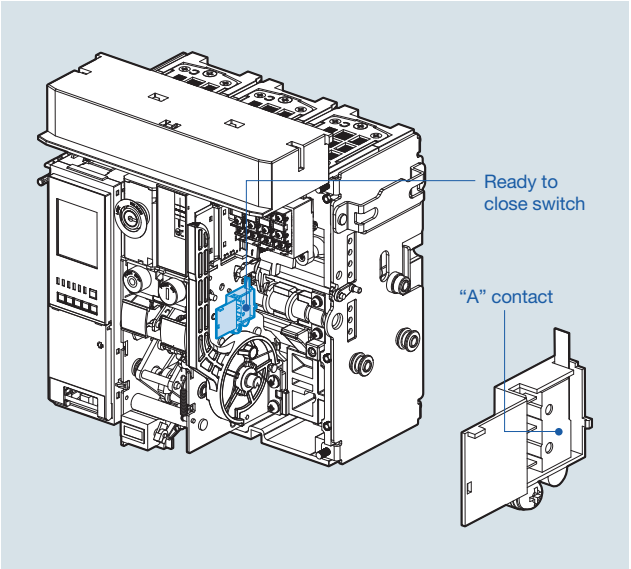


- RCS operates with the mechanism of the Breaker.
- It indicates the status of the Breaker that is ready for closing operation.
- When mechanism is in OFF and Charged position, the contact closes which indicates that mechanism is ready to be closed.

Classification	Standard		Remark
Contactor Capacity	250Vac	3A	
	250Vdc	5A	
	125Vdc	0.6 A	

Counter [C]




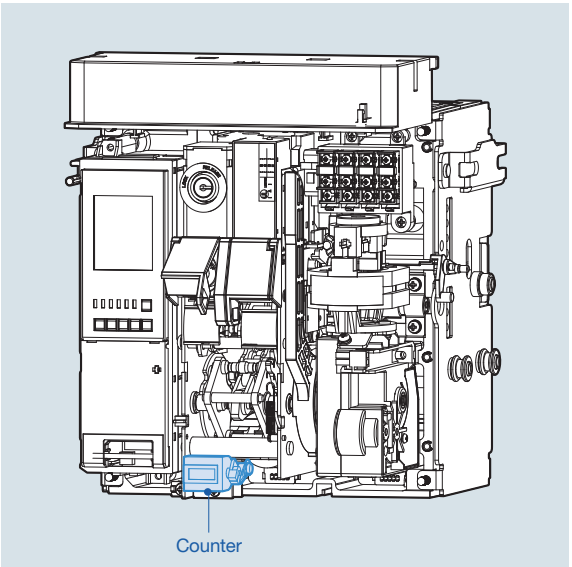

- It displays the total number of ON/OFF operation of ACB.

Key Lock [K1]



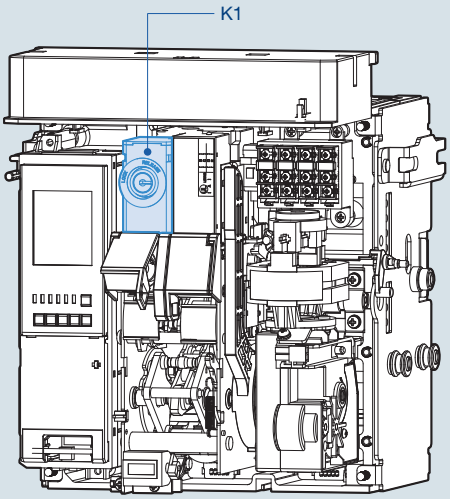


- It is a device for locking which prevents a certain circuit breaker from being operated by user's discretion when two or more circuit breakers are used at the same time.
- K1: Preventing mechanical closing

Key Interlock Set [K2]

Wiring



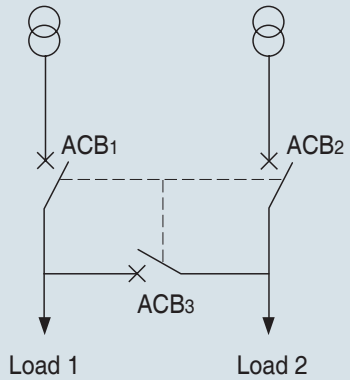

- 3 circuit breakers can be arranged for the continuous power supply to the load side and be interlocked mutually by using Key Lock embedded in each circuit breaker. Two same keys will be provided.

* How to order: 3 breakers must be ordered as a set, and K2 description must be added to the additional breakers. (2 keys are provided per 3 breakers.)


ACB–1	ACB–2	ACB–3	Status	
			LOAD1	LOAD2
●	●	●	OFF	OFF
●	○	○	ON	ON
○	●	○	ON	ON
○	○	●	ON	ON
●	●	○	OFF	OFF
●	○	●	OFF	ON
○	●	●	ON	OFF

○: Release ●: Lock

Accessories

Auxiliary Switch [FX]



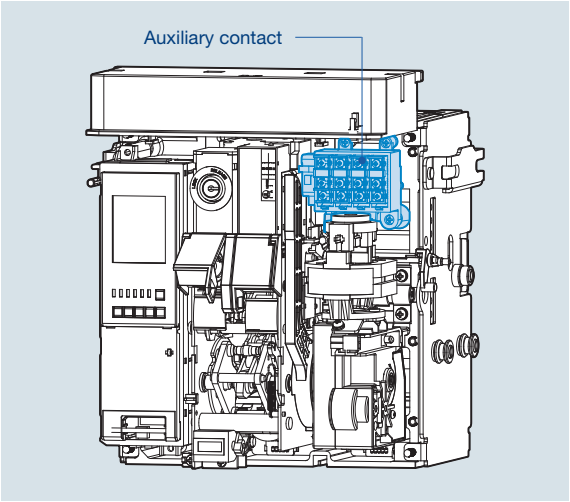

- It is a contact used to monitor ON/OFF position of ACB from remote place.

∗Auxiliary switch for micro load (Order No. 83011176209)

Classification

Switch classification	Description	Resistive load	
		MAX.	MIN.
Standard	FC, FX, LC	AC250V 3A AC125V 5A	DC5V 160mA
Micro load	Oder No. 8301176209	AC125V 0.1A DC30V 0.1A	DC5V 1mA

ON/OFF Button Lock [B]






- It is to prevent manual operation of ACB's closing/tripping button due to user's wrong handling.
- It is not possible to handle ON/OFF operation under the "Button lock" status.
  (Electrical ON/OFF operation is possible)

Note) Padlocks(Ø5 ~ Ø6) are not supplied.

Lifting Hook [LH]

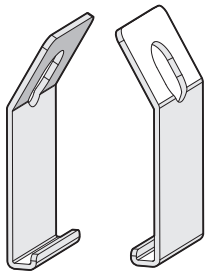



- It is a device to make an ACB easy to shift.
- Please hang it to both handles of the cradle.

Condenser Trip Device [CTD]




- It gets a circuit breaker tripped electrically within regular time when control power supply is broken down and is used with Shunt coil, SHT. In case there is no DC power, It can be used as the rectifier which supplies DC power to a circuit breaker by rectifying AC power.


Ratings

Ratings	Specification	
Model	CTD–100	CTD–200
Rated input voltage (V)	AC 100/110	AC 200/220
Frequency (Hz)	50/60	50/60
Rated charge voltage (V)	140/155	280/310
Charging time	Within 5s	Within 5s
Trip possible time	Over 3 min	Over 2 min
Range of Input voltage (%)	85~110	85~110
Condenser capacity	1000㎌	560㎌

External dimension

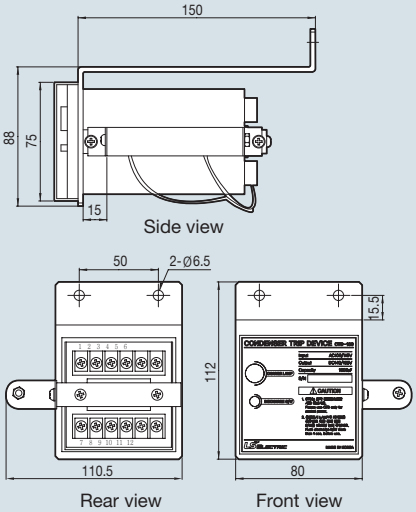

Circuit diagram

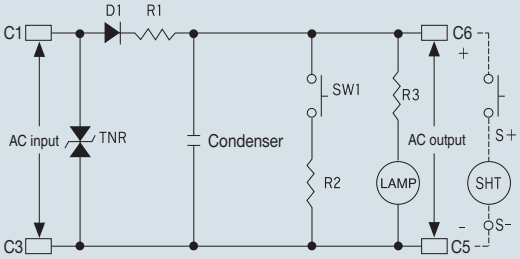

Accessories

i-Tester

The i-Tester (Intelligent Tester) is an accessory to test-drive ACB/MCCB. As a stand-alone type, it not only performs various relay tests such as manual/auto/user tests, but also has various functions such as self-calibration function, device information setting, relay setting, and device status checking. In addition, it supports 256×128 graphic LCD and supports not only English but also Chinese and Russian languages. It has the function to output the test and test results in the same way using the upper Manager S/W.

Features



- **Calibration function**
  - The calibration function of i-Tester is used to calibrates the error using the output value set in i-Tester and the measurement current data.
- **Device H/W setting function**
  - It consists of the part to set the system configuration and time of the device and the part to set the language and time of the i-Tester itself.
- **Relay setting function**
  - It consists of the part to check the current relay element of the device and the part to set the relay.
- **Relay test**
  - As a part for testing the relay, it is composed of manual/automatic/user tests so that various relay tests can be conducted.
- **Control function**
  - It provides a function to clear or reset the device data and to control DO and CB.
- **System information**
  - It consists of the device information, relay status, and tester system information.
- **Test history**
  - It consists of a part to check the test history stored in i-Tester and a part to delete the saved history information.

Specification


Type	Details
Model name	IPOT
Rated voltage	DC24V adapter, 9V alkaline battery 3EA, USB or rechargeable battery (10000mAH or more)
HMI	Graphic LCD module(256×128 Graphic LCD)
Supported language	English, Chinese, Russian
Key functions	· Device information checking function (information, DI, DO, self-diagnosis) · Relay and H/W information setting function · Device control and reset function · Relay test function - Manual/auto/user test function · Test history storage (up to 255) and output (PDF) function
LCD composition	Navigation TREE configuration for all
Size	98(W)×210.5(H)×43.5(D), unit : mm

Exterior description



Type	Details
❶ Power switch	Power On/Off function
❷ LCD	256×128 graphic LCD
❸ KEY PAD	Menu navigation, setting and operation buttons
❹ Adapter terminal	DC24V power input terminal
❺ USB terminal	USB communication connection terminal (USB2.0)
❻ Signal port	Signal terminals for device testing
❼ Battery	Equipped with 9V alkaline batteries (×3ea)

Device usage example

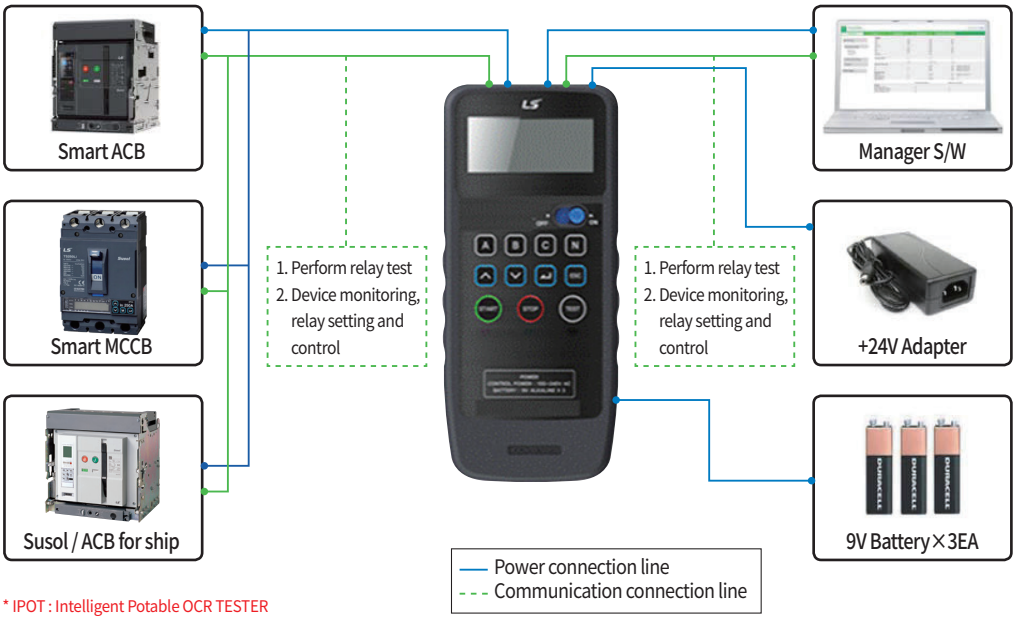


* IPOT : Intelligent Potable OCR TESTER


Target device

Circuit breaker	Smart ACB(STU), Susol/Metasol ACB(OCR), Smart MCCB, TS1600

Accessories


Dust Cover [DC] [IP54]

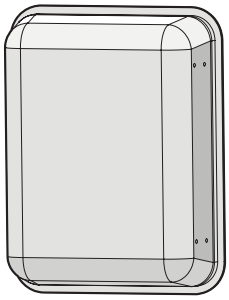


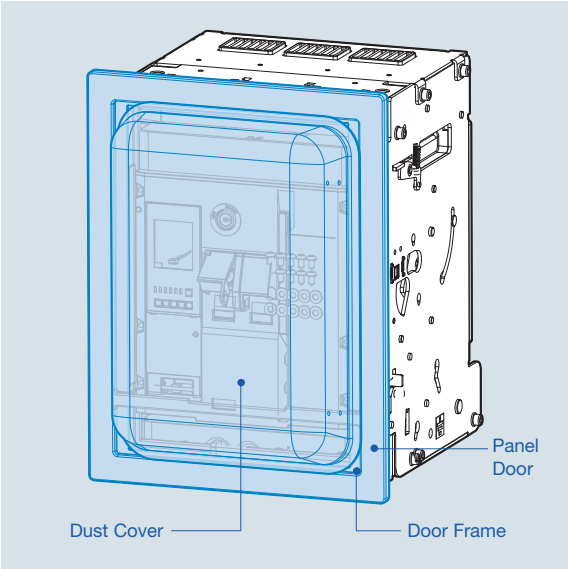

- Attach it to the door frame.
- It protects the product dust and moisture that may affect the operation of the instrument at the same time (IP54) which may cause fault operation and enhances the sealing degree by being mounted to protrude type of panel.
- It is transparent so that the front side of ACB is visible and the Cover can be opened/closed even if ACB is drawn out to until TEST position.


Mechanical Interlock [MI]

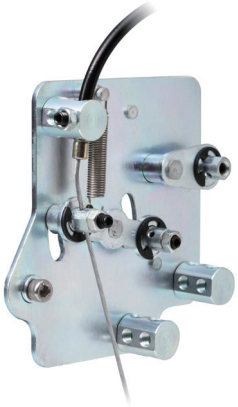


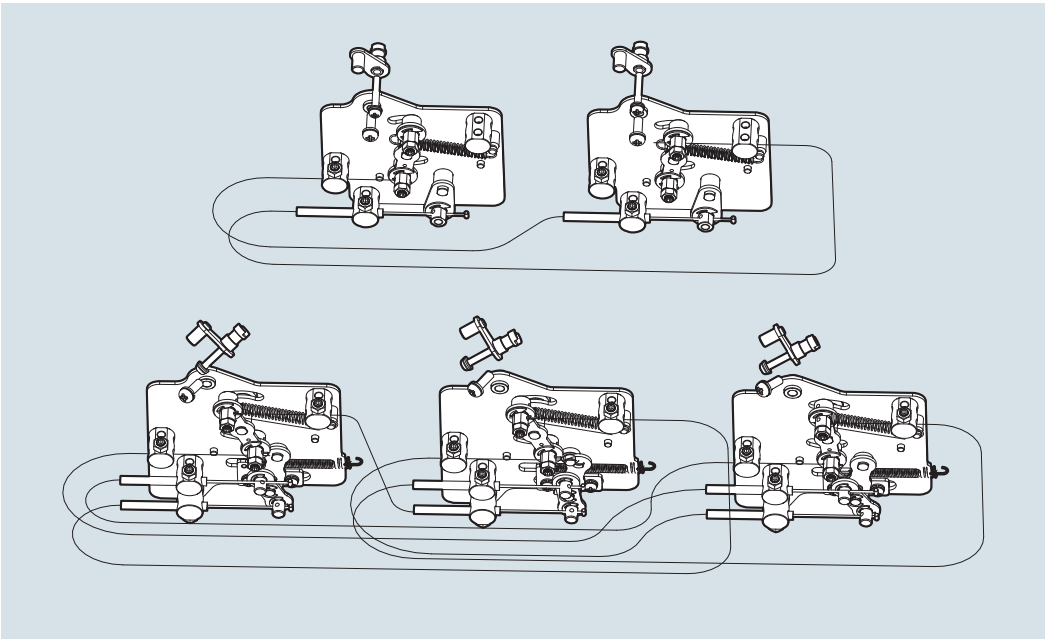


- It is used to interlock closing and trip between two or three breakers mechanically so as to prevent unintended operation at the same time.
- Wire type interlock can be applied upto 3 breakers

Mechanical Operated Cell Switch [MOC]

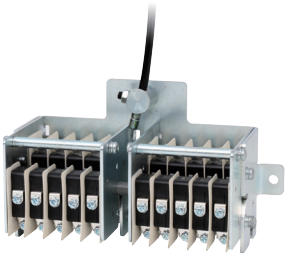


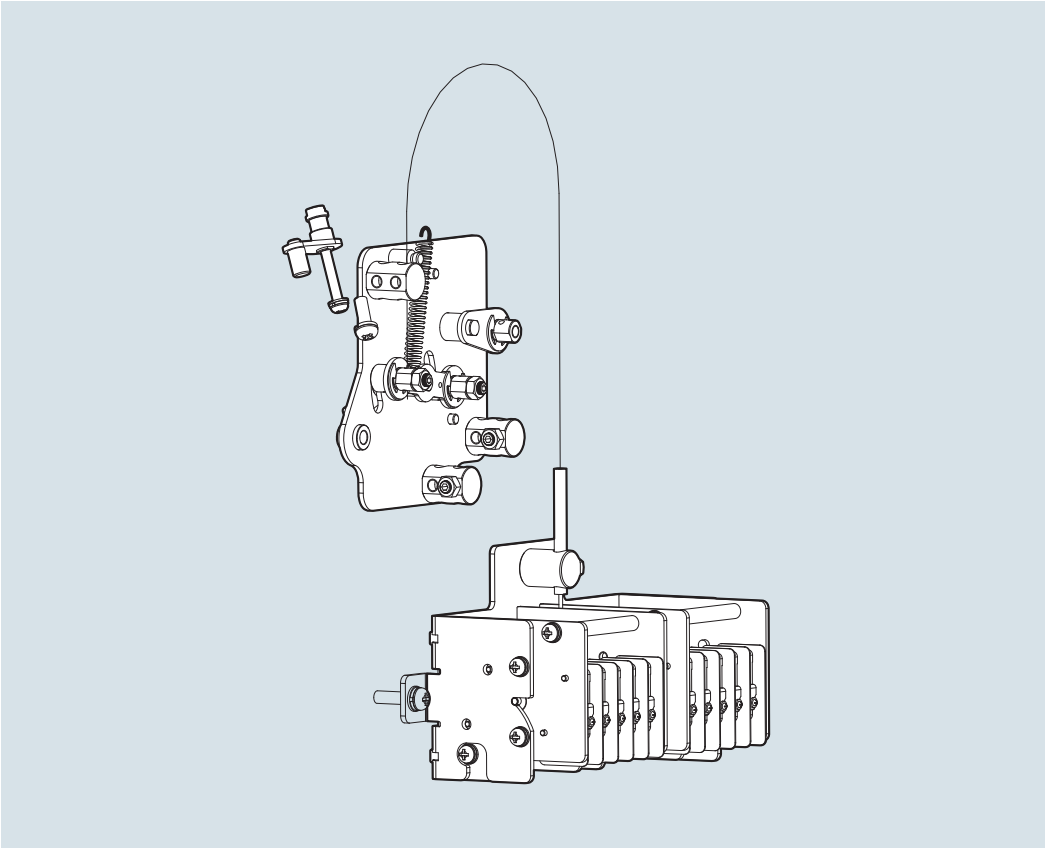


- It is the contact (10a10b) which displays the ON/OFF condition of ACB.
  It mechanically operates only when the breaker is "CONNECTED" position.
  A standard type and a high capacity type is available.
- When MOC link is installed to cradle, MOC can be equipped with the inside of panel.

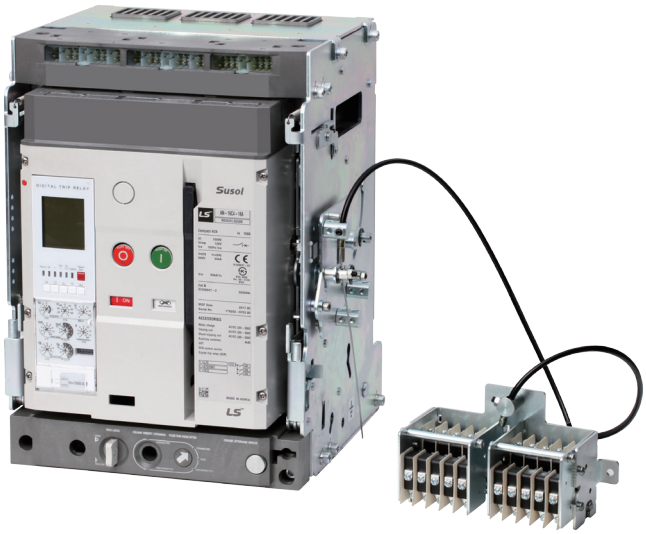

Safety Shutter [ST]

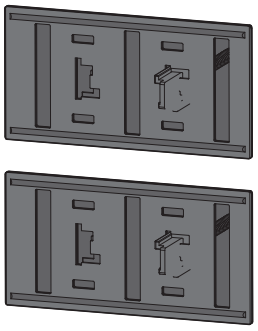

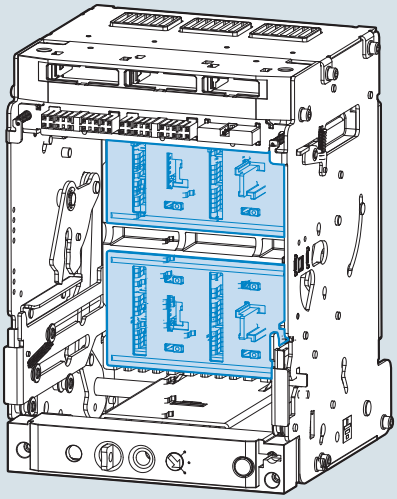


- It is the automatic safety device to protect the connectors of main circuit by cutting off dangerous contact from outside while the breaker is drawn out. When the ACB is drawn in, the shutter is automatically opened.
- Plate Shutter is a total of 2 models


The types of safety shutter plate
3P

4P



Door Frame [DF] [IP3X]

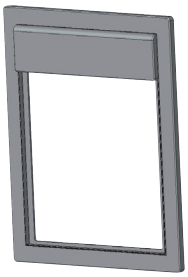


Fixed type

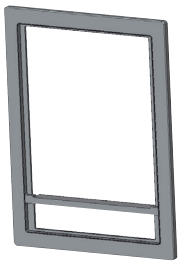

Draw-out type

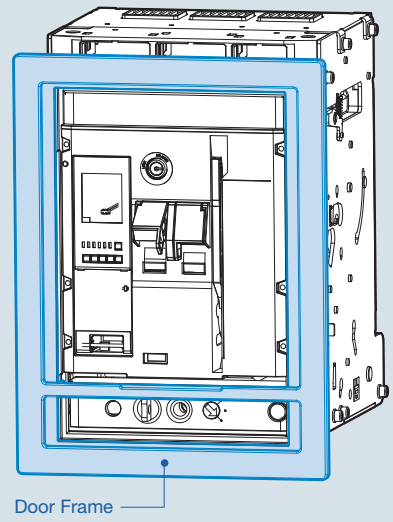



- When structuring the embedded type of ACB panel, it protects the protrude front of ACB and the cutting side of panel door by attaching it to the panel door.

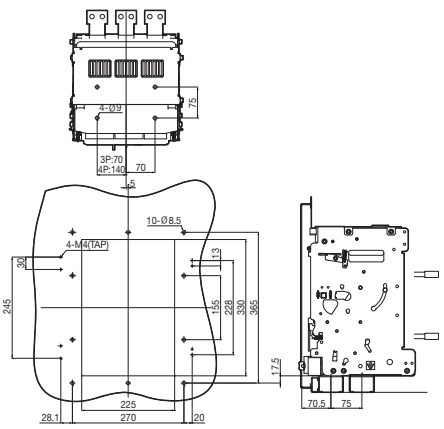

Switchboard door cut dimension

Interphase Barrier [IB]

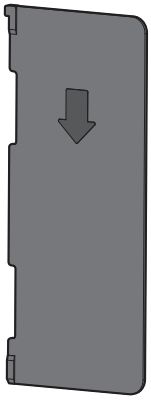


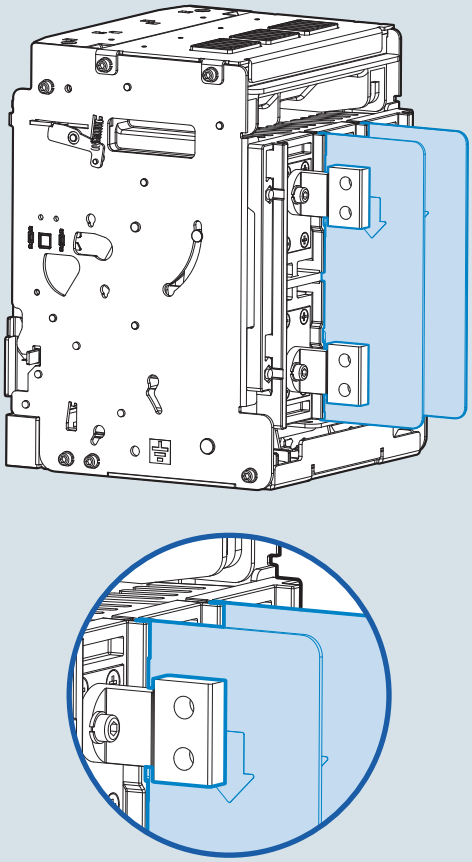


Draw-out type

- Interphase barrier prevents the arc which may arise and result in short-circuit between phases in advance

Cell Switch [CEL]

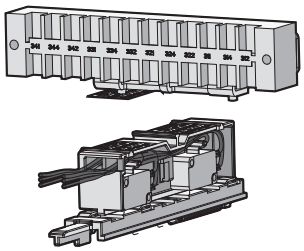

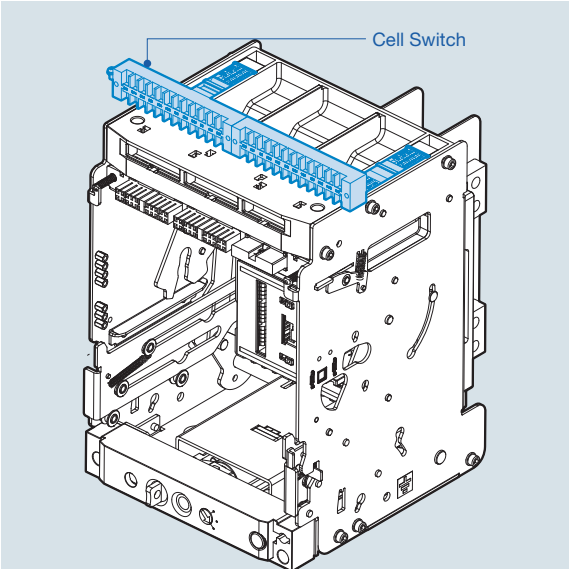

• It is a contact which indicates the present position of ACB. (CONNECTED, TEST, DISCONNECTED)


<Contact configuration>
4C: 1Disconnected +1Test +2Connected
8C: 2Disconnected +2Test +4Connected

※ Contact configuration can be changeable if necessary.


Operating characteristic

ACB position			DISCONNECTED		CONNECTED
Draw-in and draw-out position			DISCONNECTED	TEST	CONNECTED
Contact operation	CL–C (CONNECTED)		OFF		ON
	CL–T (TEST)		OFF	ON	
	CL–D (DISCONNECTED)		ON	OFF	
Contact capacity	Voltage (V)		Resistive load		Inductive load
	AC	460	5		2.5
		250	10		10
		125			
	DC	250	3		1.5
		125	10		10
		30	10		
Contact number			4C		

Terminal (4C, 8C)

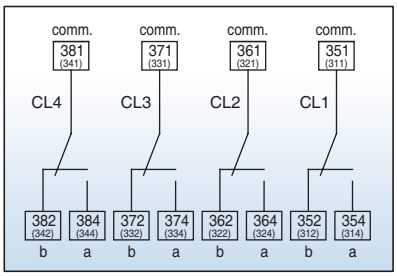


4C attached to the right side of cradle

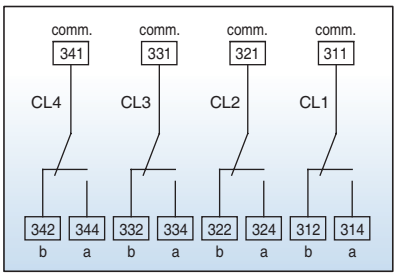


4C attached to the left side of cradle


Door Interlock [DI]

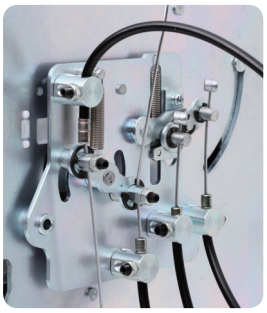

Wite type

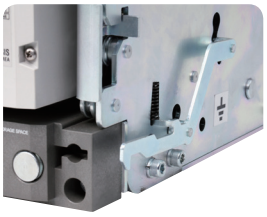

Catch type

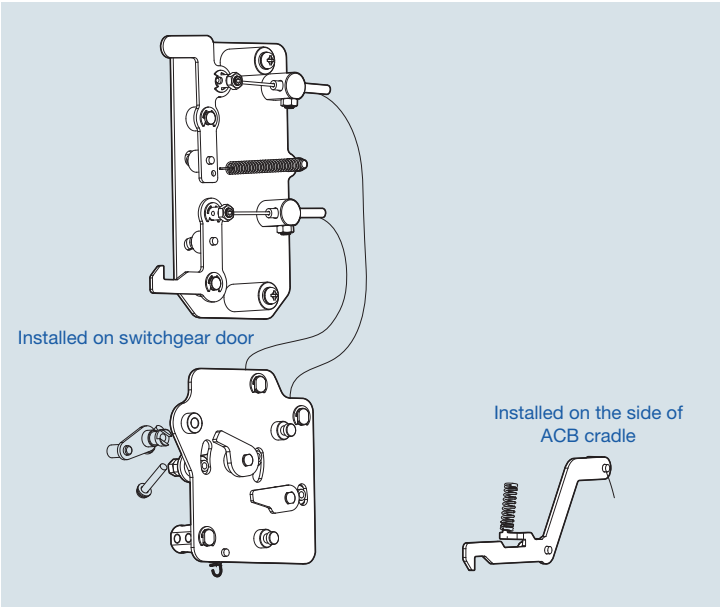


- It is a safety device which does not allow the panel door to open when a circuit breaker is in the “ON” position.

Zero Arc Space [ZAS]



- Arc which may arise while breaking fault current is extinguished first by Arc chute in main body of circuit breaker and then completely extinguished by Arc cover.
  By preventing arc from exposing to the outside, it protects itself from all kinds of accidents.


Racking Interlock [RI]

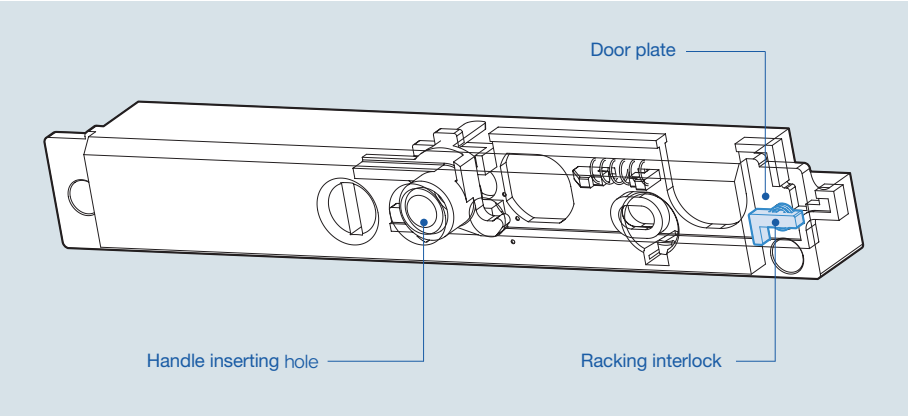

- When panel door is opened, Draw in/out handle doesn't be inserted. Thus, panel handle can be inserted only when panel door is closed.

Pad Lock / Position Lock [PL]




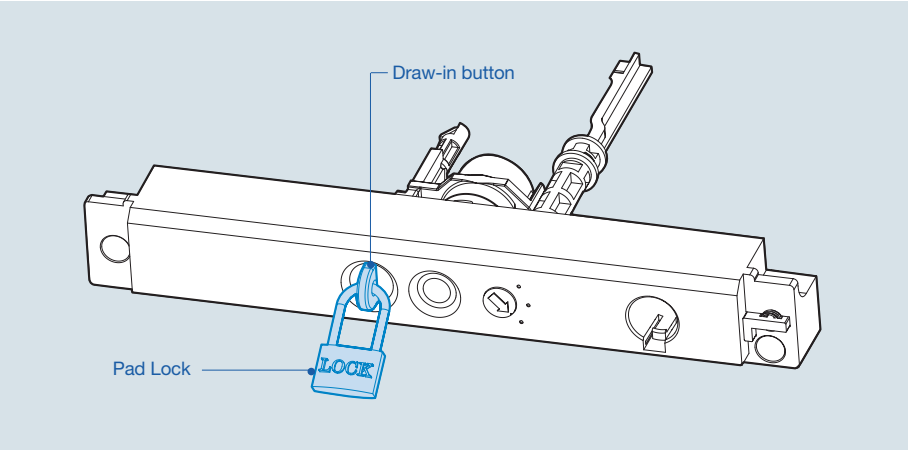


ACB is subject to restriction regarding moving in connected, test, disconnected when drawing in or out. If main body of ACB is placed in 3 positions, it is locked and stopped when drawing in or out.

- As shown in the figure, if draw-in/out button pops out, it means locking is operating.
- To continue Draw-in/out operation, release lock by pushing Draw-in/out button
- In case it is locked as shown in the figure above, main body of ACB can not be drawn in or out into the cradle.
- For the lock device, user has to purchase it. (Ø5 ~ Ø6)

Miss Insertion Prevent Device [MIP]

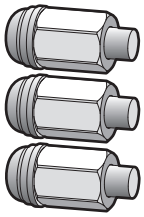

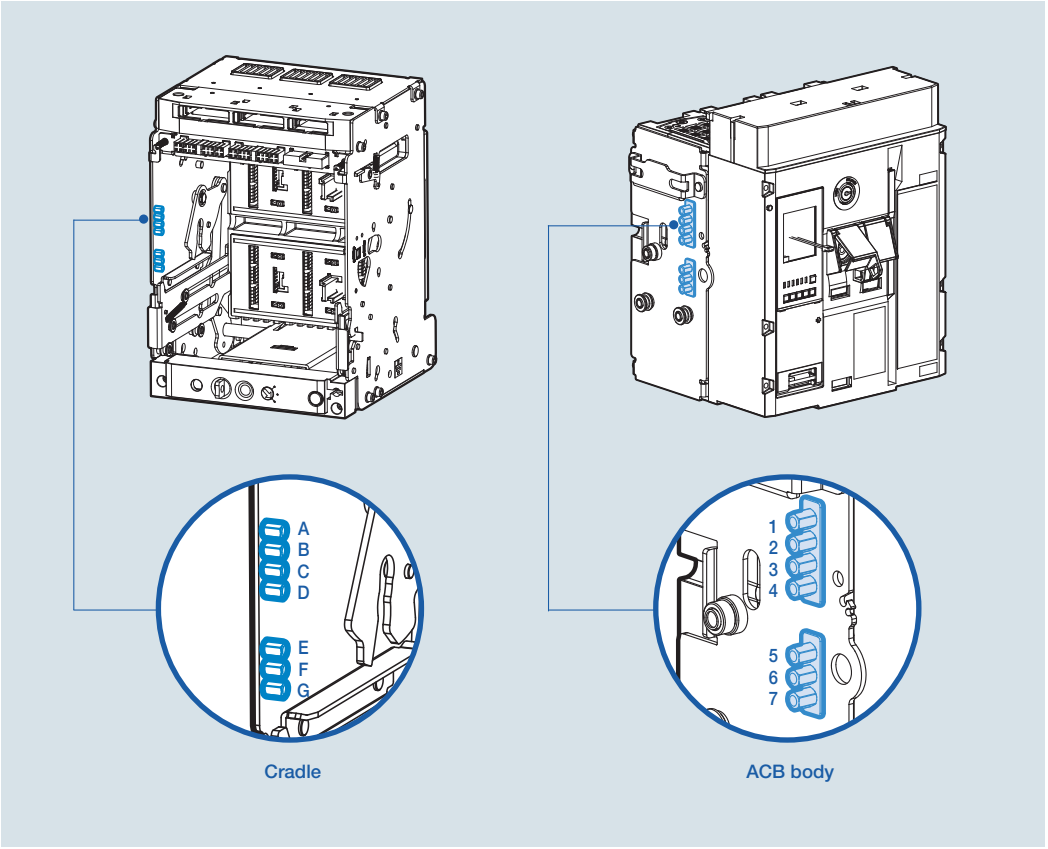


- When the main body of ACB is inserted to the cradle, if the ratings of ACB does not match with cradle, it mechanically prevents ACB from being inserted into cradle of ACB.
- The installation method is variable according to ratings.

	Rating	Cradle	ACB
AN	400	ABCD	567
	600	ABCE	467
	630	ABCF	457
	800	ABCG	456
	1000	ABDE	367
	1200	ABDF	357
	1250	ABDG	356
	1600	ABEF	347

	Rating	Cradle	ACB
AH	400	ABEG	346
	600	ABFG	345
	630	ACDE	267
	800	ACDF	257
	1000	ACDG	256
	1200	ACEF	247
	1250	ACEG	246
	1600	ACFG	245

	Rating	Cradle	ACB
AR	400	ADEF	237
	600	ADFG	235
	630	AEFG	234
	800	BCDE	167
	1000	BCDF	157

UVT Time Delay Controller [UDC]

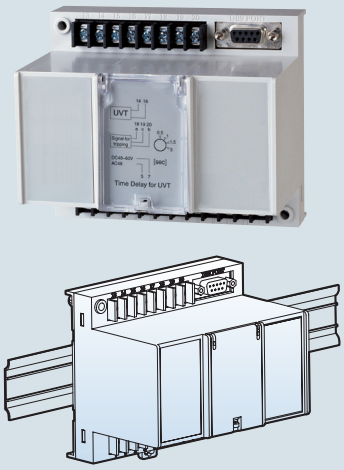

Attached to din-rail or switchboard


- UVT is a device which makes ACB tripped automatically to prevent the accident on load side due to under voltage or power breakdown. There are two types, Instantaneous type and time delay type.
- Instantaneous type: only available with UVT coil.
- Time delay type: available by connecting UVT coil and UVT time delay controller.
- Common use for the all types.

1. The rated voltage and characteristic of UVT time delay controller

Rated voltage (Vn)		Operating voltage range (V)		Power consumption (VA or W)		Trip time (s)
DC (V)	AC (V)	Pick up	Drop out	Inrush	Steady-state	
48~60	48	0.65~0.85 Vn	0.4~0.6 Vn	200	5	0.5, 1, 1.5, 3
100~130	100~130					
200~250	200~250					
–	380~480					

Note) 1. Operating voltage range is the min. rated standard for each rated voltage (Vn).
2. It will operate on time when the power is supplied enough to the UDC over the set of trip time.

2. Wiring

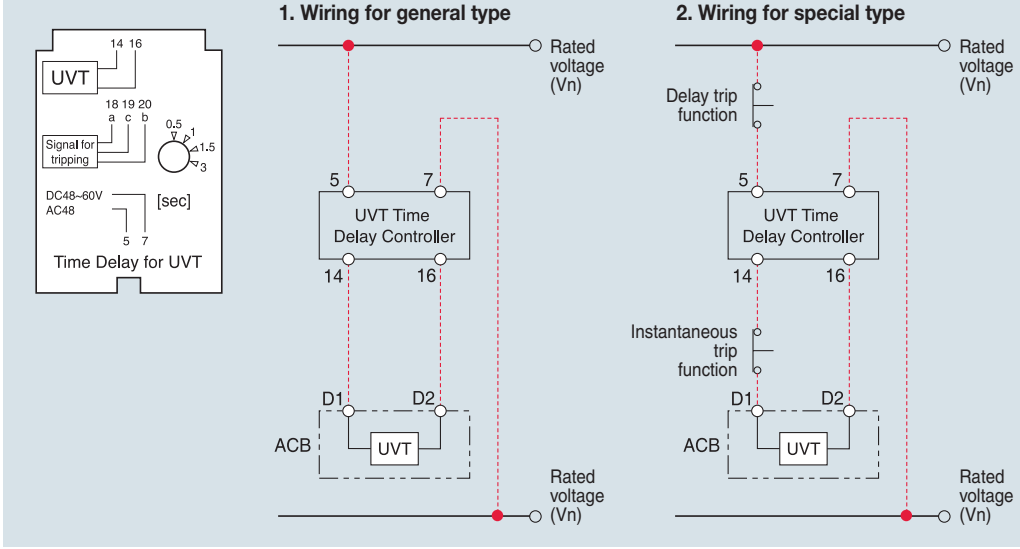



* The wiring presented with red color should be set by uesers.

Remote I/O Unit [RCO]




Remote I/O Unit

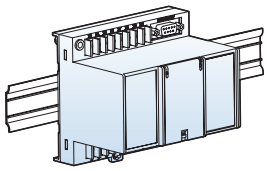

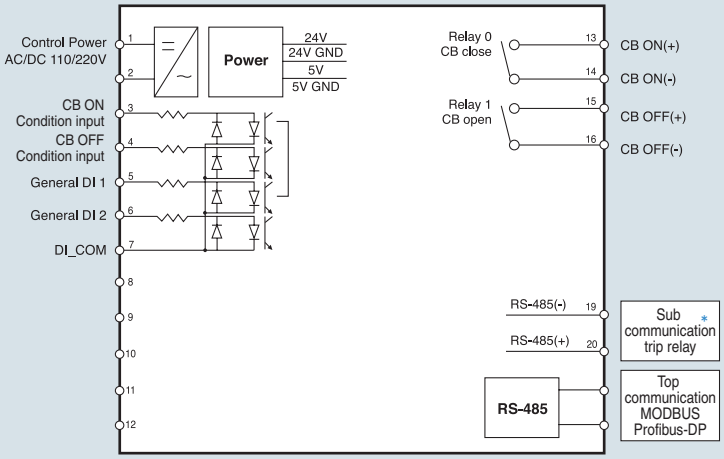

*In case of using Profibus-DP communication, it needs to communicate with ACB trip relay.

Classification		Applied range	Remarks
CB control	Contact switching capacity	AC230V 16A / DC30V 16A	
	Max. switching capacity	3680VA, 480W	
Alarm	Contact switching capacity	AC230V 6A / DC25V 6A	Induction load (cosØ=0.4, L/R=7ms)
	Max. switching capacity	1880VA, 150W	

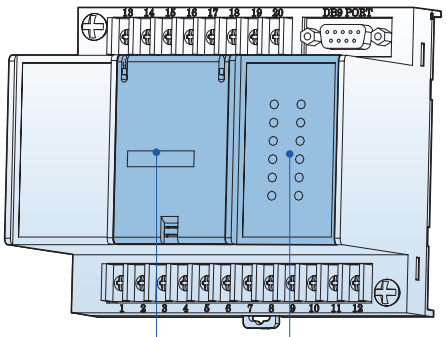


- Baud rate setting
- Comm. address setting
- Temperature setting

- Remote I/O unit has the I/O contact which can trip or close the ACB from the remote site by communication.
- For the General DO, the output of DI1 or DI2 is selectable.
- Remote I/O Unit communicates with Modbus / RS-485 communication basically, Profibus-DP need to be purchased separately.
- It supports SBO (Select Before Operation) function and guarantees the control reliability.
- Remote I/O Unit can be installed on the cradle of ACB or the inside of panel.

LED		Status
1	DI1	Indicates digital Input #1condition
2	DI2	Indicates digital Input #2condition
3	DO ON	Indicates temperature alarm output is ON
4	DO OFF	Indicates temperature alarm output is OFF
5	CB ON	Indicates circuit break close condition
6	CB OFF	Indicates circuit break open condition
7	RUN LED	Indicates unit run condition
8	CB ERROR	Indicates circuit break terminal Disconnection/control Err condition

This diagram is based on “CONNECTED”position of a circuit breaker and Opening, Motor charging, Releasing of locking plate should be normal condition.

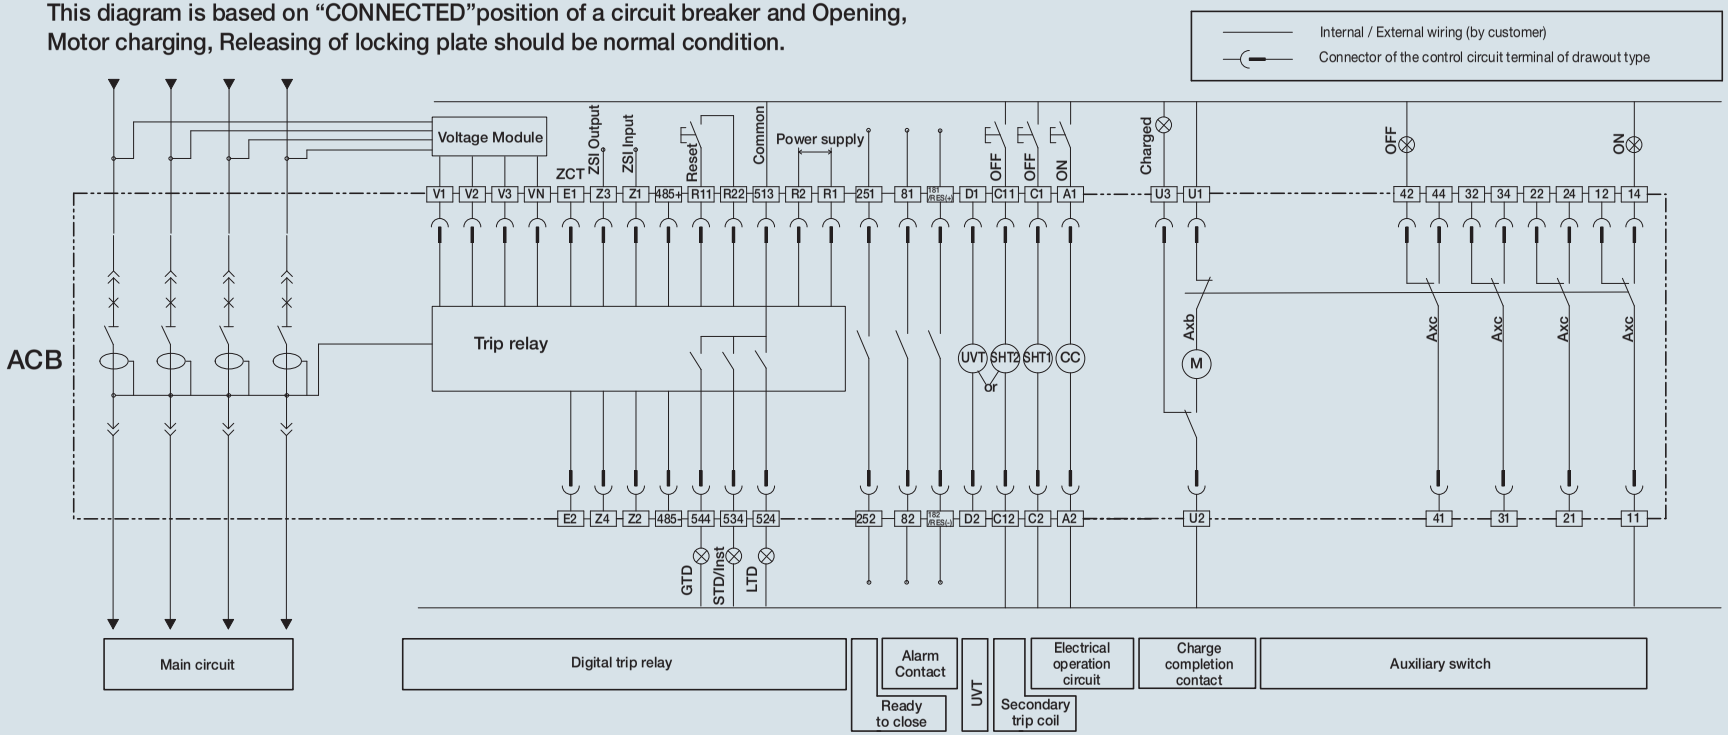

Terminal code description

11 12 ~ 41 42	Auxiliary switch "b" contact
11 14 ~ 41 44	Auxiliary switch "a" contact
U3 U2	Charge completion signal
U1 U2	Motor charging
A1 A2	Closing coil
C1 C2	Shunt trip
C11 C12	2nd shunt trip


D1 D2	Voltage input terminal of UVT coil
81 82	Alarm1 "a" contact
181 182	Alarm2 "a" contact or RES Coil
251 252	Ready to close switch
R1 R2	Control power for trip unit
513 ~ 544	Fault cause indication contacts
R11 R22	Alarm reset (Trip cause LEDs, contacts)


Z1 Z2	ZSI input
Z3 Z4	ZSI output
E1 E2	ZCT
VN ~ V3	Voltage module
485+ ~ 485+	RS-485 Communication
311 ~ 344	Cell switch

Accessory code description

Axc	Auxiliary switch
LTD	Long time delay trip indicator
STD/Inst	Short time delay/instantaneous
GTD	Ground fault trip indicator
CL1~CL4	Cell switch
M	Motor
CC	Closing coil
SHT1	1st Shunt coil
SHT2	2nd Shunt coil
UVT	UVT coil

Note) 1. The diagram is shown with circuit de-energized, all devices open and charged and relays in normal position
2. Relay is normal condition and charging type is "Off-Charging"
3. The standard of auxiliary contact is 4C.
4. Option
- Ready to close contact, Trip alarm contact, UVT coil, Fully charged contact, secondary trip coil
- Temperature module, Voltage module, ZCT, ZSI
5. Please consult us for the use of ZSI (Zone selective Interlocking)
6. For connecting RS-485 verify if the polarity is correct
7. Contact configuration for Cell Switch can be changeable if necessary

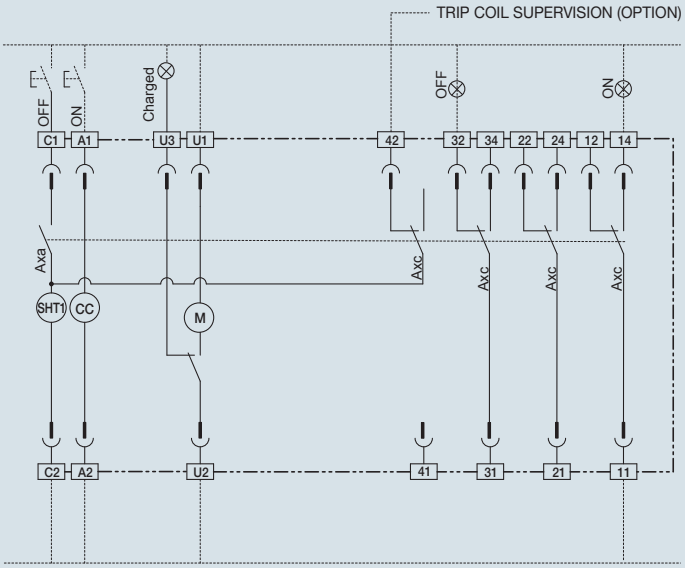

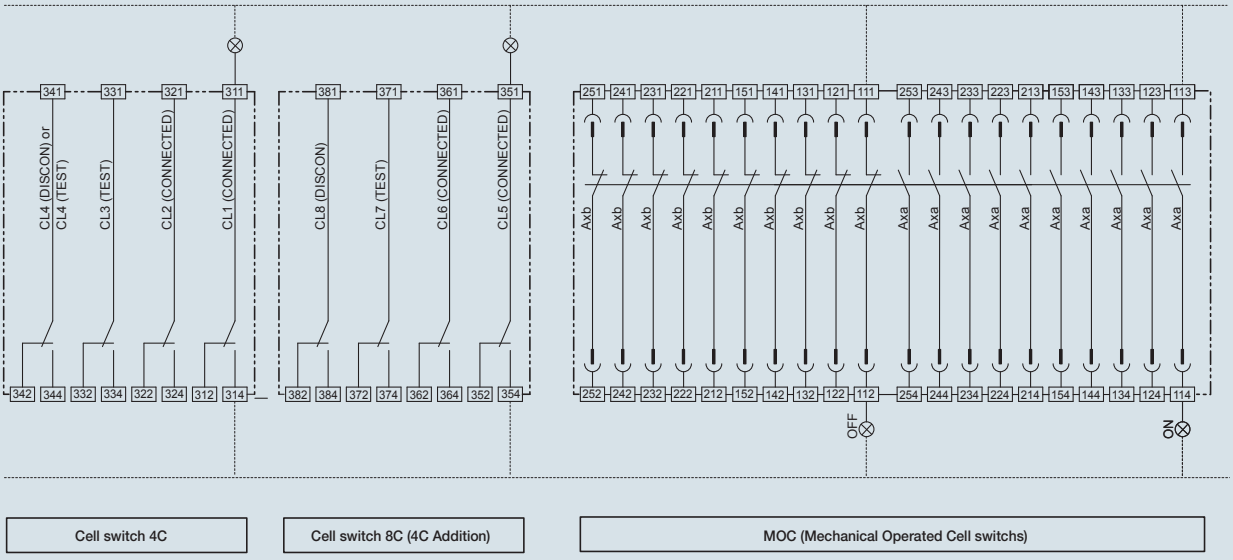


Terminal symbol

311 ~ 344	Cell switch
111 ~ 254	MOC

Dimensions

• 3P [Fixed H: Horizontal type / V: Vertical type]


(Unit : mm)

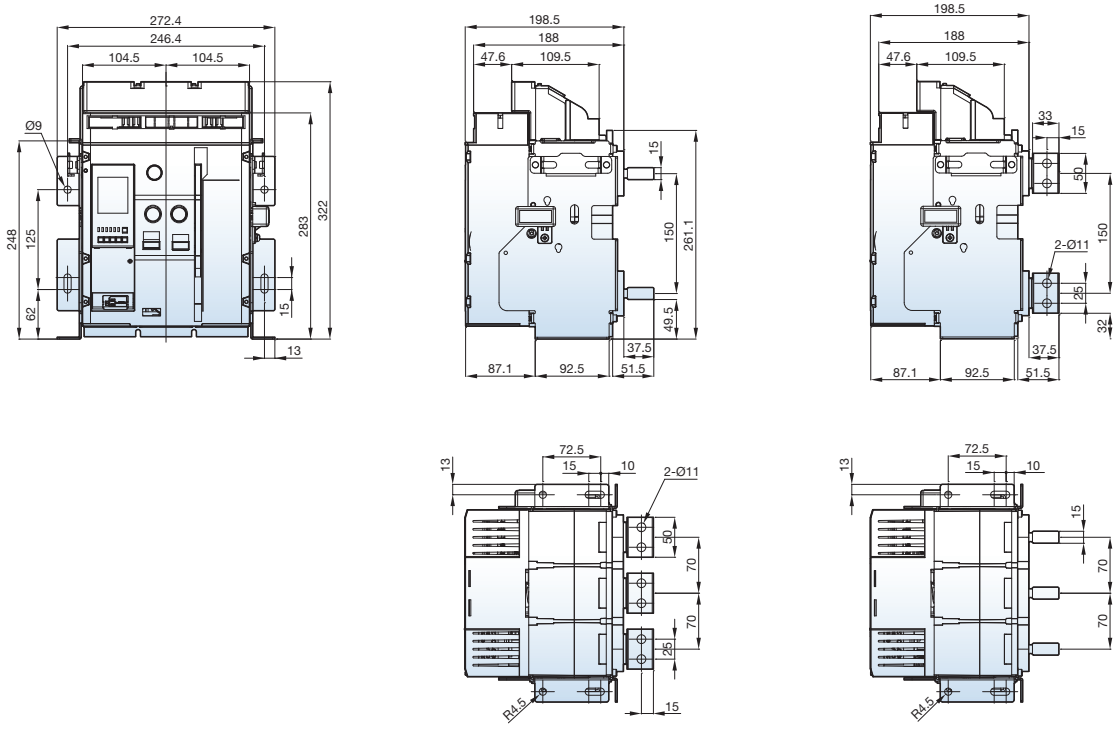

H Type (Horizontal type)

V Type (Vertical type)

• 3P [Fixed M: Upper-Horizontal type, Lower-Vertical type / N: Upper-Vertical type, Lower-Horizontal type]

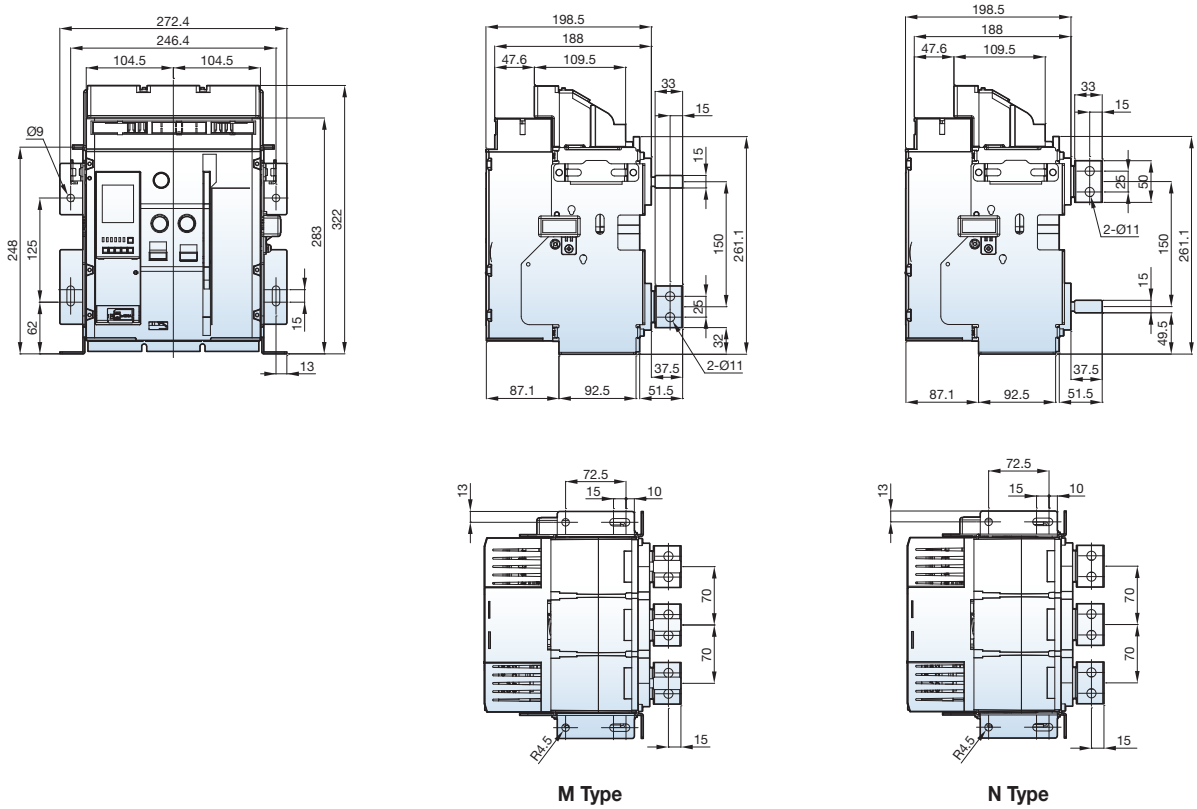



M Type
(Upper-Horizontal type, Lower-Vertical type)


N Type
(Upper-Vertical type, Lower-Horizontal type)


• 3P [Fixed P: Plane type / R: Spread type]

(Unit : mm)

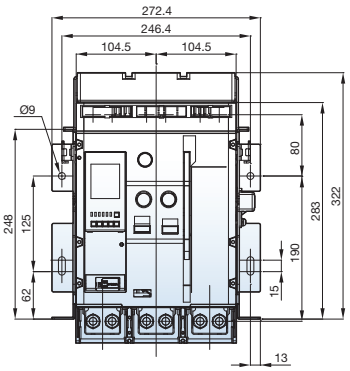


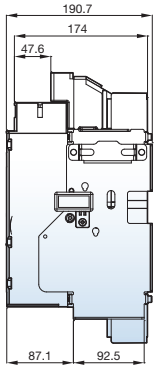

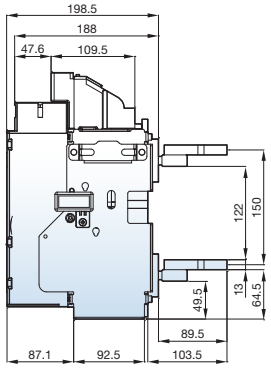

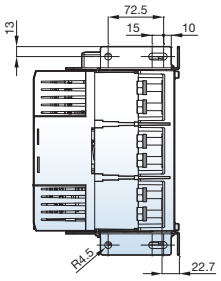



P Type (Plane type)

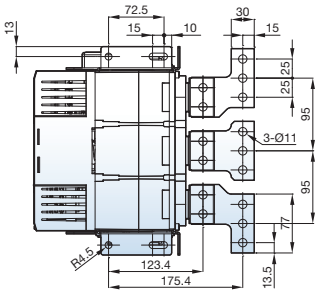



R Type (Spread type)

• 3P [Fixed Z: Plane spread type / T: Plane vertical type]

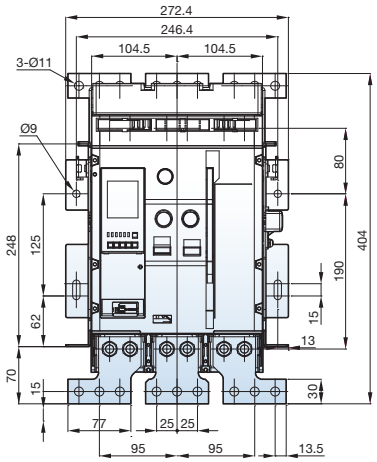


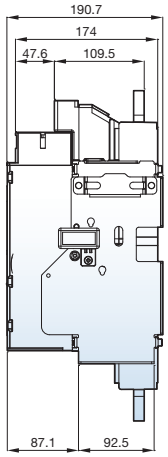

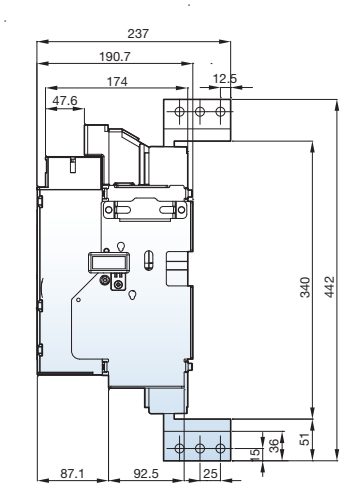

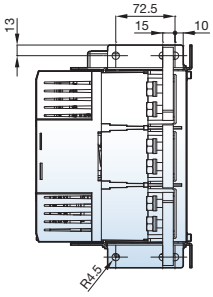

Z Type (Plane spread type)

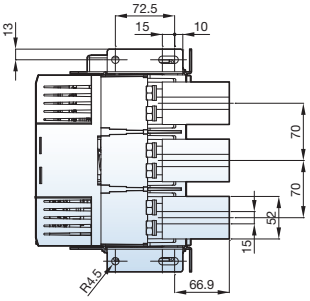



T Type (Plane vertical type)


Dimensions

• 3P [Fixed X: Cable lug type]

(Unit : mm)

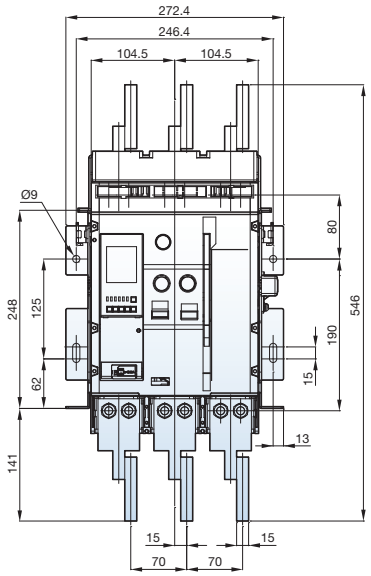

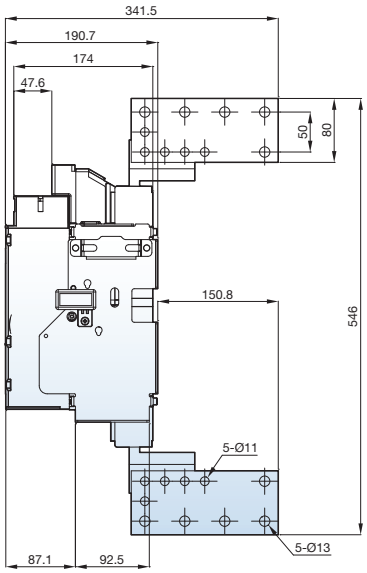


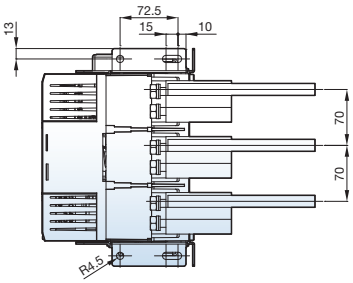

X Type (Cable lug type)

• 4P [Fixed H: Horizontal type / V: Vertical type]


(Unit : mm)

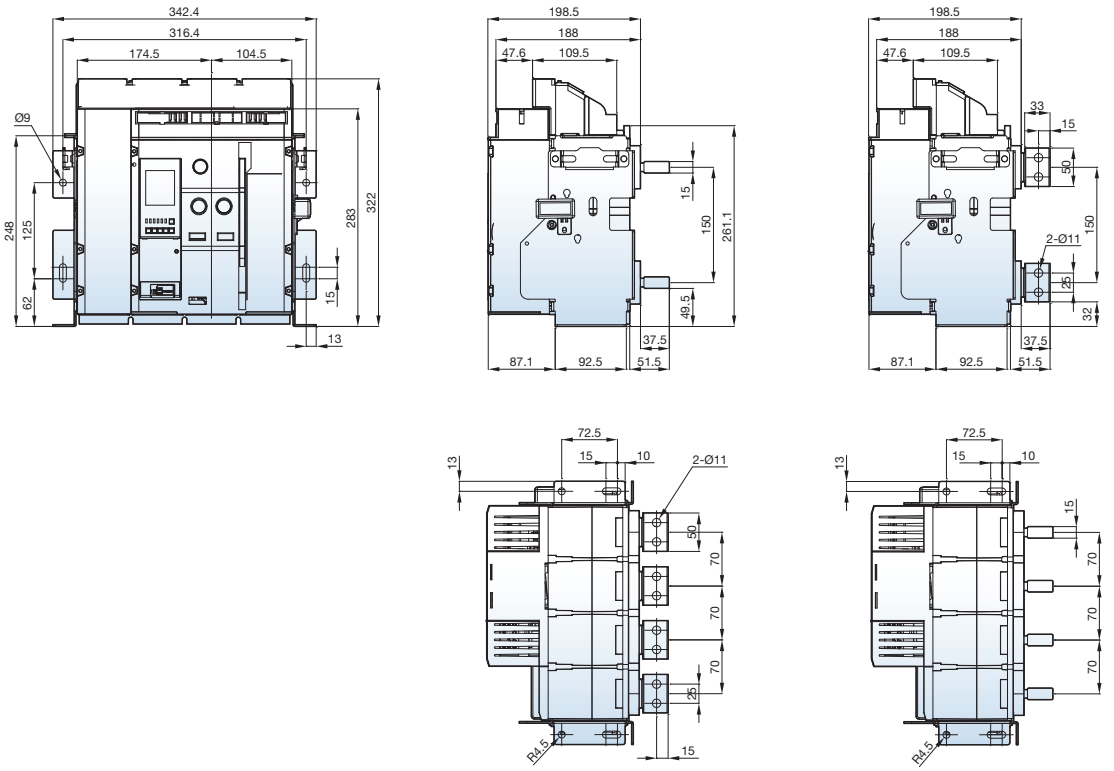

H Type (Horizontal type)

V Type (Vertical type)

• 4P [Fixed M: Upper-Horizontal type, Lower-Vertical type / N: Upper-Vertical type, Lower-Horizontal type]

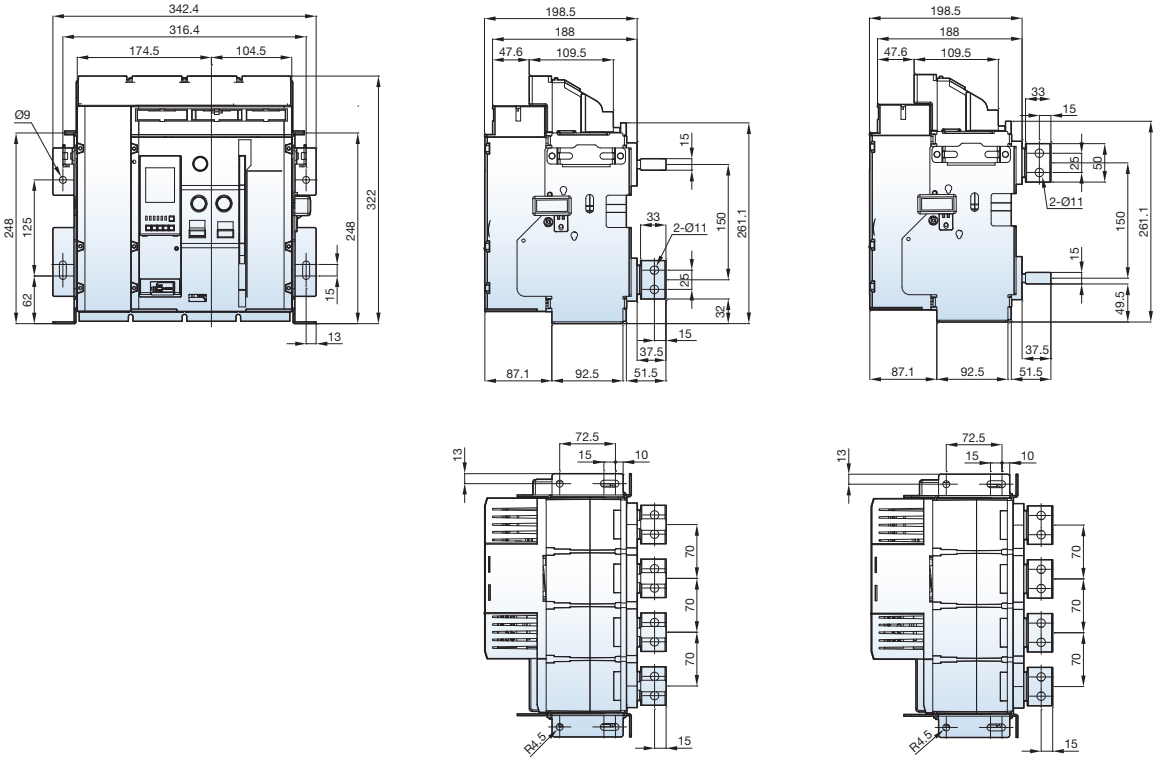


M Type
(Upper-Horizontal type, Lower-Vertical type)


N Type
(Upper-Vertical type, Lower-Horizontal type)


Dimensions


• 4P [Fixed P: Plane type / R: Spread type]

(Unit : mm)

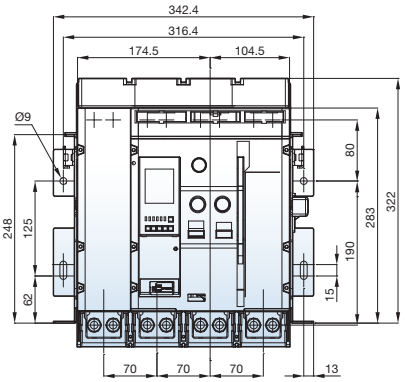


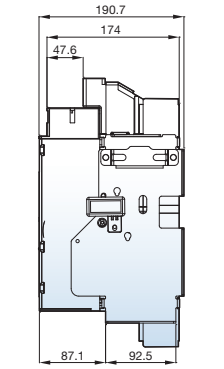

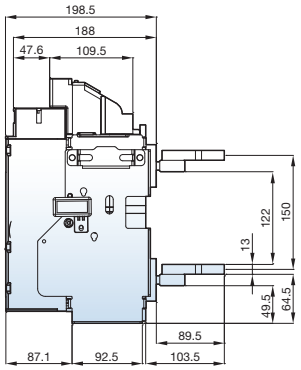

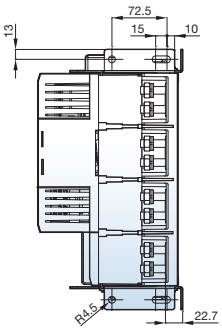



P Type (Plane type)

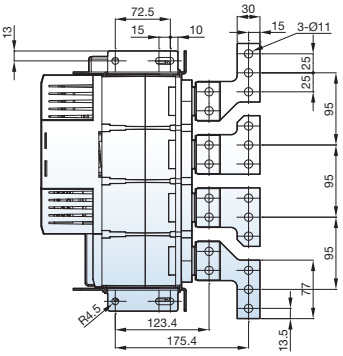



R Type (Spread type)

• 4P [Fixed Z: Plane spread type / T: Plane vertical type]

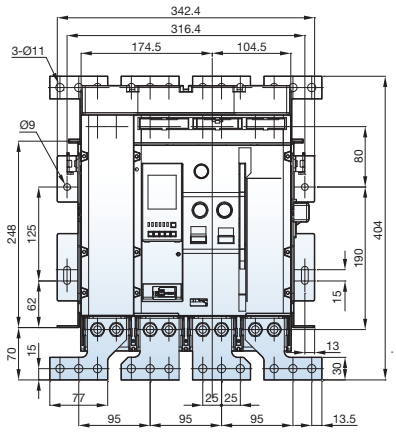


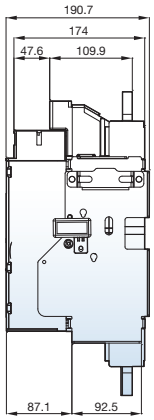

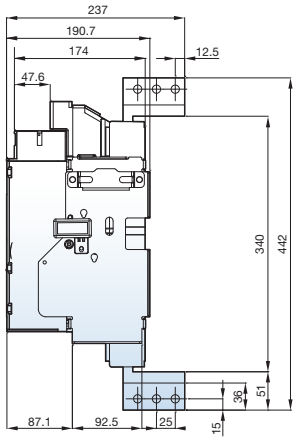

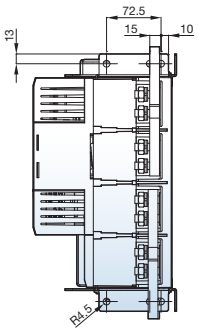


Z Type (Plane spread type)

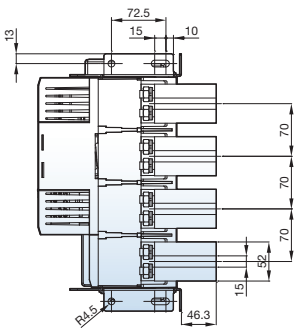



T Type (Plane vertical type)

• 4P [Fixed X: Cable lug type]

(Unit : mm)

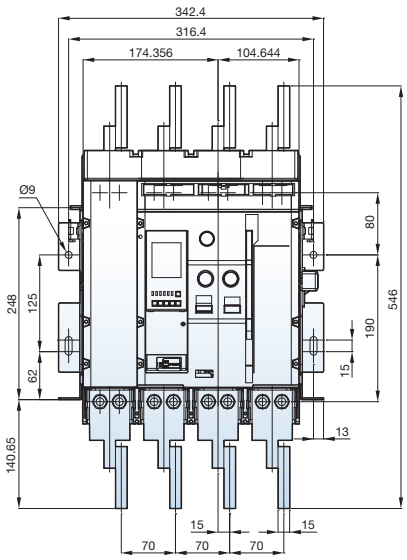


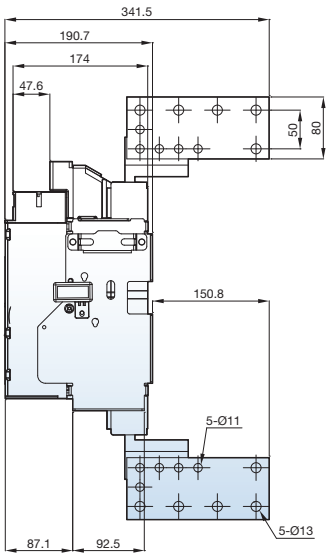

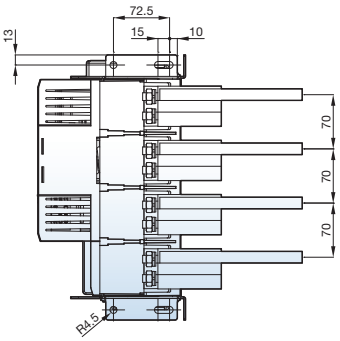

X Type (Cable lug type)


Fixed Door Frame: DF

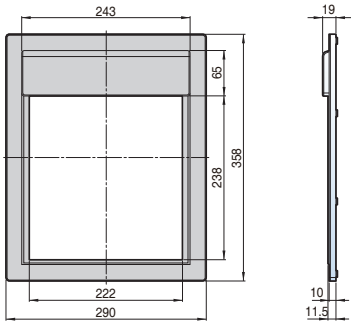



Dimensions


• 3P [Draw-out H: Horizontal type / V: Vertical type]


(Unit : mm)

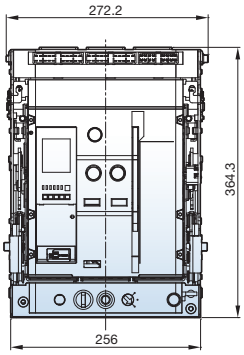

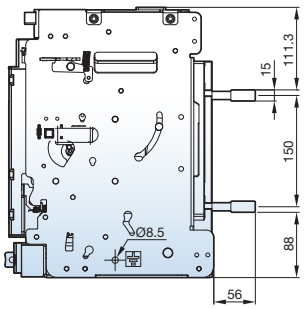

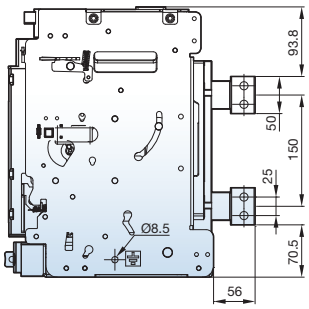

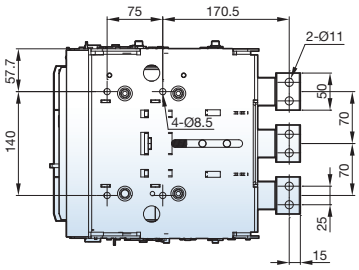


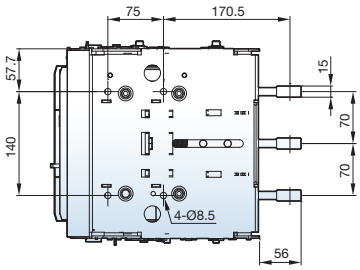



H Type (Horizontal type)


V Type (Vertical type)


• 3P [Draw-out M: Upper-Horizontal type, Lower-Vertical type / N: Upper-Vertical type, Lower-Horizontal type]

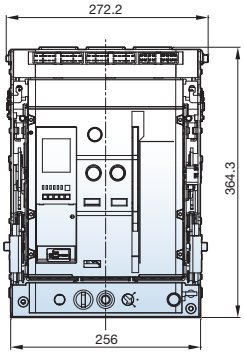

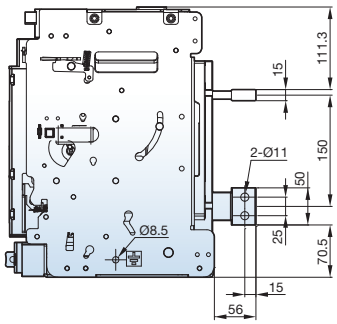

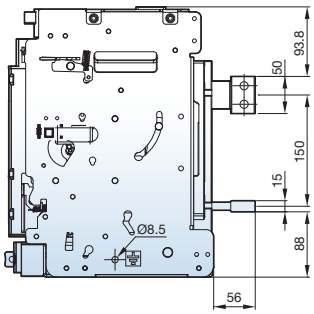

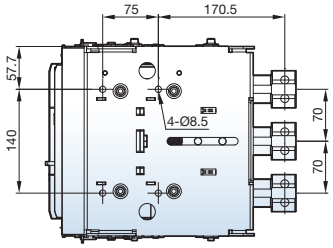

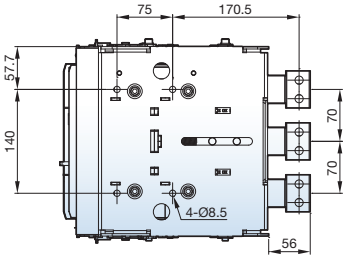


M Type
(Upper-Horizontal type, Lower-Vertical type)

N Type
(Upper-Vertical type, Lower-Horizontal type)

• 3P [Draw-out P: Plane type / R: Spread type]


(Unit : mm)

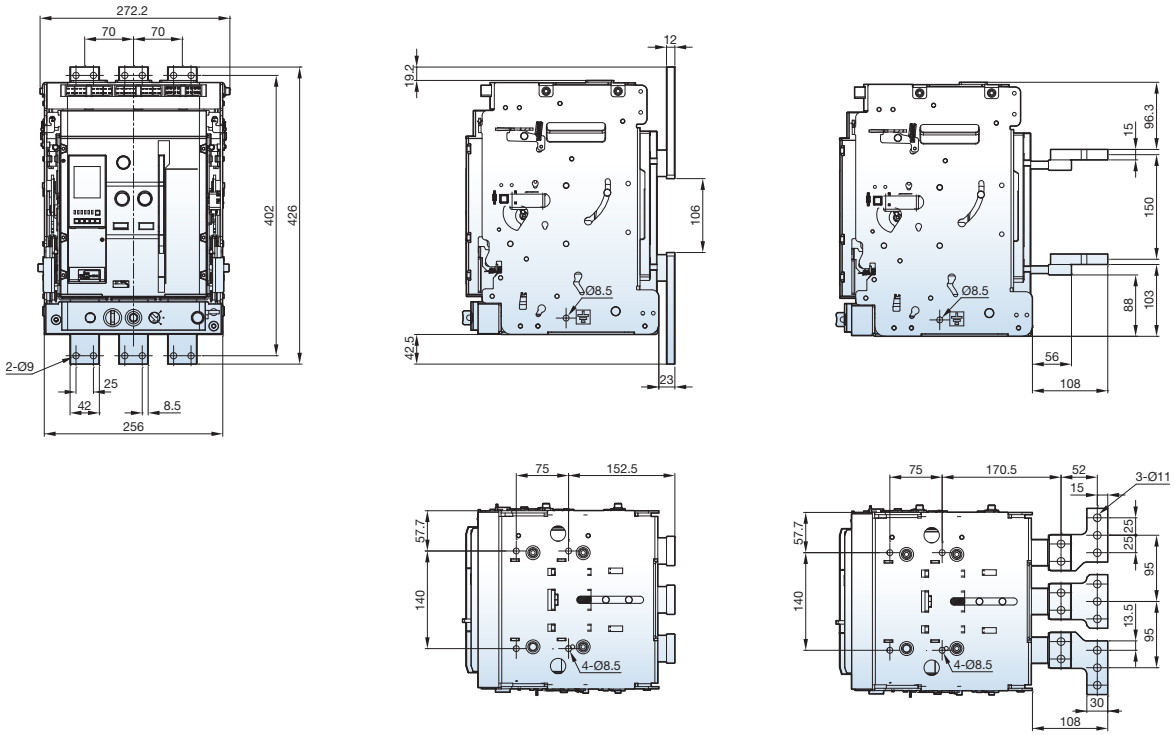

P Type (Plane type)

R Type (Spread type)

• 3P [Draw-out Z: Plane spread type / T: Plane vertical type]

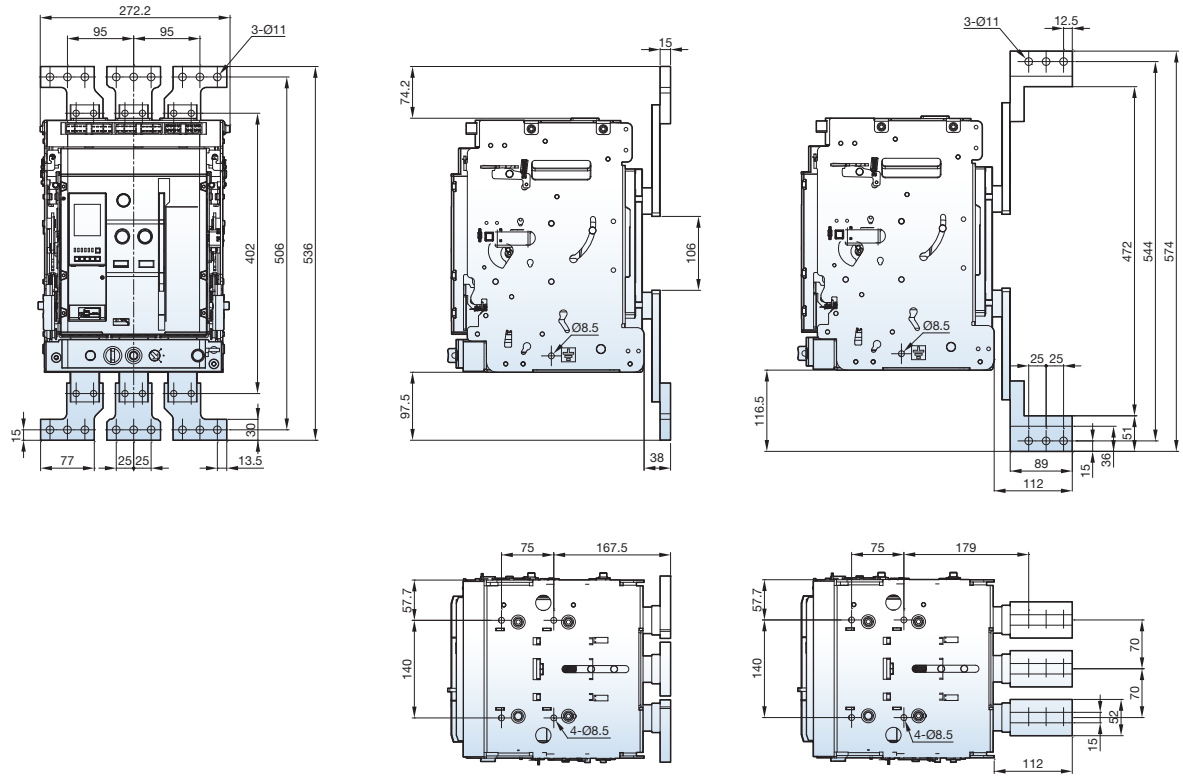


Z Type (Plane spread type)


T Type (Plane vertical type)


Dimensions

• 3P [Draw-out X: Cable lug type]

(Unit : mm)

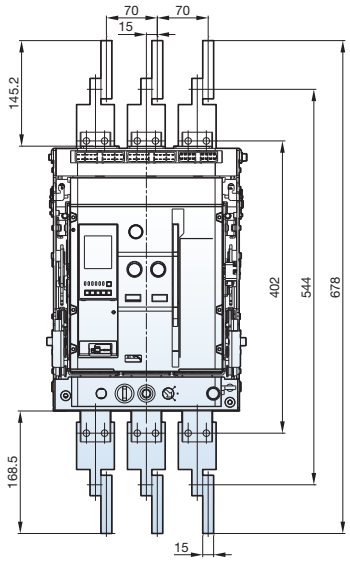

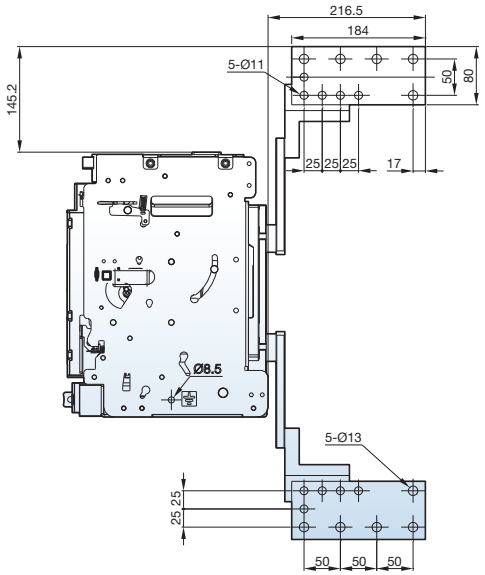


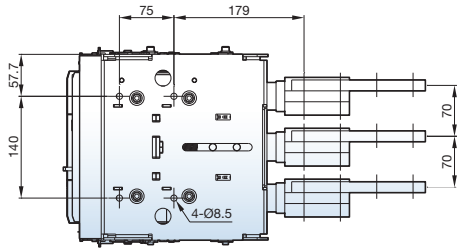

X Type (Cable lug type)

• 4P [Draw-out H: Horizontal type / V: Vertical type]


(Unit : mm)

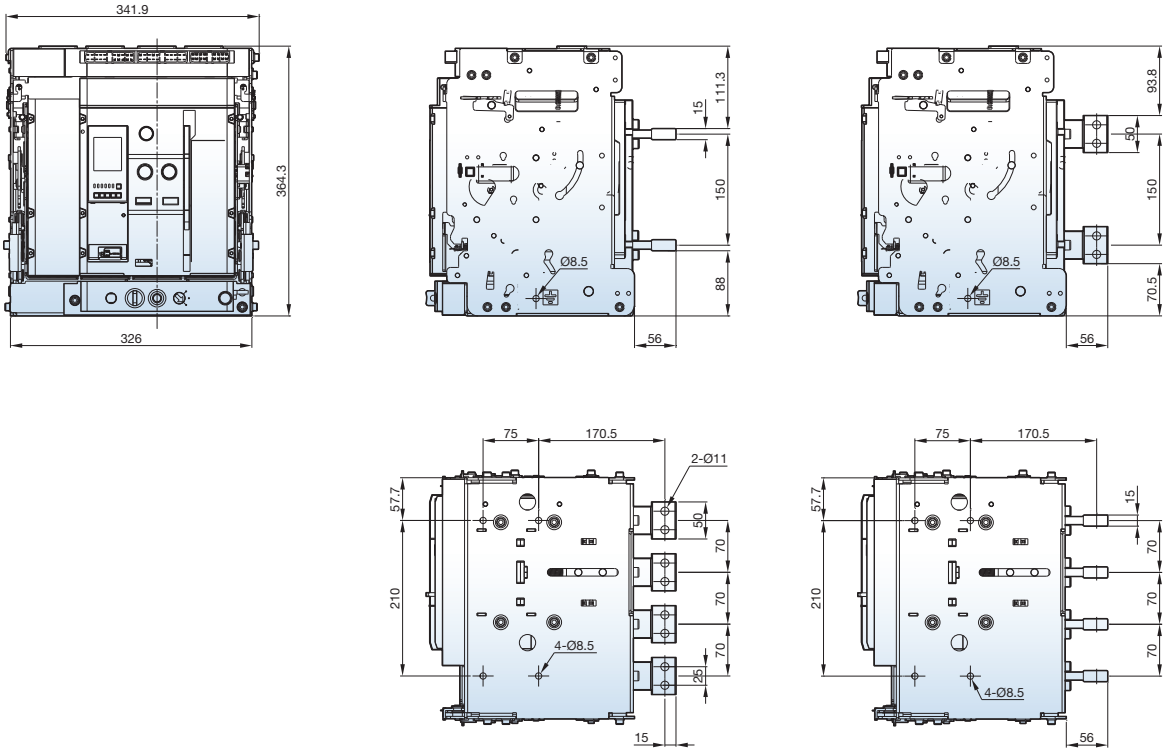

H Type (Horizontal type)

V Type (Vertical type)

• 4P [Draw-out M: Upper-Horizontal type, Lower-Vertical type / N: Upper-Vertical type, Lower-Horizontal type]

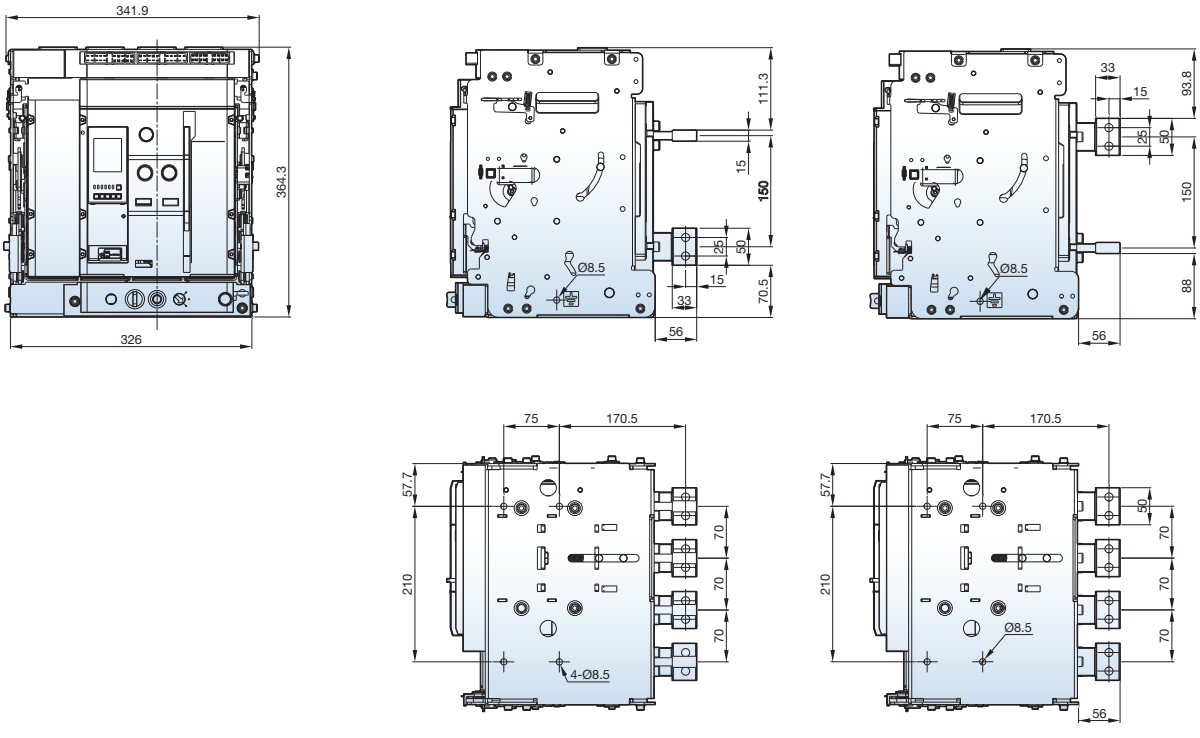


M Type
(Upper-Horizontal type, Lower-Vertical type)


N Type
(Upper-Vertical type, Lower-Horizontal type)


Dimensions

• 4P [Draw-out P: Plane type / R: Spread type]


(Unit : mm)

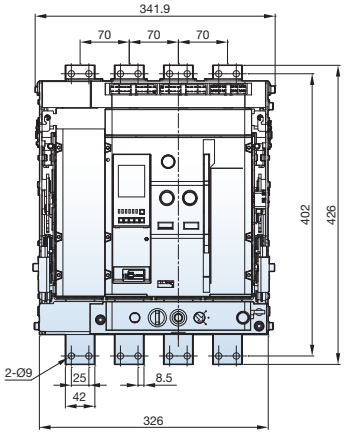


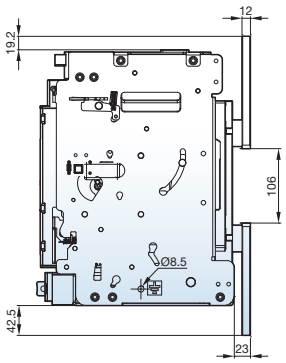

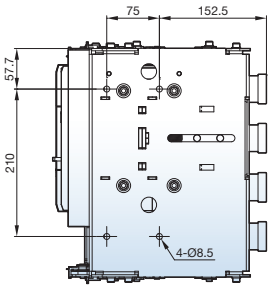


P Type (Plane type)

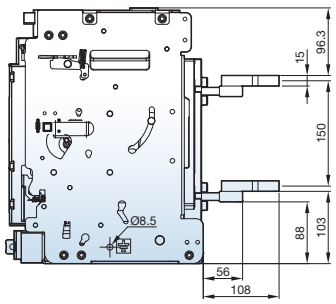


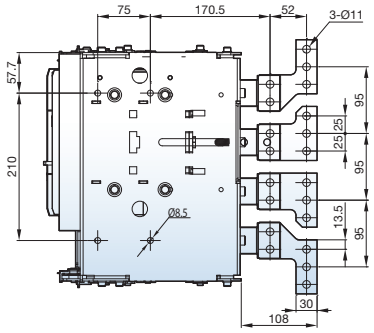



R Type (Spread type)

• 4P [Draw-out Z: Plane spread type / T: Plane vertical type]

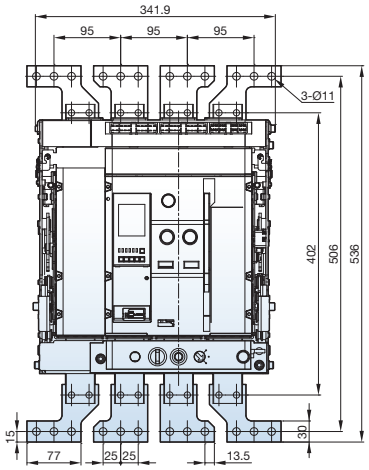


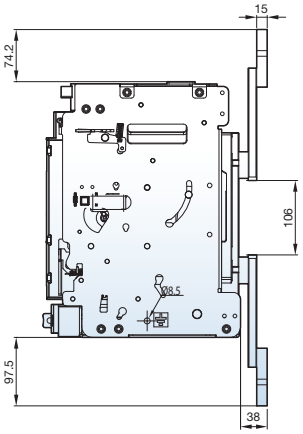

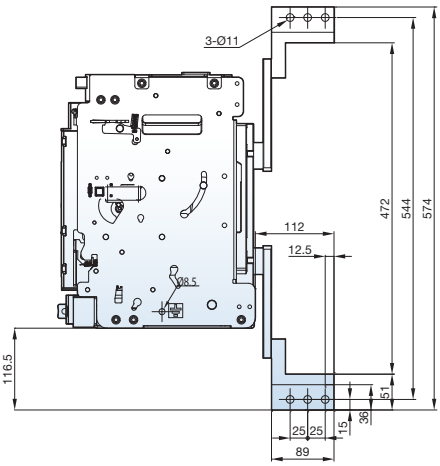

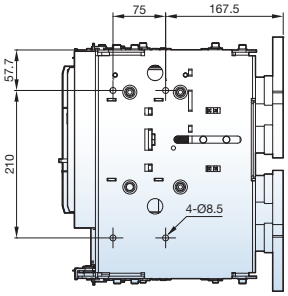


Z Type (Plane spread type)

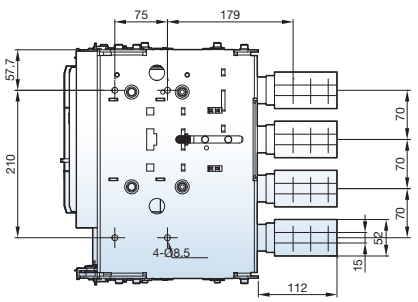

T Type (Plane vertical type)


• 4P [Draw-out X: Cable lug type]

(Unit : mm)

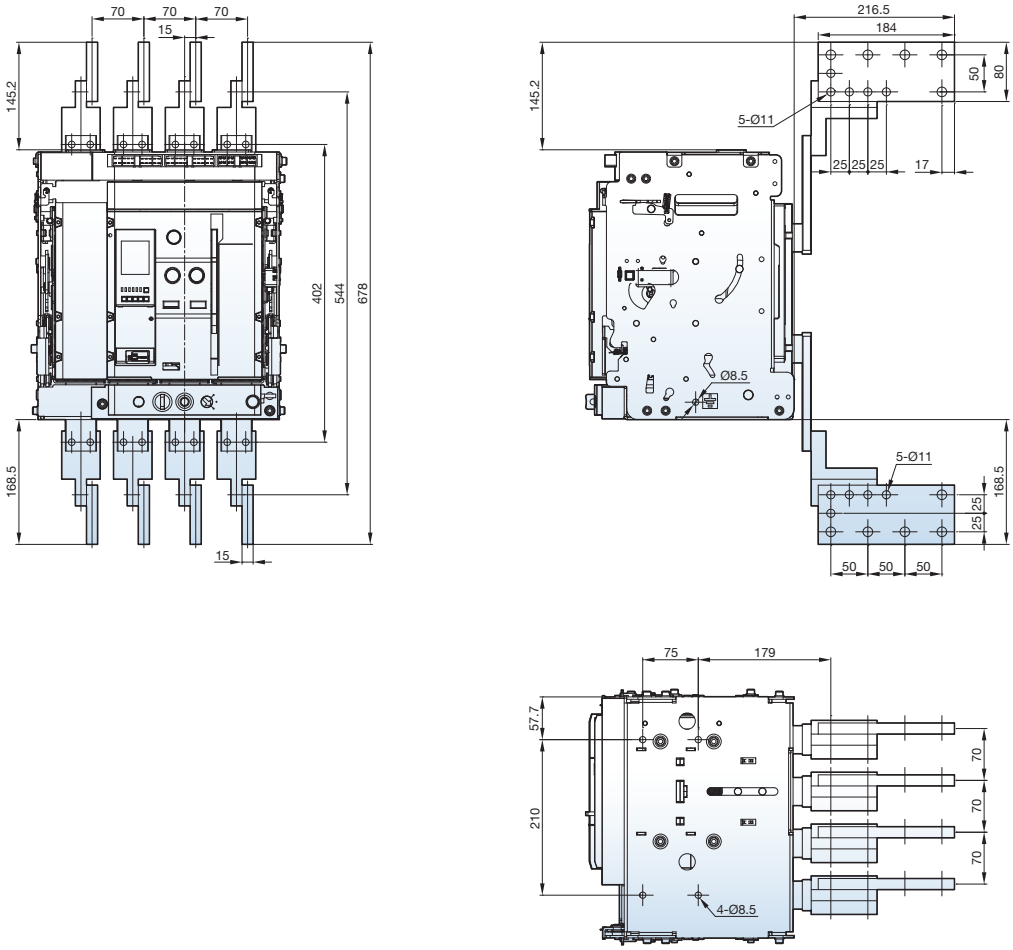

X Type (Cable lug type)

Draw-out Door Frame: DF

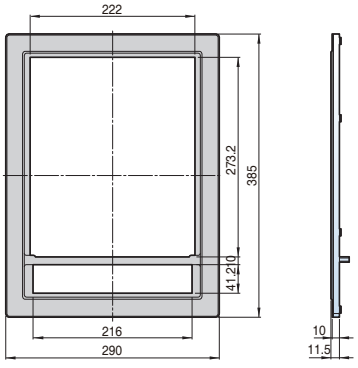

Normal / Special service condition

Normal service conditions

If under ordinary conditions the following normal working conditions are all satisfied, Compact ACB should be used under this condition unless otherwise specified.

1) Ambient temperature: A range of max. +40°C to min. -5°C is recommended. However, the average temperature of 24 hours does not exceed +35°C.
2) Altitude 2,000m or less.
3) Environmental conditions: The air must be clean, and the relative humidity does not exceed 85% at a max. of +40°C and 90% at 20°C. Do not use and store in presence of corrosive or ammonia gas. ($H_2S \leq 0.01$ppm, $SO_2 \leq 0.01$ppm, $NH_3 \leq$ a few ppm)
4) Installation conditions: When installing Compact ACB, refer to catalogue or the installation instructions in the instruction manual.
5) Storage temperature: A range of max. +60°C to min. -20°C is recommended.
6) Replacement: Inspection and Maintenance should be performed periodically which referred to inspection and replacement period in maintenance manual. The recommended product replacement cycle is 10 years from manufacturing date.

Special service conditions

If In the case of special service condition, modified air circuit breakers are available. Please specify when ordering. Service life may be shorter, it depends on service conditions.

1) Special environmental conditions: If it is used at high temperature and/or high humidity, the insulation durability and other electrical or mechanical features may deteriorate. Therefore, the breaker should be specially treated. Moisture fungus treatment with increased corrosion-resistance is recommended. When using products under this condition, please contact LS service team or nearest sales representatives.
2) Special ambient temperature: If the ambient temperature exceeds +40 , reduce the continuous conducting current for a use referring to Table. B.
3) Special altitude: If it is used at the 2,000m or higher the heat radiation rate is reduced and the operating voltage, continuous current capacity and breaking capacity are decreased. Moreover the durability of the insulation is also decreased owing to the atmospheric pressure. Contact us for further detail.







Table A. Temperature derating (Compact ACB)

Type	Drawout													
Connection type	Horizontal or Plane							Vertical						
Ambient temperature	40	45	50	55	60	65	70	40	45	50	55	60	65	70
AN/AH/AW/AR-08	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A
AR-10	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A
AN/AH/AW-16	1600A	1550A	1500A	1450A	1390A	1330A	1280A	1600A	1600A	1600A	1550A	1500A	1450A	1400A

Type	Fixed													
Connection type	Horizontal or Plane							Vertical						
Ambient temperature	40	45	50	55	60	65	70	40	45	50	55	60	65	70
AN/AH/AW/AR-08	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A	800A
AR-10	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A	1000A
AN/AH/AW-16	1600A	1600A	1600A	1550A	1500A	1450A	1400A	1600A	1600A	1600A	1600A	1600A	1550A	1500A

* Ambient temperature is greater than 60℃, consult us. * According to IEC 60947-2

Table B. Temperature derating according to IP degree of panel

Switchgear Compositio			3						
			2						
			1						
Connection Type				Vertical			horizontal		
Busbar Dimensions (mm)				2b. 50×10					
Switchgear			3			1330			1190
		35°C	2		1400			1240	
			1	1500			1310		
			3			1270			1120
	IP41	45°C	2		1320			1180	
			1	1420			1240		
			3			1190			1050
		55°C	2		1240			1090	
			1	1330			1160		
			3			1230			1210
		35°C	2		1310			1270	
			1	1390			1310		
			3			1150			1140
	IP54	45°C	2		1240			1220	
			1	1310			1230		
			3			1080			1080
2000×400×600		55°C	2		1160			1120	
			1	1220			1150		

Altitude and Isolation Voltage


Altitude


Compact ACB is designed for operation at altitudes under 2000m. At altitudes higher than 2000m, change the ratings upon a service condition.

Item \ Altitude [m]	2000	3000	4000	5000
Withstand voltage (V)	3500	3150	2800	2450
Average insulating voltage (V)	1000	900	800	700
Max. using voltage (V)	800	720	640	560
	690	620	540	470
Current compensation constant	1×In	0.98×In	0.96×In	0.94×In

Insulation clearance

When drawing the electric power supply panel, please keep the distance of Insulation clearance between Compact ACB and panel as listed in table.

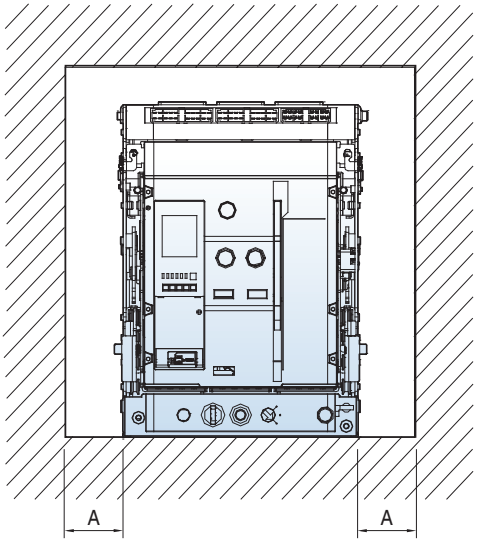

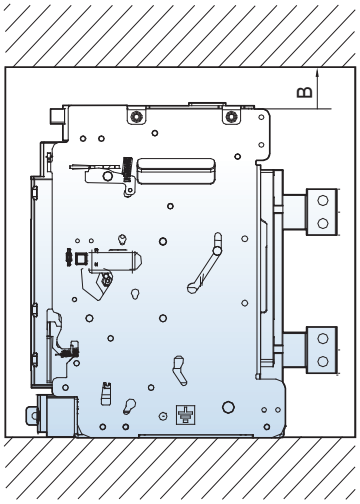


(Unit : mm)

Type	A	B
Fixed	50	150
Fixed (With Arc screen)	5	50
Draw-out	5	50

Minimum clearances distance

For the safety, all the electric charging parts need to be installed over minimum clearances distance.

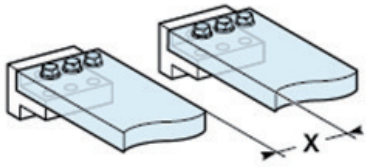


Insulating voltage (Ui)	Minimum clearances distance (X min)
600V	8 mm
1000V	14 mm

Installation recommendation

BUS-BAR Connection


Cables connections

Make sure that no excessive mechanical force put on the rear terminals for cable connection.
Extension terminal is fixed such as B, C and cable is to fixed to the frame such as E

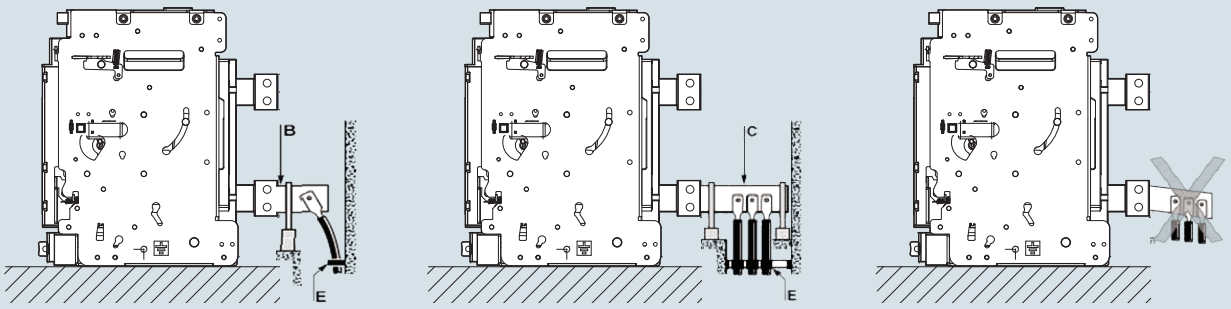

Bus-bar connection

For busbar connection, connect access parts with a provided torque and fix with parallel installing the support not to apply terminal weight to circuit breaker.
In order to prevent the spread safety or secondary accidents, secure maximum safe distance A from the connection point (Compact ACB 690V 50kA 1600A The maximum safety clearance is 250mm) so that it can withstand the electric force generated in the event of a short circuit. (Support strength: Insulator bending load 720kg or more, tensile strength 3000kg or more)

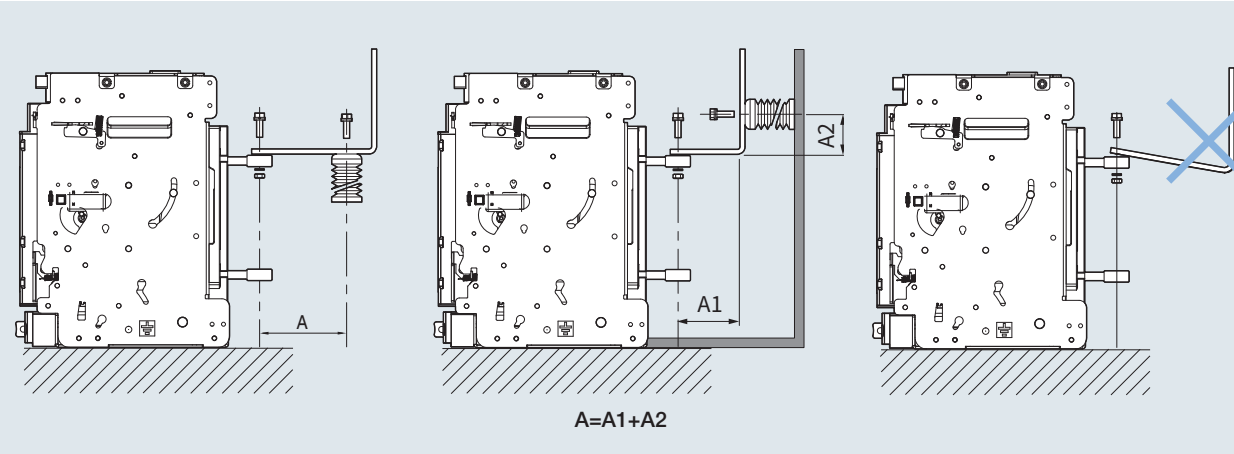

※ You can not get a warranty for damage caused by any modifications.

(Table 1) Maximum safe distance A

Short capacity (kA)	30	50	65	80	100	150
Length A (mm)	350	300	250	150	150	150

Ordering sheet

If rated current or the order you placed is different from the ordering sheet listed below, please fill out another ordering sheet upon your specification.

Receipt	LS ELECTRIC Co., Ltd.	Order Day		Distributor Name	
Project		Contractor			
Delivery place		Delivery date		PNL Maker	

ACB Main body

Type of ACB	● Susol Compact ☐ AN ☐ AH ☐ AR
Frame size	☐ C (400~1600AF)
Ratings	AF
Rated current (Rating Plug)	A
Trip Relay	☐ NO
	☐ YES

Type	Frequency		Control voltage			Comm.		Optional function		
	60Hz	50Hz	NO	AC/DC 110~220V	DC 24~48V	NO	YES	Earth leakage detection	External CT ground fault	Pre-Trip Alarm
Normal	☐ NGO	☐ NG5	●	-	-	●	-	-	-	-
Ammeter	☐ AGO	☐ AG5	●	-	-	●	-	-	-	-
	☐ AG1	☐ AG6	-	●	-	●	-	-	-	-
	☐ AE0	☐ AE5	●	-	-	●	-	-	●	-
	☐ AE1	☐ AE6	-	●	-	●	-	-	●	-
	☐ AE2	☐ AE7	-	-	●	●	-	-	●	-
	☐ AC1	☐ AC6	-	●		-	●	-	-	-
	☐ AC2	☐ AC7	-	-	●	-	●	-	-	-
	☐ AX1	☐ AX6	-	●		-	●	-	●	-
	☐ AX2	☐ AX7	-	-	●	-	●	-	●	-

Type	Frequency		Control voltage			Comm.		Optional function		
	60Hz	50Hz	NO	AC/DC 110~220V	DC 24~48V	NO	YES	Earth leakage detection	External CT ground fault	Pre-Trip Alarm
Power Meter	☐ PC1	☐ PC6	-	●	-	-	●	-	-	-
	☐ PC2	☐ PC7	-	-	●	-	●	-	-	-
	☐ PX1	☐ PX6	-	●	-	-	●	-	●	-
	☐ PX2	☐ PX7	-	-	●	-	●	-	●	-
Supreme Meter	☐ SC1	☐ SC6	-	●	-	-	●	-	-	-
	☐ SC2	☐ SC7	-	-	●	-	●	-	-	-
	☐ SX1	☐ SX6	-	●	-	-	●	-	●	-
	☐ SX2	☐ SX7	-	-	●	-	●	-	●	-

Note) 1. Standard function: Ground fault detection
2. Communication function is not available under no control voltage
3. Power/Supreme Meter is also available for Generator protection

No.of poles	☐ 3-pole			☐ 4-pole			
Installation type	☐ Draw-out type			☐ Fixed type			
Phase arranging order	☐ Standard type (N, R, S, T)			☐ Reverse phase type (R, S, T, N)			
Closing type	☐ Manual closing						
	☐ Electrical closing						
	• Charge method			☐ Standard type (OFF-Charging method)			
				☐ Rapid auto-reclosing type (ON-Charging method)			
	• Motor operating voltage	☐ AC/DC 100V~130V		☐ DC 125V	☐ 24V~30V	☐ DC 48V~60V	
		☐ AC/DC 200V~250V		☐ AC 380V~415V	☐ AC 440V~480V	☐ AC 48V	
Closing voltage	☐ AC/DC 100V~130V	☐ DC 125V	☐ AC/DC 200V~250V	☐ DC 24V~30V	☐ DC 48V~60V	☐ AC 380V~480V	☐ AC 48V
Tripping voltage	☐ AC/DC 100V~130V	☐ DC 125V	☐ AC/DC 200V~250V	☐ DC 24V~30V	☐ DC 48V~60V	☐ AC 380V~480V	☐ AC 48V

ACB Cradle

Cradle type	☐ No Safety Shutter (E class)			☐ Safety Shutter Attachment (F class)		
Installation type	☐ Manual connection			☐ Automatic connection		

Bus-bar connection

Bus-bar type	☐ Horizontal	☐ Vertical	☐ Plane	☐ Upper: Horizontal, Lower: Vertical	☐ Upper: Vertical, Lower: Horizontal	☐ Customer mounting
	☐ Horizontal with Spreaders		☐ Plane with Spreaders		☐ Vertical with Extention	☐ Cable-Lug

ACB Accessory

ACB Main body	Standard	• Aux. contact	☐ Standard type (4c, standard installation)				
		• Key Lock			☐ Single Key (ON-Lock)		
		• Undervoltage trip device (UVT, Instantaneous type)		☐ AC/DC 100V~130V	☐ DC 125V	☐ AC/DC 200V~250V	
				☐ DC 24V~30V	☐ DC 48V~60V	☐ AC 380V~480V	☐ AC 48V
		• Counter			☐ Non-attachment type	☐ Attachment type	
		• Miss insertion preventive device (MIP)			☐ Non-attachment type		
		• Double trip device (Same with Tripping voltage)			☐ Non-attachment type	☐ Attachment type	
		• Ready-to-close switch			☐ Non-attachment type	☐ Attachment type	
		• Trip Alarm switch, Manual Reset Button			☐ Non-attachment type	☐ Attachment type	
		• Key Interlock (K2, ON–Lock)				☐ Attachment type	
		• ON/OFF Button Lock				☐ Attachment type	
		• Micro Load type (4 max.)			☐ Non-attachment type	qty.	
	Cradle mounting (Non-attachment type)	• Cell switch (CL)	☐ 4c	☐ 8c			
		☐ Door Interlock with Wire type			☐ Door Interlock with Catch type		
		• Mechanical operation contact (MOC)			☐ Standard type (10a10b)		
		• Mechanical Interlock (MI)			☐ Wire type (2 terminals)	☐ Wire type (3 terminals)	
		☐ Miss insertion preventive device (MIP)					
		☐ Racking Interlock	☐ Insulation barrier				
	External mounting	• UVT time delay controller		☐ AC/DC 100V~130V	☐ DC 125V	☐ AC/DC 200V~250V	
				☐ DC 48V~60V	☐ AC 380V~480V		☐ AC 48V
		☐ Door Frame (DF)	☐ Condenser trip device (CTD)		☐ OCR Tester		
		☐ Dust Cover	☐ Profibus-DP Comm.		☐ Remote closing & trip		

Headquarter
127 LS-ro (Hogye-dong) Dongan-gu, Anyang-si, Gyeonggi-Do, 14119, Korea

Seoul Office
LS Yongsan Tower, 92, Hangang-daero, Yongsan-gu, Seoul, 04386, Korea
TEL: 82-2-2034-4916, 4684, 4429

China

LS ELECTRIC (Dalian) Co., Ltd.
+86-411-8730-5872
china.dalian@lselectric.com.cn

LS ELECTRIC (Wuxi) Co., Ltd.
+86-510-8534-6666
china.wuxi@lselectric.com.cn

LS ELECTRIC (Lishui) Co., Ltd.
+86-133-6207-7980
china.lishui@lselectric.com.cn

Shanghai Office
+86-21-5237-9977
china@lselectric.com.cn

Beijing Office
+86-10-5095-1631
china@lselectric.com.cn

Guangzhou Office
+86-20-3818-2883
china@lselectric.com.cn

Qingdao Office
+86-532-8501-2065
china@lselectric.com.cn

Chengdu Office
+86-28-8670-3201
china@lselectric.com.cn

Nanjing Office
+86-25-8467-0005
china@lselectric.com.cn

India

India Office
+91-80-6142-9108
Info_india@ls-electric.com

Indonesia

PT. LS ELECTRIC INDONESIA
+62-21-2933-7614
indonesia@ls-electric.com

PT SYMPHOS ELECTRIC
+62-81-1900-1474
marketing@symphos-weltraf.com

Italy

Italy office
+39-030-8081-833
italia@ls-electric.com

Japan

LS ELECTRIC Japan Co., Ltd.
+81-3-6268-8241
japan@ls-electric.com

Tokyo Office
+81-3-6268-8241
tokyo@ls-electric.com

Netherlands

LS ELECTRIC Europe B.V.
+31-20-654-1424
europartner@ls-electric.com

Russia

Moscow Office
+7-499-682-6130
info@lselectric-ru.com

Singapore

Singapore Office
+65-6958-8162
singapore@ls-electric.com

Spain

LS ELECTRIC IBERIA S.L.U.
+34-910-28-02-74
iberia@ls-electric.com

Thailand

Bangkok Office
+66-2-128-0295
thailand@ls-electric.com

Türkiye

LS ELECTRIC Türkiye Co., Ltd.
+90-212-806-1252
turkiye@ls-electric.com

U.A.E

LS ELECTRIC Middle East FZE (Dubai)
+971-4-886-5360
middleeast@ls-electric.com

USA

LS ELECTRIC America Inc.
+1-800-891-2941
sales.us@lselectricamerica.com

LS ENERGY SOLUTIONS LLC
+1-980-221-0654
cmfeldman@ls-es.com

MCM Engineering II
+1-435-865-0125
sales.us@lselectricamerica.com

America Western Office
+1-949-333-3140
america@ls-electric.com

America Bastrop Campus
+1-224-352-2265
sales.us@lselectricamerica.com

Vietnam

LS ELECTRIC Vietnam Co., Ltd.
+84-222-2221-110
vietnam@ls-electric.com

Hanoi Sales Office
+84-24-6275-8054
vietnam@ls-electric.com

Ho Chi Minh Sales Office
+84-3823-7890
vietnam@ls-electric.com

DIGITAL SUPPORT HUB

LSE LENS
Scan the QR code to instantly access product materials

Product Finder
Quickly discover the best-fit product for your needs

Product Match Guide
A quick and easy tool for product comparison

Download Center
Instantly access datasheets, manuals, and CAD files

Tech Hub-Youtube
Watch trusted tutorials and product guides from real experts

Specifications in this catalog are subject to change without notice due to continuous product development and improvement
ⓒ 2023. 07 LS ELECTRIC Co., Ltd. All rights reserved. / English (01) 2023. 07 Staffcom

www.ls-electric.com